

Model documentation

Commerce Commission

Ref: 2014-20-DB-ML - BU models

Public Version

TERA Consultants
39, rue d'Aboukir
75002 PARIS
Tél. + 33 (0) 1 55 04 87 10
Fax. +33 (0) 1 53 40 85 15
www.teraconsultants.fr

S.A.S. au capital de 200 000 € RCS Paris B 394 948 731

June 2015

Model Documentation – Public Version

Summary

0	Introducti	on	6
	0.1 Back	kground	6
	0.2 Stru	cture of this document	7
1	Model im	plementation	8
	1.1 Gen	eral architecture	8
	1.2 Inter	actions between the different cost models	8
2	Architect	ure of the cost models	10
	•	x model	
	2.2 Acce	ess network cost model	10
	2.2.1	Microsoft Access – Network dimensioning	11
	2.2.2	Microsoft Excel – Network costing	13
		e network cost model	
3	•	del	
		erence files	
	•	ts	20
	3.2.1	Parameters	
	3.2.2	Buildings data	
	3.2.3	Network expenses data	
	3.2.4	Non-network expenses data	
	3.2.5	Other types of data	
		ulations	
	3.3.1	Maintenance allocation	
	3.3.1.1		
	3.3.1.2	3 3	
	3.3.1.3	· ·	
	3.3.1.4	-,	
	3.3.1.5		
	3.3.2	Property maintenance allocation	
		Labour costs allocation	
	3.3.3.1		
	3.3.3.2		
	3.3.4	Rent & Taxes allocation	
	3.3.4.1	'	
	3.3.4.2		
	3.3.5	Energy allocation	
	3.3.6	IT allocation	
	3.3.7	Other costs	
	3.3.7.1	•	
	3.3.7.2	•	
	3.3.8	LFI analysis	
	3.3.9	FAR (Fixed Asset Register) analysis	35

Model Documentation – Public Version

3.3.9.	.1 Indirect capex – inputs for the Core model	36
3.3.9.	.2 Costs relevant for co-location costs	37
3.3.10	Building analysis	37
3.3.10	0.1 Approach	37
3.3.10	0.2 Implementation	37
3.3.11	Alloc key	38
3.3.11	1.1 Maintenance allocation key	39
3.3.11	1.2 Property maintenance costs	42
3.3.11	1.3 Taxes	42
3.3.11	1.4 Labour costs related to core network technicians	42
3.3.12	Price trends use	42
3.3.13	Costs summary	42
3.3.13	3.1 Adjusting top-down figures to reflect relevant costs for	a replacement
cost n	modelling	43
3.3.13	3.2 Network opex	43
3.3.13	3.3 Non-network opex (other costs are treated as well in the	is section)45
3.4 Out	itputs	47
3.4.1	Results	47
3.4.1.	.1 Opex per line	47
3.4.1.	.2 Network planning costs	48
3.4.1.	.3 Co-location costs	48
3.4.2	EXPORT	49
Dimensi	ioning the access network	50
4.1 Ref	ference files	50
4.2 Inp	outs	51
4.2.1	Geospatial data	52
4.2.1.	.1 Source sections	52
4.2.1.	.2 Source buildings	53
4.2.1.	.3 Source MDF to street cabinets paths	54
4.2.1.	.4 Source MDF to buildings paths	54
4.2.1.	.5 Source street cabinets to buildings paths	54
4.2.1.	.6 Source MDF to street cabinets detailed paths	55
4.2.1.	.7 Source MDF to buildings detailed paths	55
4.2.1.	.8 Source street cabinets to buildings detailed paths	55
4.2.1.	.9 Source core	56
4.2.1.	.10 Source FWA	56
4.2.2	Input parameters	56
4.3 Cal	lculations	61
4.3.1	Schematic overview of the local access network	61
4.3.2	Pre-processing of the geospatial data	62
4.3.2.	.1 TSO-derived boundary	62
4.3.2.	.2 FWA coverage	63
4.3.2.	.3 Post 2001 subdivisions	63
4.3.3	Dimensioning the local demand (at the section level)	64

4

Model Documentation – Public Version

4.3.3.1	Local demand at the section level for the copper distribution netw	
4.3.3.2		
4.3.3.3	·	
		66
4.3.3.4	Core and FWA network cables on the section	67
4.3.4	Dimensioning at the building level	68
4.3.4.1	Overview	68
4.3.4.2	Major and minor sides	70
4.3.4.3	Distribution points (CCT and FAT)	71
4.3.4.4		
4.3.4.5	Ducts and subducts	74
4.3.4.6	Trench	74
4.3.4.7	Poles	75
4.3.5	Dimensioning at the section level	76
4.3.5.1	Overview	76
4.3.5.2	Selection of cable	81
4.3.5.3	Length of cable	82
4.3.5.4	Number of joints	83
4.3.5.5	Trenches and ducts	85
4.3.5.6	Subducts	88
4.3.5.7	Manholes	88
4.3.5.8	Poles	89
4.4 Outp	outs	90
4.4.1	Output architecture	90
4.4.2	Trenches	96
4.4.3	Overhead assumptions	98
4.4.4	Underground assumptions	99
Costing tl	he access network	.100
5.1 Refe	erence files	.100
5.2 Inpu	ts	.100
5.2.1	Import from the ACCESS	.101
5.2.2	Assets	.101
5.2.3	MDF data	
5.2.3.1	Overview	.101
5.2.3.2	· ·	
5.2.4	Dashboard	
5.3 Calc	ulations	
5.3.1	Assets	
5.3.2	Inventory	
5.3.2.1		
5.3.2.2	•	
5.3.2.3		
5.3.2.4	5 1	
5.3.3	Investments	.107

5

Model Documentation – Public Version

	5.3.4	Annual costs	.108
	5.4 Outp	outs	.109
	5.4.1	Export to the UBA model	.109
	5.4.2	Results	.110
	5.4.3	Dashboard	.110
6	Core net	work cost model	.111
	6.1 Refe	erence files	.111
	6.2 Inpu	ts	.111
	6.2.1	Dashboard	.112
	6.2.2	Import from the ACCESS model	.112
	6.2.3	Import from the OPEX model	.112
	6.2.4	Parameters	
	6.2.5	Geographical data	.113
	6.2.6	Assets	.113
	6.3 Netv	vork dimensioning	
	6.3.1	Network dimensioning	.113
	6.3.1.1		
	6.3.1.2	9-	
	6.3.2	Inventory	.117
	6.4 Fina	ncial calculation	
	6.4.1	Network costing	.118
	6.4.2	Allocation keys	
	6.4.3	OPEX and ACCESS	
	6.4.3.1		
	6.4.3.2		
	6.4.4	UBA	
		outs	
	6.5.1	Output	
	6.5.1.1	The UBA service	.124
	6.5.1.2		
	6.5.2	Pricing	
	6.5.3	Saved outputs	
7		se the models	
	•	x model	
		ess network cost model	
8			
		ex: focus on LFI	
	8.1.1	Context	
	8.1.2	Proposed approach	
	8.1.3	Number of faults assessment	
	8.1.3.1	' '	
	8.1.3.2	'	
		ex: Opex for a FTTH network	
	8.3 Ann	ex: Glossary of the network access	.141

0 Introduction

0.1 Background

Unbundled Copper Local Loop (UCLL) and Unbundled Bitstream Access (UBA) are services that allow alternative operators' access to the local loop infrastructure of Chorus.

The Telecommunications Act 2001 (the Act) requires the Commerce Commission (the Commission) to determine a price for the UCLL and UBA services. In the first instance the Commission is required to benchmark prices against comparable countries under the 'initial pricing principle' (IPP). If an access seeker or Chorus Limited is not satisfied with the price (either the UCLL or UBA) determined under the IPP, the Act provides that the party can ask the Commission to calculate a price for that service in accordance with the 'final pricing principle' (FPP), which is Total Service Long Run Incremental Cost (TSLRIC) for UCLL and UBA.

The Commission reviewed the benchmarked UCLL price on 3 December 2012 and determined the UBA benchmarked price on 5 November 2013. However, the Commission has received FPP requests both for UCLL and UBA: the UCLL FPP request was received in February 2013, the UBA FPP request was received in January 2014. Therefore, the Commission needs to determine a price for the UCLL and UBA services in accordance with the FPP.

TERA Consultants (TERA) has been mandated by the Commission to calculate a price for the UCLL and UBA services in accordance with the FPP which is TSLRIC.

A consultation paper on conceptual issues of UCLL cost modelling was issued by the Commission in December 2013. A further consultation paper focusing on UBA¹ was also issued in early February 2014. Responses from interested parties were received in February 2014.

The Commission issued a paper which set out its preliminary views on its proposed regulatory framework for the UCLL and UBA TSLRIC cost modelling exercises and its preliminary views on a number of fundamental assumptions for the development of a TSLRIC cost model for the UCLL and UBA services². Having reviewed the Commission paper, TERA has provided its views on some key methodological choices related to the calculation of TSLRIC in the document "Modern Equivalent Assets and relevant scenarios".

¹ Commerce Commission, Determining a TSLRIC price for Chorus' unbundled bitstream access service under the final pricing principle, (7 February 2014)

² Commerce Commission, Consultation paper outlining our proposed view on regulatory framework and modelling approach for UBA and UCLL services, (9 July 2014)

Model Documentation - Public Version

The Commission sought the view of interested parties on all topics and has reviewed the submissions and the cross-submissions sent by all the interested parties.

Based on these consultations and on the papers previously published, the Commission has made a number of decisions regarding the modelling and the pricing of the different regulated services. These decisions define the criteria for developing the access network cost model, the core network cost model. They are listed in the Model Reference Paper.

Based on the Model Reference Paper, the document describes how the criteria have been followed to derive the price of the different regulated services.

This paper documents the details of the modelling.

A draft version of these documents was published in December 2014. The Commission sought the view of interested parties on these documents and models including the present document and has reviewed with the submissions and the cross-submissions sent by all the interested parties. This draft version has been updated to produce the current version.

A draft version of these documents was published in December 2014. The Commission sought the view of interested parties on these documents and models including the present document and has reviewed the submissions and the cross-submissions sent by all the interested parties. This draft version has been updated to produce the current version.

0.2 Structure of this document

This Model Documentation details the methodology and algorithms used when building the cost models for UCLL and UBA. The document has the following structure:

- Section 1 Model implementation (see §1): gives a high level view of how the different parts of the model interact together;
- Section 2 Architecture of the cost models (see §2): details the architecture of each file part of the access network cost model, the core network cost model and the opex model;
- Section 3 Opex model (see §3): details the implementation of the Opex model;
- Section 4 Dimensioning the access network (see §4): describes how the dimensioning of the access network is carried out;
- Section 5 Costing the access network (see §5): details how costs of the access network are calculated;
- Section 6 Core network cost model (see §6): describes the implementation of the core network cost model; and
- **Section 7** How to use the models (see §7): explains the procedures to follow in order to derive the prices of the different regulated services.

1 Model implementation

This section describes the modelling approach of the three cost models:

- The Access network cost model which is made of two following files:
 - "2014-20-DB-ML-ComCom Access network.accdb": in this file, the access network is dimensioned;
 - "2014-20-DB-ML-ComCom Access network cost model.xlsb" in this file, the access network is cost;
- The Opex model is made of the file named "2014-20-DB-ML-ComCom-OPEX model.xlsm"
- The Core model is made of the file named "2014-20-DB-ML-ComCom UBA model.xlsb".

1.1 General architecture

Three models have been developed to derive the price of the different regulated services:


- The Access model that derives the inventory and the cost of all passive assets;
- The Opex model that derives the opex, the indirect capex, the common costs and the transaction charges;
- The Core model that derives the inventory and the cost of all active assets. This
 model also allocates the common costs to the different services and therefore
 derives the prices of all the regulated services.

1.2 Interactions between the different cost models

The three models interact on a one-way basis. The Access model is an independent model. The Opex model is also an independent model. A very limited number of allocation keys used in this model are taken from the Core model. However, these are "frozen" and are not supposed to change (e.g. when a sensitivity analysis is performed). The Core model relies on the results provided by the opex and the Access models as shown in the figure below:

Model Documentation - Public Version

Figure 1 - Interaction between the different cost models

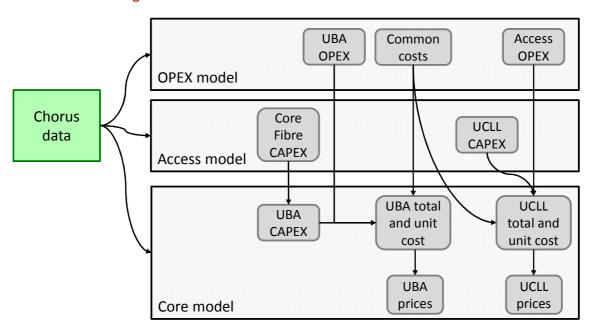

Source: TERA Consultants

The results of the modelling are all located in the Core model.

Model Documentation – Public Version

2 Architecture of the cost models

This section aims at describing the architecture of each cost model

2.1 Opex model

The Opex Excel model ("2014-20-DB-ML-ComCom-OPEX model") assesses the amount of opex per line for UCLL and UBA services per MDF. The architecture of the model is described by the following figure:

ANALYSIS & ALLOCATIONS Maintenance IT Staff Other LFI Analysis **Property INPUTS Project OPEX** Staff **CALCULATIONS** Rates & Rents Ancillary **EXPORT To Core** LEL **Buildings** Results FAR Floor space

Figure 2 – Architecture of the Opex model (simplified)

Source: TERA Consultants

The figure above provides the logical calculation flow for the spreadsheets of the model:

- The green spreadsheets are input spreadsheets;
- The blue spreadsheets are analysis and allocation spreadsheets;
- The red spreadsheets are calculations spreadsheets;
- The dark spreadsheet is the output for the core network cost model.

2.2 Access network cost model

The Access model is made of two main files:

- The Microsoft Access model, that performs the dimensioning of the access network, i.e. that derives the inventory of the access network;
- The Microsoft Excel model, that performs the costing of the local access network, given the output of the Microsoft Access model;

And two source files:

Accounts

Model Documentation - Public Version

- The "Inputs' Microsoft Excel file that gathers the inputs that have been used to feed the model (parameters, unit costs); and
- A dedicated 'Inputs for trenches' Microsoft Excel file that gathers the inputs specific to the trenches costs, and their calculations.

The Microsoft Access model provides four + one outputs to the Excel model:

- Asset inventory for the copper network when overhead;
- Asset inventory for the copper network when underground;
- Asset inventory for the fibre network when overhead;
- Asset inventory for the fibre network when underground;
- Number of FWA lines and total lines per MDF.

Then, the Microsoft Excel model combines those four inventories, implements macro parameters onto the network (e.g. share of overhead) and unit costs to all the assets, and then provides the cost of the local access network (annualised/capex) as an output.

The Access and Excel models also provide costs for the core network model regarding the assets that share paths with the local access network (e.g. trenches, fibre cables).

2.2.1 Microsoft Access – Network dimensioning

The Microsoft Access model uses the dimensioning rules from the data requests and geospatial data as inputs to dimension all assets at each building and at each section (a section is the road portion located between two consecutive intersections), regardless of whether the network is fibre or copper, underground or overhead.

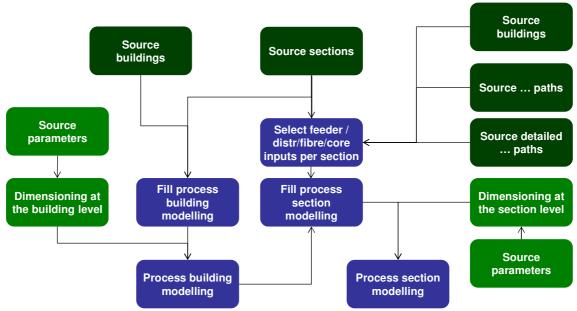


Figure 3 - Access model architecture 1/2

Source: TERA Consultants

For each section/building, features of the section/buildings, such as the number of lines going through the section, are computed with SQL queries (blue boxes) from the geospatial data (dark green boxes).

Model Documentation – Public Version

First, the outputs at the building level are computed through a VBA routine ("Dimensioning at the building level") listing input parameters and written into "Process building modelling". Some of these outputs are recast into section features.

Then, the outputs at the section level are computed through another VBA routine ("Dimensioning at the section level") and written in "Process section modelling".

Finally, the outputs at the building and section levels are aggregated at the MDF level in four scenarios (cf. §5.4):

- Copper overhead network,
- · Copper underground network,
- Fibre overhead network,
- Fibre underground network.

For technical reasons, the aggregation referred above is made within five steps:

- The inventory of trenches by size is computed through the query "FILL RESULTS MODELLING" from the tables "PROCESS BUILDING MODELLING" and "PROCESS SECTION MODELLING" and written in first place in "RESULTS ... MODELLING";
- 2. The inventory of assets related to sections is aggregated from the "PROCESS SECTION MODELLING" table through the query "SELECT RESULTS SECTION³" and written in an interim table;
- 3. The inventory of assets related to buildings is aggregated from the "PROCESS BUILDING MODELLING" table through the query "SELECT RESULTS BUILDING" and written in an interim table;
- 4. The inventory of other assets related to MDF or core network is aggregated through the query "SELECT OTHER RESULTS" from the tables "PROCESS SECTION MODELLING", "SOURCE_CORE", "SELECT FEEDER INPUTS PER SECTION" and "SELECT STREET CABINETS PER MDF", shared among the four scenarios, and written in an interim table;
- 5. The output table "RESULTS MODELLING" is then updated with the values written in the three interim tables aforementioned.


-

³ stand for the scenario, e.g. CU OH – for copper overhead –, or FB UG – for fibre underground.

Model Documentation - Public Version

Figure 4 - Architecture of the Access model (2/2)

Illustration for the copper overhead⁴ scenario

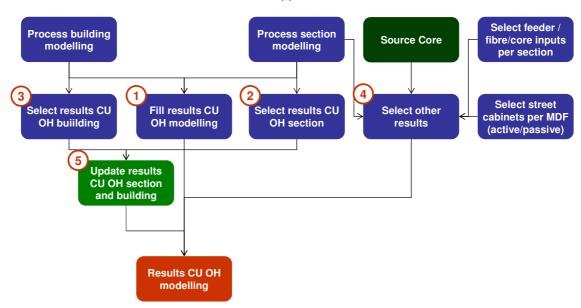

Source: TERA Consultants

The four result tables ("RESULTS CU OH MODELLING", "RESULTS CU UG MODELLING", "RESULTS FB OH MODELLING" and "RESULTS FB UG MODELLING") are then exported to the Excel access cost model to proceed to the costing.

The results of the query "STATS FTTH AND FWA LINES PER MDF" are also exported to the Excel access cost model.

2.2.2 Microsoft Excel – Network costing

The model is made of three Excel files:

- 'Access network cost model': the Excel model that proceeds to the costing;
- 'Inputs' where the unit costs are sourced; and
- 'Inputs for trenches' where the unit costs for trenches are sourced.

The Excel model takes the Access output inventories (four results tables described above) and the unit costs as an input and returns:

- Export to the core model;
- Aggregate costs of the copper network and fibre network;
- Detailed costs of the copper network and fibre network.

Costs are provided as capex and as annualised costs, MDF by MDF, national, urban and rural.

The "Access network cost model" Excel is made of nine spreadsheets:

⁴ The Access model produces four outputs inventories for the four cases: CU OH, CU UG, FB OH and FB UG. The architecture and data flows of each output production are identical.

Model Documentation – Public Version

- Dashboard: controlling the key parameters and monitoring the main results;
- Results: detailed results of asset costs per network level;
- Import from the Access: inventories from the Access model;
- Export to the core model: export 2015-2019 investment and yearly costs for each network level to the core model;
- Assets: lists all assets used, their lifetime and costs;
- MDF data: MDF-specific parameters, e.g. regarding the share of overhead;
- Inventory: inventory of all assets used in the fibre and copper networks, after applying the overhead/underground mix;
- Investment: corresponding to the inventory, after applying cost reduction due to shared infrastructures;
- Annual costs: annualised costs of the investment, i.e. depreciated investment.

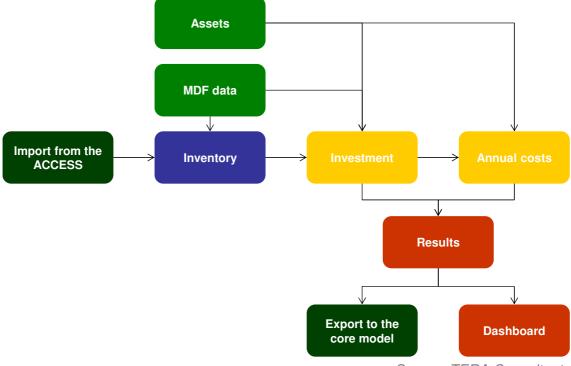


Figure 5 - Architecture of the Access network cost model

Source: TERA Consultants

2.3 Core network cost model


The model is made of two files:

- The Core model; and
- The 'UBA input' file that gathers most of source documents provided by Chorus that has been used to feed the model.

The architecture of the core network cost model is described by the following figure:

Model Documentation – Public Version

Figure 6 – Architecture of the core network cost model

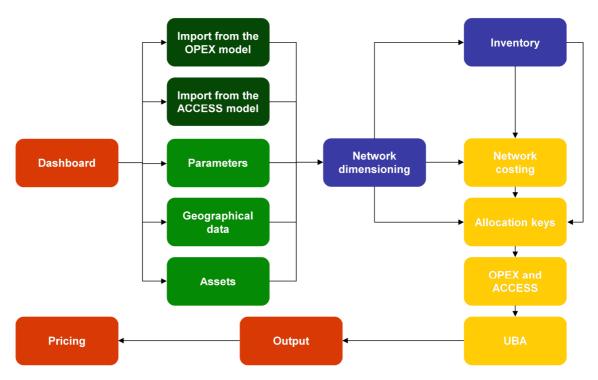

Source: TERA Consultants

The figure above provides the logical calculation flow for the 14 spreadsheets of the model:

- The green spreadsheets are input spreadsheets, the darker ones take the input from the other models (see section 6.2);
- The blue spreadsheets are dimensioning spreadsheets (see section 6.3);
- The yellow spreadsheets are financial spreadsheets (see section 6.3);
- The red spreadsheets are the most important spreadsheets: the Dashboard, the Outputs and the Pricing (see section 6.5).

The following spreadsheets are involved:

- Dashboard: allows the user to specify the financial and volumes parameters;
- Parameters: allows the user to specify the network parameters;
- Import from the ACCESS model: data imported from the access model;
- Import from the Opex model: data imported from the Opex model;
- Geographical data: provides the topology of the network, and the distribution of customers;
- Assets: provides the information related to the dimensioned assets in the network;
- Network dimensioning: dimensions the network equipment;
- Inventory: provides an overview of the assets in the network and some space, power and cooling information;
- Network costing: calculates the cost of the network;
- Allocation keys: provides allocation keys used to allocate the different costs;

Model Documentation - Public Version

- OPEX and ACCESS: allocates specific costs among different services;
- UBA: allocates the relevant costs to the UBA service;
- Outputs: Calculates values used for the final pricing;
- Pricing: provides the results of the model.

Model Documentation – Public Version

3 Opex model

This section documents the Opex model.

The Opex model contains the allocation of Chorus' expenses related to their regulated and unregulated activities on the UCLL and UBA services, adjusted for efficiencies.

Data to develop a bottom-up model for operating costs is not always available. A limited number of opex cost categories can generally be assessed with a true bottom-up model. This includes power costs (the required MWh is assessed based on the demand of all network assets and multiplied by the MWh unit price) or space rental costs (the required square meters are assessed based on the demand of all network assets and multiplied by the square meter unit price). However, the majority of opex are either supplier costs or staff costs. For these costs, the best practice is generally to use top-down data as a starting point. Hence, a mixture of bottom-up approach and top-down approach with evolution over the time is carried out.

In addition, it must be emphasised that a bottom-up model assesses the cost of a 'new' network (with potentially high capex and low opex) whereas top-down costs reflect the costs of an older network (with potentially lower capex and higher opex).

The opex modelling is mainly based on Chorus' 2014 financial accounts except IT costs. Expenses related to network expenses have been distinguished from expenses related to "non-network" expenses.

Chorus provided separately network opex and non-network opex files. However, for some costs, this categorization has been reviewed in order to take into account all costs.


As a consequence, the following steps are followed in the Opex model (see the figure below):

- Identify the relevant network opex for the network cost models;
- Allocate these costs between the different services, regulated and unregulated, by splitting those operating expenses to the different equipment;
- Adjust top-down costs to reflect relevant costs for a bottom-up (BU) modelling;
- Identify the relevant non-network opex for the BU model and allocate those costs to the different relevant services;
- Calculate specific costs (indirect capex) that are inputs for the core network cost model.

Bitstream Access services

Model Documentation - Public Version

Figure 7 – Model opex approach

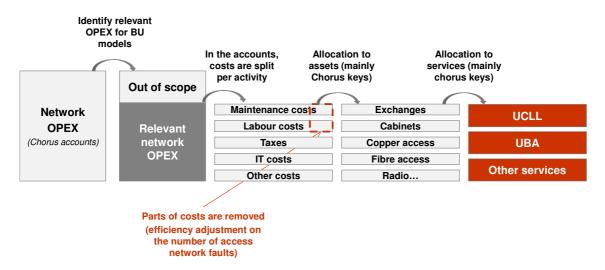

Source: TERA Consultants

Once costs are allocated to equipment, they are then allocated to the different regulated services using a routing matrix (see Table 18).

This section is made of three main parts:

- presentation of the reference files;
- presentation of the inputs spreadsheets;
- presentation of the calculation spreadsheets;
- presentation of outputs spreadsheets.

It is to be noted that FWA OPEX are based on data provided by Vodafone and are not based on Chorus inputs (cf. section 6.4.3.2).

3.1 Reference files

The model ("2014-20-DB-ML-ComCom-OPEX model") is comprises one Microsoft Excel file.

All inputs provided by Chorus and used in the model are gathered in the "INPUT" sections. Chorus' accounts used in the Opex model are accounts for the year to June 2014 except for IT costs that are derived from the accounts for the year to June 2013 (as 2014 figures have not been provided). Inputs from the Analysys Mason / Chorus model have been used as well in order to allocate IT costs.

The following table describes how the data provided during the data collection have been used to derive the inputs of the model:

Model Documentation – Public Version

Table 1 – Opex model reference files

File reference	Content	Usage
6.19.6	Fixed Asset Register	"FAR" spreadsheet
-	Chorus detailed accounts	"Accounts" spreadsheet
6.13	Number of faults	"LFI" spreadsheet
-	Buildings valuation	"Buildings valuation" spreadsheet
6.18.12	Square meters of MDFs	"Buildings Info" spreadsheet
6.6.1	Buildings information	"Buildings Info2" spreadsheet
3.1.2	Floor space information	"Floor space" spreadsheet
6.19.1	Count of staff and associated gross personnel costs (GPC)	"1. Staff" spreadsheet
6.19.1	Detailed GPC per team	"Detailed staff" spreadsheet
6.19.1	Clarification of core network technicians team	"FurtherPayCostInfo" spreadsheet
6.19.2	Council rates	"2. Rates and taxes" spreadsheet
6.19.3	Maintenance costs	"3.a. Maint Summary", "3.a. Maint Exchange", "3.a.Maint Chorus Net", "3.a.FurtherInfoRadio", "3.a. Maint Alcatel", "3.a. Project ii", "3.a. Project ii", "3.a. Project iii", "3.a. Project iv" spreadsheets
6.19.3.a.v	IT network expenses	"3.a IT" spreadsheet
6.19.3.b (i)	Labour costs	"3.b Labour" spreadsheet
6.19.3.b (ii)	Provisioning costs	"3.b Provisioning" spreadsheet
6.19.3.b (iii)	Network maintenance summary	"3.b Network maint" spreadsheet
6.19.3.b (iv)	Rents and rates related to network expenses	"3.b Rates & Rent", "3.b Rates & Rent bis" spreadsheets
6.19.3.b (v)	Property maintenance costs	"3.b Property maint" spreadsheet
6.19.3.b (vi)	Electricity costs	"3.b Electricity" spreadsheet
6.19.3.b (v)	Insurance costs	"3.b Insurance" spreadsheet
6.19.3.b (v)	Others costs related to network expenses	"3.b Other costs" spreadsheet

Model Documentation – Public Version

File reference	Content	Usage
6.19.4.ii	IT costs (non-network operations)	"4.IT" spreadsheet
6.19.4.iii	Insurance costs (non- network operations)	"4.Insurance" spreadsheet
6.19.4.iv	Consultants (non-network operations)	"4.Consultants" spreadsheet
6.19.4.iv	Rents and rates (non- network operations)	"4.Rent and rates" spreadsheet
6.19.4.i	Labour costs (non-network operations)	"4.Labour" spreadsheet
6.19.4.vi	Property maintenance (non-network operations)	"4.Property maintenance" spreadsheet
6.19.4.vii	Electricity (non-network operations)	"4.Electricity" spreadsheet
6.19.4.vii	Others (non-network operations)	"4.Other" spreadsheet
Analysys Mason / Chorus model	IT costs allocation	"IT Chorus"

Source: TERA Consultants

3.2 Inputs

The Opex model is fed by five types of input sheets:

- parameters;
- buildings data;
- network expenses data;
- non-network expenses data;
- others type of data (accounts, etc.)

These types of spreadsheets are described in the following sections.

3.2.1 Parameters

This sheet contains the main parameters of the model.

The main parameters are:

the year of the modelling;

Model Documentation – Public Version

- the type of maintenance costs that are used in the modelling (project opex⁵);
- the inclusion of rents related to microwaves;
- the inclusion of network IT costs;
- the surface occupied by a rack (that comes from the core network cost model);
- the financial parameters (WACC);
- the parameters used to calculate the building / land / power valuations (asset life, price trend, type of costs included);
- the parameters used to calculate opex trends;
- the targeted line fault index used in the model to calculate maintenance costs.

3.2.2 Buildings data

Four sheets provide information on the buildings:

Table 2 - Buildings sheets

Sheet	Description
Buildings Valuation	Evaluation of exchanges properties
Missing sites	Information of sites that were missing in the other files
Buildings Info	Evaluation of exchange square meters
Buildings Info2	Information on the owner of each exchange (Spark or Chorus)

Source: TERA Consultants

3.2.3 Network expenses data

The following sheets provide information on the network expenses data.

⁵ "Project OPEX" are specific large maintenance work such as the replacement of an entire cable. "Project OPEX" is the terminology used by Chorus.

Model Documentation – Public Version

Table 3 - Network opex sheets

Sheets	Description
1. Staff	Headcount of the different teams
Detailed staff	Detailed account on staff
FurtherPayCostInfo	Detailed labour costs information
2. Rates & Taxes	Rates and taxes paid by Chorus
3.a Maint Summary	Summary of maintenance costs
3.a Maint Exchange	Maintenance costs related to exchanges
3.a Maint Alcatel	Maintenance costs done by Alcatel
3.a Project i	Summary of different project opex
3.a Project ii	Detailed cost of project opex
3.a Project iii	Summary of other project opex
3.a Project iv	Detailed cost of project opex
3.a IT	Detailed costs of IT related to network
3.b Labour	Detailed costs of staff related to network operations
3.b Provisioning	Details costs related to provisioning services
3.b Network maint	Summary of network maintenance costs
3.b Rates & Rent	Rates & rents related to network operations
3.b Property maint	Property maintenance opex
3.b Electricity	Information about electricity consumption and price
3.b Insurance	Detailed cost of insurance regarding network operations
3.b Other costs	All others costs related to network operations
IT costs details	Allocation of IT costs to services
IT Chorus	Allocation of IT costs to services based on Analysys Mason / Chorus model

Source: TERA Consultants

3.2.4 Non-network expenses data

The table below summarises the sheets relating to non-network opex.

Model Documentation - Public Version

Table 4 - Non-network opex sheets

Sheets	Description		
4. IT	Detailed costs of IT related to non-network		
4. Insurance	Detailed cost of insurance regarding non-network operations		
4. Consultants	Detailed cost of consultants (network and non-network)		
4. Rent and rates	Rates & rents related to non-network operations		
4. Labour	Detailed costs of staff related to non-network operations		
4. Property maint	Property maintenance opex		
4. Electricity	Information about electricity consumed for non-network properties		
4. Other	All others costs related to non-network operations		

Source: TERA Consultants

3.2.5 Other types of data

Some other sheets are present in the model and related to the distribution of lines per MDF for example.

Table 5 - Other sheets

Sheets	Description
Distribution per MDF	Distribution of active lines per MDF
Inputs – Forecasts	Number of lines forecast
Model	Description of the model sheet
Lists	Lists used in the model
MDF Lists	List of MDFs used in the Opex model

Source: TERA Consultants

3.3 Calculations

The Opex model comprises calculation, allocation, analysis and costing spreadsheets:

- Maint allocation (allocation spreadsheet);
- Property maint allocation (allocation spreadsheet);
- Pay cost allocation (allocation spreadsheet);
- Rent & Taxes allocation (allocation spreadsheet);
- Energy allocation (allocation spreadsheet);
- IT allocation (allocation spreadsheet);

Model Documentation – Public Version

- IT allocation Chorus (allocation spreadsheet);
- Other costs (allocation spreadsheet);
- LFI analysis (analysis spreadsheet);
- FAR analysis (analysis spreadsheet);
- Buildings analysis (analysis spreadsheet);
- Alloc key (allocation spreadsheet);
- Costs summary (costing spreadsheet);
- Results (costing spreadsheet).

The following sheets comprise two parts: the first part deals with network opex and the second one with non-network opex:

- Property maint allocation;
- Rent & Taxes allocation;
- Energy allocation;
- IT allocation;
- Other costs allocation.

3.3.1 Maintenance allocation

Chorus provided different files regarding maintenance network opex. Each file deals with a specific issue. This part of the document describes each type of cost and points out reprocessing that has been done.

Maintenance activities are mainly operated by contractors. Chorus provided different files related to maintenance costs. The model retains this organisation in the Microsoft Excel sheet related to maintenance costs.

3.3.1.1 Chorus maintenance costs

Chorus maintenance costs are divided into two main cost items: contractors' (including both labour and materials) and overhead costs.

A few cost categories are not considered as relevant maintenance costs in the file provided by Chorus. Those costs are either related to non-relevant services for the modelling (baseband service for example) or related to customer network maintenance (maintenance not done on Chorus' networks).

The table below summarises costs that are not taken into account and the reason why they are not in the column "Commentary".

Table 6 - Costs not relevant in Chorus maintenance costs

Code	Description	Commentary
[]	Inside Fault (Telehousing/Collocation)	Out of scope

Model Documentation – Public Version

[]	[] CMAR (Customer Multi Access Radio) maintenance (1 yearly)	Baseband service ⁶
[]	[] CMAR configuration backup and time setting (three monthly)	Baseband service
[]	[] digital microwave maintenance (12 monthly)	Baseband service
[]	[] DMR links maintenance (12 Monthly)	Baseband service
[]	Mobile [] External Alarms Cell Sites (12 Monthly)	Customer maintenance
[]	Mobile [] Air Filters	Customer maintenance
[]	[] Proactive Maintenance on Paging Transmitter site (12 Monthly)	Customer maintenance
[]	[] Mobile Equipment Sites & Shelters Safety And General Inspection (12 MONTHLY)	Customer maintenance
[]	Wind Generation System – [] for Air-X and Ampair Wind Generators	Customer maintenance

Source: TERA Consultants

Chorus' overhead maintenance costs depend on the amount of the different costs presented below (Chorus maintenance contracts include a % of contractor overhead fees). In order to reflect disregarded costs, they have been apportioned over the amount of relevant costs (see sheet "Maint allocation"; "Allocation of Chorus maintenance costs" and "with overhead" section).

3.3.1.2 Engineering services costs

Engineering services costs are maintenance costs related to Exchange buildings. Those costs deal with maintenance of items such as air conditioning, switchboards, etc.

All engineering services costs have been considered as relevant for network opex.

3.3.1.3 Alcatel Lucent specific costs

Alcatel service fee charges are related to the ALU Network Operations Centre Services (NOC) and are made of different costs that are all relevant for the modelling.

⁶ The OPEX model aims at calculating the OPEX cost of the copper local loop. As a consequence, "baseband" service specific costs are disregarded.

Model Documentation – Public Version

3.3.1.4 Project opex

"Project OPEX" are specific maintenance costs, related to large maintenance works. For example, the replacement of a total cable is considered as an "OPEX project".

In the case of a newly built network, these material works are unlikely. As a consequence, project opex are disregarded.

3.3.1.5 Other maintenance costs

Four types of costs comprise the "other maintenance costs" category. Not all of those costs are relevant for the modelling.

The table below presents costs that are not relevant.

Table 7 – Costs not relevant for other maintenance costs

	Code	Description	Commentary
[]	Customer Network – overheads	Customer maintenance costs
[]	Customer Network	Customer maintenance costs
[]	NMR - Customer Network	Customer maintenance costs

Source: TERA Consultants

3.3.2 Property maintenance allocation

3.3.2.1.1 Network expenses

Property maintenance relates to costs incurred to maintain Chorus' network property. Property maintenance costs deal either with electricity or building maintenance costs. They are differentiated in order to calculate the cost of electricity per MWh and the cost of building per square meter. Indeed, those costs have to be taken into account in various types of costs:

- cost of buildings that is an input to the core network cost model;
- cost of building for co-location;
- cost of electricity that is an input to the core network cost model;
- cost of electricity for co-location.

A unit cost per MWh and a unit cost per square meter are derived from those costs. The following table summarizes this implementation.

Table 8 – Property maintenance cost allocation

[]

Source: TERA Consultants

Model Documentation – Public Version

3.3.2.1.2 Non-network expenses

All the costs related to non-network expenses within the property maintenance cost category are considered as relevant in the modelling. As a consequence, no part of this cost category is disregarded.

3.3.3 Labour costs allocation

Chorus provided four files dealing with labour costs. Two of those files detail the calculation of the net personnel costs. These costs include salary costs, contractor costs, holiday pay, bonuses and commissions, allowances. These costs exclude capitalised labour as this is already accounted for in the Capex model (installation costs)..

3.3.3.1 Chorus allocation of labour costs

Chorus provided a split of labour costs into the following categories:

- · management and professional services;
- finance, payroll, human resources and administration;
- sales and marketing;
- general customer services, and customer services technical support;
- network design and planning, and network operations including and network engineers required for the access network;
- network design and planning, and network operations including and network engineers required for the core platforms;
- access network technicians;
- core network technicians;
- other.

The following section describes the labour cost allocation approach.

3.3.3.2 Chorus data reprocessing

The first step consists in allocating the different labour costs between network and non-network expenses. The second step specifies the proportion of network labour costs related to maintenance, provisioning, IT or "network build" operations.

The table below provides the allocation of each labour cost.

Table 9 - Pay costs

Description	Commentary
Management and professional services	Non-network labour costs
Finance, payroll, human resources and administration	Non-network labour costs
Sales and marketing	Non-network labour costs

Model Documentation - Public Version

General customer services, and customer services technical support	Allocation between maintenance, provisioning and non-network expenses. (details below)	
Network design and planning, and network operations including and network engineers required for the access network	This cost is not taken into account in the OPEX modelling but it is an input to the Capex model as it is related to networks assets installation	
Network design and planning, and network operations including and network engineers required for the core platforms	Non-network labour costs	
Access network technicians	This cost is not taken into account in the OPEX modelling but it is an input to the Capex model as it is related to networks assets installation (network deployment)	
Core network technicians	Allocation between maintenance, provisioning and non-network expenses. (details below)	
Other	A part of this cost is allocated to building treatments. Others are allocated to non-network expenses. (details below)	

Source: TERA Consultants

In order to provide the relevant cost for maintenance, Chorus provides a detailed file of labour costs and a file that details the "core network technicians" allocation.

The following tables detail the allocation of the different teams.

Table 10 – Details of general customer services labour costs

	Code	Description	Allocation
[]	GM customer services	Allocated to the teams below on a pro-rata basis (The cost of the general manager is allocated to other sub- categories)
[]	Customer operations	Non-network labour costs
[]	Service Delivery	Provisioning labour costs

Model Documentation – Public Version

[]	Co-location and customer	Co-location labour costs
[]	Operational excellence	Non-network labour costs
[]	Provisioning Customer Services	Provisioning labour costs
[]	[]	Provisioning labour costs
[1	Assure Customer Services	Maintenance labour costs (only related to access network)
[]	Customer Service Commercial Arrangements	Non-network labour costs

Source: TERA Consultants

Table 11 - Details of core network technicians

	Code	Description	Allocation
[]	Head of NGA	Provisioning labour costs
[1	Field Services – Operations	Maintenance and provisioning labour costs
[]	FS Commercial Arrangements	Non-network labour costs
[]	Field Services – Regional – North	Maintenance, provisioning and "build network" labour costs
[]	Field Services – Regional – Auckland	Maintenance, provisioning and "build network" labour costs
[]	Field Services – Regional – Wellington	Maintenance, provisioning and "build network" labour costs
[]	Field Services – Regional – South	Maintenance, provisioning and "build network" labour costs

Source: TERA Consultants

In order to distribute core network technicians' labour costs to the categories, Chorus data is used. [

This allocation is used to allocate the total amount of each team to the relevant categories.

Costs relevant to "building network" cost are added to labour costs that are inputs to the core and access network cost models.

Model Documentation – Public Version

Table 12 - Details of other costs

	Code	Description	Allocation
[]	Property Infrastructure	Specific treatment: allocation to network building costs. This cost is used to calculate the cost per square meter and the co-location costs
[]	Corporate Property	Non-network costs
[]	[]	Non-network costs

Source: TERA Consultants

3.3.4 Rent & Taxes allocation

3.3.4.1 Network expenses

3.3.4.1.1 Taxes

Taxes considered in this section are taxes related to buildings, water, etc. For the avoidance of doubts, corporate taxes are not included within this section (these are captured when depreciation is performed in the Capex model).

All tax payments provided by Chorus are taken into account in the calculation of OPEX.

3.3.4.1.2 Rents

Two GL codes are related to rents in Chorus' accounts.

- [] T2 property charges represents the OPEX portion of payments made to Spark under the exchange property sharing arrangements. This entire amount is used in the model.
- [] is related to other rents used for the network (exchanges, microwaves sites, land mobile, electricity cables, etc.).
 - The total amount related to exchange or cabinet rent is taken into account in the modelling.
 - All amounts related to CMAR and land mobiles are out of scope (as they relates to legacy networks).
 - Amounts related to railways crossing, telecommunication cables and electricity cables are taken into account.
 - Amounts related to microwave site rents can be used or not in the OPEX modelling. An option in the 'parameter' sheet is available (these are taken into account in the base case).

Model Documentation – Public Version

Figure 8 – Microwave site rent option

[]

Source: TERA Consultants

3.3.4.1.3 Allocation of rents and rates

Rents and rates are included within the per square meter costs. As a consequence, these are allocated based on the floor space requirement.

3.3.4.2 Non-network expenses

All the costs related to non-network rent expenses are identified as relevant costs in the modelling (i.e. no costs are disregarded). Examples of these are office rental, equipment costs, rental building costs and rental of car parks.

3.3.5 Energy allocation

Electricity costs are made of a fixed part (Chorus Line Charges, Smart Power Management costs for example) and a variable part depending on the network's power consumption which was provided by Chorus with a associated spot price.

Those amounts are used to calculate a price per MWh (see §3.4.1.1.3).

3.3.6 IT allocation

Chorus provided two files regarding IT costs: one related to IT network operating expenses and the other related to IT non-network operating expenses.

For network operating expenses, allocation has been based on the use that is made by each service of the different platforms according to Analysys Mason / Chorus model (costs are allocated based on the number of active lines of each service making use of the platform).

Non-network IT expenses have been allocated based on an EPMU approach (with the "revenue allocation key" - see §3.3.13.3.2).

3.3.7 Other costs

3.3.7.1 Network expenses

Other costs are divided into three categories: insurance, consultant costs and other costs.

The table below summarises insurance costs that have been excluded.

Table 13 – Costs not relevant for insurance costs

Code	Description	Commentary
------	-------------	------------

Model Documentation - Public Version

[]	[]	Financial insurance, not network
	[]	Financial insurance, not network

Source: TERA Consultants

The table below summarises other costs that have been excluded. All costs related to third party networks have been disregarded.

Model Documentation – Public Version

Table 14 - Costs not relevant for other costs

	Code	Description	Commentary
[]	[]	Out of scope: fibre cost (mainly core product)
[]	[]	Out of scope
[]	[]	Out of scope
[]	[]	Out of scope
[]	[]	Project opex already counted
[]	[]	Project opex (disregarded)
[]	[]	Capitalised of 450286 which is not used
[]	[]	Cost already counted in the maintenance costs (engineering services)
[]		Cost already counted in the maintenance costs (engineering services)
[]	[]	Cost already counted in the maintenance costs (engineering services)
[]	[]	Cost already counted in the maintenance costs (engineering services)
[]	[]	Cost already counted in the maintenance costs (engineering services)
[]		Cost already counted in the maintenance costs (engineering services)
[]	[Cost already counted in the maintenance costs (engineering services)
[]	[]	Out of scope: business equipment
[]	[]	Not material

Source: TERA Consultants

TSLRIC price review determination for the Unbundled Copper Local Loop and Unbundled Bitstream Access services Model Documentation – Public Version

The following table details the allocation of other costs used in the model. Costs can be allocated to maintenance costs, exchange costs, co-location costs or non-network costs.

Table 15 - Details of other costs

	Code	Description	Allocation
[]	[]	Non-network cost
[]	[]	Non-network cost
[]	[]	Maintenance and provisioning cost
[]	[]	Maintenance and provisioning cost
[]	[]	Maintenance cost
[]	[]	Maintenance and provisioning cost
[]	[]	Maintenance cost
[]	[]	Maintenance and provisioning cost
[]	[]	Maintenance and provisioning cost
[]		Maintenance and provisioning cost
[]	[]	Maintenance cost
[]	[]	Maintenance cost
[]	[]	Maintenance cost
[]	[]	Maintenance cost
]]	[]	Maintenance cost
[]	[]	Maintenance cost
[]	[]	Co-location cost
[]	[]	Co-location cost
[]	[]	Maintenance cost
[]	[]	Maintenance cost
[]	[]	Maintenance cost
[]	[]	Non-network cost

Model Documentation - Public Version

[]	[]	Non-network cost
[]	[]	Maintenance cost
[]	[]	Non-network cost
[]	[]	Maintenance cost
[]	[]	Exchange cost
[]	[]	Non-network cost
[]	[]	Maintenance cost
[]	[]	Non-network cost
[]	[]	Maintenance cost
[]	[]	Non-network cost
[]	[]	Non-network cost

Source: TERA Consultants

Maintenance costs are allocated to the different assets.

Consultants costs related to network are taken into account as well as network expenses.

3.3.7.2 Non-network expenses

All the costs related to non-network rents expenses are identified as relevant costs in the modelling except financial charges (bank charges, foreign exchange gains and losses, brokerage) and advertising that fall out of the scope of the TSLRIC modelling.

3.3.8 LFI analysis

This sheet aims at summarising the number of Chorus copper active lines and the line fault index (LFI) per 100 lines per MDF from 2009 to 2013.

It enables to calculate the LFI (%) for each MDF.

3.3.9 FAR (Fixed Asset Register) analysis

This sheet aims at calculating two different costs:

- Investment costs that are not modelled in access and core network cost
 models: some of relevant costs are not modelled in network costs models and
 have to be taken into account in the modelling. Hence they are taken into
 consideration on a top-down approach using the FAR inputs;
- Investment costs that need to be used for the co-location price calculation.

Model Documentation - Public Version

3.3.9.1 Indirect capex – inputs for the Core model

In addition to network costs modelled in the access network cost model and in the core network cost model, an operator faces other investments that are not modelled. They are named "Indirect Capex" and have to be allocated to the different services in the core network cost model.

Two types of indirect capex are included:

- IT costs indirect capex; and
- miscellaneous indirect capex.

The IT cost includes hardware and software costs related to customer services, network, billing platforms, network management platforms, VoIP/Voice platforms, Information system platforms, etc.

The Miscellaneous indirect capex include costs related to office equipment, furniture, tools and plants, and motor vehicles.

The table below summarises the costs used.

Table 16 - Costs retained for indirect capex

Code	Description	Commentary
[]	[]	Miscellaneous indirect capex
[]	[]	Miscellaneous indirect capex
[]	[]	Miscellaneous indirect capex
[]	[]	Miscellaneous indirect capex
[]	[]	IT indirect capex
[]	[]	IT indirect capex
[]	[]	IT indirect capex
[]	[]	IT indirect capex
[]	[]	IT indirect capex
[]	[]	IT indirect capex
[]	[]	IT indirect capex
[]	[]	IT indirect capex
[]	[]	IT indirect capex
[]	[]	IT indirect capex
[]	[]	IT indirect capex
[]	[]	IT indirect capex
[]	[]	IT indirect capex

Model Documentation – Public Version

[]	[]	IT indirect capex
[]	[]		IT indirect capex
[]	[]	IT indirect capex

Source: TERA Consultants

3.3.9.2 Costs relevant for co-location costs

The electricity price for co-location has to include the cost of air conditioning equipment, battery equipment, etc.

The table below summarises indirect capex relevant for the co-location electricity price.

Table 17 – Relevant costs for co-location electricity price

Code		Description	Commentary
[]	[]	Electricity indirect capex
[]	[]	Electricity indirect capex

Source: TERA Consultants

3.3.10 Building analysis

3.3.10.1 Approach

The "building analysis" sheet is used to calculate an average rental price per square meter for exchange buildings.

The starting point is the list of 720 exchanges of the Capex model. For each of them, it is necessary to derive the annual cost and the corresponding surface (in square meters) in order to calculate a unit cost (NZD per square meter).

There are two types of sites:

- sites that are rented from Spark or another company;
- sites that are owned by Chorus.

Chorus provided different files that enable to have information about the exchange square meters.

The amount paid by Chorus for rented sites has been described in the section 3.3.4.1.2.

For sites that are owned by Chorus, a yearly cost is derived by the valuation of the exchange (knowing the associated square meters, the price trend, the asset life and the WACC).

3.3.10.2 Implementation

The first table summarises the following information per MDF:

Model Documentation – Public Version

- the code of the MDF:
- the name of the MDF;
- the number of the MDF;
- information about the owner of the MDF (it can be Chorus, Telecom or NA (no information));
- the type of building (the type of building provides information about the floor space);
- the number of square meters of the MDF (we have aggregated information from two files⁷):
- the valuation of property fit outs⁸;
- the valuation of buildings;
- the valuation of the land.

The last column of the table calculates the annual charge per square meter based on the valuation provided in the input files.

The following cases can be found:

- 641 sites owned by Chorus and for which the investment of property fit outs, buildings and land is known (a rented cost is calculated on the basis of depreciation formulas);
- 47 sites owned by Chorus and for which the land valuation is unknown (a rented cost is calculated based on property fit outs and buildings valuations).
 The cost of the land is assumed to be equal to the cost of rented sites related to exchanges and detailed in the previous section;
- 29 sites are owned by Telecom and the cost of rent is detailed in previous sections.

Once the different costs are calculated, an average cost per square meter can be calculated.

Table 18 - Building analysis

[]

Source: TERA Consultants

3.3.11 Alloc key

The aim of this spreadsheet is to summarise all the different allocation keys used elsewhere in the model.

⁷ The two files that can provide the information are: 20140605_Confidential_Q 6.17.15-20 floor-racks and 20140822 Confidential_Q 3.1.2 (c) Floor Space Allocation

⁸ Furniture within the building

Once relevant network costs have been identified, they have to be allocated to the different assets. For some costs, Chorus provided the allocation key:


- Maintenance costs: allocation between exchanges, active cabinets, passive cabinets, copper access, fibre access, radio and others provided by Chorus.
- Property maintenance costs: all costs are allocated to exchanges.
- Taxes: all rates are allocated on the basis of Chorus' allocation key.
- Labour costs related to core network technicians: costs are distributed among maintenance costs, provisioning costs and building costs.

3.3.11.1 Maintenance allocation key

3.3.11.1.1 Approach

This section aims at allocating relevant costs to relevant services. Depending on the service modelled, different assets are used.

The figure below presents the equipment used for UCLL and UBA (services modelled).

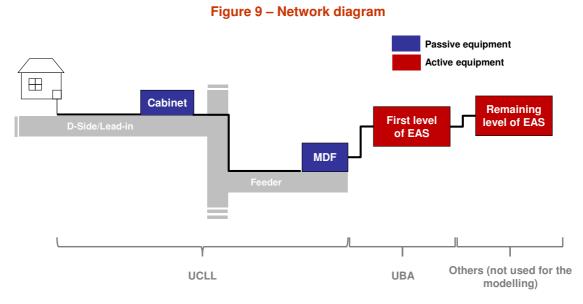

Source: TERA Consultants

The Exchange always hosts the MDF. It can host as well the first level of Ethernet switches (EAS) and sometimes other levels of Ethernet switches (remaining level of EAS). Hence, active and passive equipment are part of the Exchange buildings.

In this current document, the term "Copper Access" is used to describe the two following parts of the copper network: Distribution/Lead-in and Feeder. The same terms are used to describe "Fibre Access".

3.3.11.1.2 Exchanges

As it is described in Figure 9, exchanges buildings can host different network equipment. Given they are used for different services, exchanges costs need to be allocated between the different equipment.

Two allocation keys are calculated for exchange buildings: one related to "active equipment" and one related to "passive equipment" (general building maintenance, cleaning). These two allocation keys are detailed hereafter.

Passive equipment

Passive costs are related to proactive building maintenance costs for example. Those costs are allocated to all equipment installed in Exchange buildings.

The allocation key is based on the floor surface occupied by the MDFs, the DSLAMs, the first level of EAS and the remaining level of EAS. Those data are coming from the core and the access network cost models. Given that only the first level of EAS is modelled, it is supposed that all EAS occupy the same floor surface.

Figure 10 – Exchanges allocation key

[]

Source: TERA Consultants

Active equipment

Costs which deal with "active equipment" are mainly costs related to DSLAMs, Ethernet switches, etc. Those costs are not allocated to the MDF part of the Exchange, because the MDF is passive equipment. Hence, all costs related to air conditioning, air filters are allocated with this key.

The "active" allocation key is calculated on a pro-rata basis of the "passive" allocation key, between the first level of EAS and the remaining level of EAS.

Figure 11 – Passive and active allocation keys

Maintenance Unit		Exchange		
		MDF	DSLAM & First level of EAS	Remaining EAS & Others Equipt
Exchange				
Passive equipment	%	61	% 34%	5%
Active equipment	%	C	% 88%	12%

Source: TERA Consultants

3.3.11.1.3 Cabinets

Regarding costs of Chorus maintenance, Chorus provided the allocation between active and passive cabinets. However, for other maintenance costs, this allocation is not provided and the following section describes the approach that has been used.

Two types of cabinets coexist in the network: active and passive cabinets. Active cabinets contain active equipment such as DSLAMs for example.

In the model, cabinets are split into two categories: "DSLAM & Active Equipment" and "Passive Equipment".

Costs related to passive equipment are allocated on a pro-rata basis of the number of active and passive cabinets.

Figure 12 – Active cabinet allocation key

Maintenance	Unit	Cabin	iet
		DSLAM & Active Equipt	Passive Equipt
Cabinet			
Passive equipment	%	65%	35%
Active equipment	%	100%	0%

Source: TERA Consultants

Costs related to active equipment are fully allocated to the "DSLAM & Active Equipment" category.

3.3.11.1.4 Copper Access

As described in the network figure above, the copper access is made of two parts: the D-Side/Lead-in part and the Feeder part. Costs related to copper access maintenance costs have to be allocated among those two parts.

The allocation key is calculated on a pro-rata basis of the km-pairs used for the distribution (D-Side) on the one hand and the Feeder on the other hand (see Figure 21). This information is derived from the access network cost model.

Figure 13 – Copper access allocation key

Unit	Copper Access	
	Feeder	D-Side/Lead-in
km	2 885 717	4 185 283
%	41%	59%
	km	Feeder km 2 885 717

Source: TERA Consultants

3.3.11.1.5 Fibre Access

The aim of the Opex model is to assess the opex of a copper line. As a consequence, fibre access costs are disregarded.

Opex for the fibre scenario as discussed in §8.2.

3.3.11.1.6 Radio links

Some costs are related to radio links.

Model Documentation - Public Version

The model assumes the radio links can be used for the feeder, the core links related to the UBA services and other core links (e.g. links between other levels of EAS). Chorus provided two types of allocation regarding radio costs:

- costs related to feeder only (100% allocated to the feeder category);
- costs related to a mix of core, feeder and distribution links (in absence of information, it is assumed that 50% of this mix is related to UBA links and 50% to other core links).

Figure 14 - Radio links allocation key



Source: TERA Consultants

3.3.11.2 Property maintenance costs

All property maintenance costs are allocated to exchanges.

3.3.11.3 Taxes

Rates are allocated to UCLL and UBA services thanks to an allocation key provided by Chorus for those specific costs.

3.3.11.4 Labour costs related to core network technicians

Labour costs related to core network technicians are distributed among maintenance costs, provisioning costs and building costs.

3.3.12 Price trends use

In order to derive the cost of each year based on 2014 accounts, the following price trends are applied:

- OPEX labour related (+2%)
- OPEX non labour related (0%)

These are applied on the different blue sheets in the "amount taken" columns.

3.3.13 Costs summary

This sheet summarises all the costs described in the previous section. The objective of the sheet is to allocate relevant opex amount to UCLL and UBA services.

Three main activities are performed in this sheet:

Model Documentation – Public Version

- adjustment of top-down figures to reflect relevant costs for a replacement cost modelling;
- allocation of network opex;
- allocation of non-network opex (other costs are treated as well in this section).

3.3.13.1 Adjusting top-down figures to reflect relevant costs for a replacement cost modelling

3.3.13.1.1 General approach

The level of fault (LFI) within Chorus network is not necessarily representative of the LFI of a recently built network and has to be benchmarked.

Maintenance costs mainly vary with the number of line faults occurring in the access network. To estimate an efficient level of costs, **maintenance costs can be adjusted by using an 'efficiency factor'**. This factor can be defined as "Efficiency Adjustment".

3.3.13.1.2 Focus on LFI

A targeted LFI is used to adjust the level of maintenance costs. Details of the value that is used are described in the annex of this document.

3.3.13.2 Network opex

The part related to network opex is divided into two sections:

- costs allocated to equipment (all costs except rates⁹ and IT costs);
- costs allocated to services (only rates and IT costs).

3.3.13.2.1 Costs allocated to equipment

Two tables summarise those costs: one related to maintenance costs only and one related to other costs.

For each cost category, the "efficiency adjustment" column determines whether the cost category should be adjusted with the efficiency factor or not.

It has to be noted that maintenance costs are allocated per MDF. This allocation is done on a pro-rata basis of the number of faults per MDF.

Figure 15 – Maintenance costs summary

[]

Source: TERA Consultants

The same type of table summarises Labour costs, rents, insurance costs, etc.

⁹ "Rates" refer in the current document to taxes (land & water rates, land rates,...) see sheet "Rent&Taxes allocation

Model Documentation - Public Version

Figure 16 – Costs summary (except maintenance costs)

[]

Source: TERA Consultants

Once all the different costs are allocated, the model uses a routing table to select costs that are relevant to each service.

The total cost per service per year can then be derived.

The table below presents the costs used for the different services. (When the value is one, it means the cost of the equipment is allocated to the service)

Table 18 – Routing table

Туре	Equipment	UCLL Copper	UBA
	MDF	1	-
Exchange	DSLAM & first level of EAS	-	1
	Remaining EAS	-	-
O a la in a t	DSLAM & active equipment	-	1
Cabinet	Passive equipment	1	-
Copper	Feeder	1	-
Access	D-Side/Lead-in	1	-
Fibre	Feeder	-	-
Access	D-Side/Lead-in	-	-
	Copper Feeder	1	-
D1' -	Fibre Feeder	-	-
Radio	UBA only	-	1
	Others		
Others	-	-	-

Source: TERA Consultants

Given the number of copper active lines and the number of UBA lines, costs can be allocated and a maintenance cost per month per line is derived.

Model Documentation - Public Version

Figure 17 – Maintenance costs summary

[]

Source: TERA Consultants

3.3.13.2.2 Costs allocated to services

As described in the previous parts of this document, costs are allocated either per equipment or per service. Major parts of costs are allocated per equipment as explained in the previous section. Only IT costs have been allocated by Chorus per service.

Figure 18 – Cost allocated per service

[]

Source: TERA Consultants

The same approach as the one described in the previous section is used to calculate a cost per line per month.

3.3.13.3 Non-network opex (other costs are treated as well in this section)

This section of the document aims at describing the methodology used to take into account non-network costs in the modelling.

3.3.13.3.1 Non-network costs summary

The following table summarises the different non-network costs used in the Opex model:

- Labour costs not related to maintenance, provisioning or building activities;
- property maintenance costs of non-network buildings;
- rent of non-network buildings;
- corporate electricity cost;
- non-network insurance and consultants costs:
- other costs network and non-network costs (as it is described in previous section, costs that are not allocated to services or equipment are treated as non-network costs).

Model Documentation - Public Version

Figure 19 – Non-network costs summary

[]

Source: TERA Consultants

Those non-network costs are allocated to different services in the Opex model:

- regulated services (UCLL and UBA);
- co-location services;
- ancillary charges services.

3.3.13.3.2 Revenue allocation key

Chorus provides a file that includes all the revenues. These can be used as a proxy for costs as costs are not allocated to services within Chorus accounts.

On this list, only revenues of relevant services (modelled services) are considered to calculate the non-network cost total amount related to the modelling.

Three allocation keys are calculated to allocate non-network costs.

Table 19 - Revenue used for the different services

Services	Revenues used
UCLL and UBA	Basic Copper revenue, Enhanced Copper revenue
Co-location	Infrastructure revenue
Ancillary charges	Field services revenue

Source: TERA Consultants

78% of non-network costs are allocated to UCLL and UBA. 2.5% are allocated to ancillary charges and 1.8% to co-location.

The non-network costs allocated to UCLL and UBA services will then be exported in the capex model and allocated between the two services with an EPMU approach based on the total capex and opex already allocated to each service.

The table below summarizes those calculations.

Table 20 - Non-network cost allocated to UCLL and UBA

[]

Source: TERA Consultants

3.4 Outputs

Two sheets can be qualified as "outputs" sheets:

- Results sheet:
- EXPORT sheet.

3.4.1 Results

The results sheet is divided into three main parts. The first part deals with the final calculation of opex per line per service and with the indirect capex. The second part summarises the network planning labour costs and the last one calculates costs of colocation.

3.4.1.1 Opex per line

Costs that are calculated in the "Cost summary" sheet are copied in this spreadsheet and allocated to the MDF.

The end of the first table in this spreadsheet parts analyses the part of each cost in the total opex amount per MDF and per line for the year 2014 to 2019. Results can be updated by clicking on the "update" macro button.

3.4.1.1.1 Maintenance costs

The UCLL maintenance cost total amount is allocated per MDF on a pro-rata basis of the number of faults per MDF. By contrast the UBA total amount related to maintenance costs is equally distributed per line for all MDFs.

3.4.1.1.2 Non-maintenance costs

Non-maintenance costs and non-network costs are not distributed per MDF and are equally distributed on the total number of lines.

3.4.1.1.3 Other costs for core network cost model

The cost per MWh for electricity is assessed in this spreadsheet as the sum of:

- Electricity price;
- Property maintenance costs related to electricity;
- Indirect capex related to power;
- Floor space costs allocated to power equipment;
- Power opex/ maintenance / Power project opex.

Model Documentation – Public Version

The cost of building per square meter is provided in this spreadsheet as well and divided into several parts:

- The average building cost per square meter;
- Property maintenance costs related to the building;
- Pay costs related to property infrastructure;
- Rates.

3.4.1.1.4 Indirect capex for core network cost model

Indirect capex summarised in the table are capex from the fixed asset register that are not modelled in the network cost models but needs to be included.

3.4.1.2 Network planning costs

The table summarises costs related to the design and the construction of the access network. It is an output for the core network cost model as these are related to the network deployment.

3.4.1.3 Co-location costs

3.4.1.3.1 Approach

The previous section describes how the cost of electricity per MWh and the cost of building per square meter are calculated. Those two amounts are used in the core network cost model.

In order to calculate co-location costs, non-network costs, labour costs and other costs related to co-location have to be added to the costs previously calculated. Those costs are allocated between electricity and building costs on a pro-rata basis of the total amount of building costs related to co-location and the total amount of electricity costs related to co-location. The proportion of costs related to co-location is calculated on the basis of co-location floor space required per MDF (The same allocation key is used for electricity and building).

In addition to those costs, some indirect capex have to be taken into account in the electricity co-location cost. Those indirect capex are not used for the cost per MWh that is provided to the core network cost model because they are modelled directly in the core network cost model.

3.4.1.3.2 Implementation

The last table of the Results spreadsheet provides calculations for co-location costs. Hence, electricity co-location costs is made of the cost of the MWh previously calculated, the part of indirect capex related to power equipment and the part of miscellaneous non-network costs.

TSLRIC price review determination for the Unbundled Copper Local Loop and Unbundled Bitstream Access services Model Documentation – Public Version

Figure 20 – Co-location costs

[]

Source: TERA Consultants

3.4.2 EXPORT

This sheet contains the outputs of the Opex model to the Core model. Results are provided on a yearly basis from 2014 to 2020.

In order to fill and update results, a macro has been made. By clicking on the button "fill", results will be updated.

4 Dimensioning the access network

This section covers the methodology implemented in the Microsoft Access component of the access network cost model, dealing with the dimensioning of the access network and producing as output inventories of the assets of the access network.

Each of the inventories corresponds to a different scenario:

- Full overhead copper network;
- Full underground copper network;
- Full overhead fibre network;
- Full underground fibre network.

The split between overhead and underground is then determined in the Excel model (see section 5).

A glossary provides definitions of the terminology used.

4.1 Reference files

The access network input file gathers all the necessary data for the dimensioning, from network roll-out rules (e.g. number of copper cable pairs/fibres per dwelling) to physical characteristics of the assets used (e.g. diameter of cables).

Those inputs are mainly used in the VBA routine that performs the dimensioning.

In the following table,

- The file reference is the index of the issue (as indexed in the data request to Chorus) to which the data collection provided by Chorus in their data submissions;
- Content summarises the question asked and the answer provided:
- Usage indicates where the input is used.

Table 21- Reference files

File reference	Content	Usage
6.14.1.e.v	Average and maximum distance between poles	"SOURCE_PARAMETERS _COMMON" table
6.14.1.e.iv	Location of manholes in the local access network	"SOURCE_PARAMETERS _COMMON" table
6.14.1.f	Technical characteristics of the copper and fibre cables used in the local access network	"SOURCE_INVENTORY _COPPER" and "SOURCE _INVENTORY_FIBRE" tables
6.14.1.e.i	Number of pairs and fibres per premise	"SOURCE_PARAMETERS _COPPER" and "SOURCE _PARAMETERS_FIBRE" tables
6.12.c	Service lead-in allocation	"SOURCE_PARAMETERS _COPPER" and "SOURCE _PARAMETERS_FIBRE" tables

Source: TERA Consultants

4.2 Inputs

The access network model is fed by geospatial data:

- "SOURCE_SECTIONS and SOURCE_BUILDINGS" provide data regarding respectively individual sections (e.g. the geotype of the section¹⁰, the length of the section, whether the section is distributed through a FWA site, to which MDF the section is linked, to which SC¹¹ the section is linked) and individual buildings (e.g. length of the dedicated path from the road to the building, whether the building is on the right or left side of the section);
- "SOURCE_MDF_SC_PATHS", "SOURCE_MDF_BUILDING_PATHS",
 "SOURCE_SC_BUILDING_PATHS" provide the ID of the shortest paths
 between, respectively, MDF, MDF and street cabinet, and street cabinet,
 building and building. It also provides the location (section) of both ends of the
 path and, in the "SOURCE_MDF_SC_PATHS" table, whether the street cabinet
 is active or passive.

Furthermore, it shall be noted that, in the "SOURCE_SC_BUILDING_PATHS" table, ID_SC includes MDF IDs as some sections are directly to the MDF: the MDF is then considered as a street cabinet.

Those three tables are the output of the geospatial work;

¹⁰ The geotype of the section may differ from the geotype of its MDF as, in this table, the geotype is based on the Corelogic definitions of urban and rural areas.

¹¹ Including MDF IDs when the distribution cable links directly the section to the MDF.

- "SOURCE_DETAILED_MDF_SC_PATHS",
 - "SOURCE_DETAILED_MDF_BUILD_PATHS",
 - "SOURCE_DETAILED_SC_BUILDING_PATHS" provide the detailed paths of the aforementioned paths, i.e. all the sections taken by each path, sorted from the start (MDF, street cabinet) to the end (street cabinet, building).
 - As the non-detailed paths, those three detailed tables are the output of the geospatial work;
- "SOURCE_CORE" lists all the sections shared with the core network (inter-EAS
 network and Exchange-to-first data switch network) and indicates whether the
 section is connected through fibre, microwave or submarine link. It should be
 noted that the paths followed by the core links are not Chorus' actual paths as
 these paths have been optimised;
- "SOURCE_FWA" provides the location (section) of the fixed wireless access sites.

And by input parameters:

- "SOURCE_PARAMETERS_COMMON" provides the shared parameters, in particular civil engineering parameters (e.g. diameters of ducts, distance between poles);
- "SOURCE_PARAMETERS_COPPER" provides the parameters that are specific to the copper network, in particular regarding the copper cable terminals design rules, the number of pairs per dwelling or the surpluses to be added to copper cables;
- "SOURCE_PARAMETERS_FIBRE" is the equivalent of "SOURCE_PARAMETERS_COPPER" for the fibre network;
- "SOURCE_INVENTORY_COPPER" provides data regarding the copper cables used in the copper network (number of pairs, external diameter, drum length);
- "SOURCE_INVENTORY_FIBRE" is the equivalent of "SOURCE INVENTORY COPPER" for the fibre network.

4.2.1 Geospatial data

The geospatial data describes the network section by section and provides:

- Section-specific features: lengths, locations of buildings;
- Shortest paths from sections to network nodes (MDF, cabinets);
- Location of assets on the sections.

It should be noted that the geospatial data does not include the GPS coordinates of the sections.

4.2.1.1 Source sections

The 'SOURCE_SECTIONS' table provides data regarding individual sections.

Table 22 - Description of the "SOURCE SECTIONS" table

Field	Description

Model Documentation - Public Version

Field	Description	
ID_SECTION	Unique ID of each section	
LENGTH	Length of the section in meters	
ID_MDF	ID of the MDF in which the section is located	
ID_SC	ID of the SC in which the section is located	
URBAN	If the section is urban then "True", otherwise, i.e. the section is rural, "False"	
SOIL	Type of soil: "1", "2", "3", "4" or "5" when rural, "town" when urban	
ROADWIDTH	Width of the road	
SERVED_BY_FWA	In the fibre network, whether the section is distributed through point-to-point fibre cable ("False") or by fixed wireless access ("True") – processed by the model	
MW_SITE	Number of Microwave sites on the section	
DWDM_SITE	Number of DWDM sites on the section	
LANDING_STATION	Number of submarine landing sites on the section	
TSO	Whether Chorus can benefit from subsidies for the access network roll-out on the section ("False" if so, "True" otherwise)	
TSO_ADJUSTED	In the base case scenario, copy of the latter field.	

Source: TERA Consultants

4.2.1.2 Source buildings

The 'SOURCE_BUILDING' table provides data regarding individual buildings.

Greyed fields are not used for the modelling.

Table 22 - Description of the "SOURCE_BUILDINGS" table

Field	Description		
ID_BUILDING	Unique ID of each building		
NB_TOTAL	Number of dwellings inside the building		
ID_SECTION	Unique ID of each section		
NB_RESIDENTIAL	Number of residential dwellings inside the building		
NB_COMMERCIAL	Number of commercial dwellings inside the building		
NB_INDUSTRIAL	Number of industrial dwellings inside the building		
NB_OTHER	Number of other dwellings inside the building		
HORIZONTAL_LENGTH	Length in meter of the horizontal part of the lead-in		
VERTICAL_LENGTH	Length in meter of the vertical part of the lead-in, from the building to the road		
TRENCH_LENGTH	Length in meter of the lead-in vertical trench, resulting from trench sharing among aligned buildings.		
INFILL	Whether the building has been built before 2001 ("False") or after 2001 ("True")		
DIST_TO_TSO	Distance to the TSO area when the building is outside the TSO		
SIDE_OF_ROAD	Whether the building is on the right or left side of the road		
RIGHT_SIDE	Whether the building is on the side of the section hosting the majority of buildings ("major side")		

Source: TERA Consultants

4.2.1.3 Source MDF to street cabinets paths

The "SOURCE_MDF_SC_PATHS" provides the start and end sections of the paths from the MDF to street cabinets.

This table is used to retrieve the paths of the copper cables in the feeder level on the local access network.

Table 23 - Description of the "SOURCE MDF SC PATHS" table

Field	Description
ID_PATH_MDF_SC	Unique ID of the path
ID_MDF	ID of the MDF
ID_SC	ID of the SC
NB_OF_SECTIONS	Number of sections required to link the MDF and the SC together
SC_SECTION_ID	ID of the section on which the MDF is located
MDF_SECTION_ID	ID of the section on which the SC is located
ACTIVE_CABINET	Whether the street cabinet is active or passive

Source: TERA Consultants

4.2.1.4 Source MDF to buildings paths

The "SOURCE_MDF_BUILDING_PATHS" provides the start and end sections of the paths from the MDF to buildings.

This table is used to retrieve the paths of the fibre cables (in the fibre network and in the FWA network).

Table 24 - Description of the "SOURCE MDF BUILDING PATHS" table

Field	Description		
ID_PATH_MDF_BUILDING	Unique ID of the path		
ID_MDF	ID of the MDF		
NB_OF_SECTIONS	Number of sections required to link the MDF and the building together		
BUILDING_SECTION_ID	ID of the section on which the building is located		
MDF_SECTION_ID	ID of the section on which the MDF is located		

Source: TERA Consultants

4.2.1.5 Source street cabinets to buildings paths

The "SOURCE_SC_BUILDING_PATHS" provides the start and end sections of the paths from the street cabinets to the buildings.

This table is used to retrieve the paths of the copper cables in the distribution level of the access network.

Table 25 - Description of the "SOURCE_SC_BUILDING_PATHS" table

Field	Description
ID_PATH_SC_BUILDING	Unique ID of the path
ID_SC	ID of the street cabinet

Model Documentation – Public Version

NB_OF_SECTIONS	Number of sections required to link the street cabinet and the building together	
SC_SECTION_ID	ID of the section on which the street cabinet is located	
BUILDING_SECTION_ID	ID of the section on which the building is located	

Source: TERA Consultants

4.2.1.6 Source MDF to street cabinets detailed paths

The "SOURCE_DETAILED_MDF_SC_PATHS" provides the detailed path from the MDF to street cabinets.

This table is used to retrieve the paths of the copper and fibre cables in the feeder level of the copper network.

Table 26 - Description of the "SOURCE_DETAILED_MDF_SC_PATHS" table

Field	Description
ID_PATH_MDF_SC	Unique ID of the path
SECTION_NUMBER	Index of the section within the path (starting from the MDF to the SC)
ID_SECTION	ID of the section crossed by the path
ID_MDF	ID of the MDF

Source: TERA Consultants

4.2.1.7 Source MDF to buildings detailed paths

The "SOURCE_DETAILED_MDF_BUILD_PATHS" provides the detailed path from the MDF to buildings.

This table is used to retrieve the paths of the fibre cables (in the fibre network and in the FWA network).

Table 27 - Description of the "SOURCE_DETAILED_MDF_BUILD_PATHS" table

Field	Description			
ID_PATH_MDF_BUILDING	Unique ID of the path			
SECTION_NUMBER	Index of the section within the path (starting from the MDF to the building)			
ID_SECTION	ID of the section crossed by the path			
ID_MDF	ID of the MDF			

Source: TERA Consultants

4.2.1.8 Source street cabinets to buildings detailed paths

The "SOURCE_DETAILED_SC_BUILDING_PATHS" provides the detailed path from the street cabinets to the buildings.

This table is used to retrieve the paths of the copper cables in the distribution level of the access network.

Table 28 - Description of the "SOURCE_DETAILED_SC_BUILDING_PATHS" table

Field	Description
ID_PATH_SC_BUILDING	Unique ID of the path

Model Documentation – Public Version

SECTION_NUMBER	Index of the section within the path (starting from the SC to the building)	
ID_SECTION	ID of the section crossed by the path	
ID_SC	Id of the street cabinet	

Source: TERA Consultants

4.2.1.9 Source core

The "SOURCE_CORE" table provides where the inter-EAS and Exchange-to-FDS links are located and what type of links are used.

Table 29 - Description of the "SOURCE_CORE" table

Field	Description			
ID_SECTION	ID of the section where an Exchange-to-DSLAM or inter-EAS link is deployed. The ID appears several times in case several cables or links are on the same section			
NETWORK_LEVEL	Whether inter-exchange ("CoreExchange") or inter-EAS ("CoreEAS")			
TYPE_OF_LINK	Type of link: microwave, submarine, DWDM or fibre			

Source: TERA Consultants

4.2.1.10 Source FWA

The "SOURCE FWA" table provides where the FWA sites are located.

This table is combined with the "SOURCE_MDF_BUILDING_PATHS" and "SOURCE_DETAILED_MDF_BUILD_PATHS" tables to obtain the path of the FWA fibre cables from the exchange (optical data frame co-located with the main data frame) to the FWA site.

Table 30 - Description of the "SOURCE_FWA" table

Field	Description
FWA_SITE	ID of the section where the FWA site is located

Source: TERA Consultants

4.2.2 Input parameters

The input parameters are gathered in the five tables aforementioned:

- "SOURCE PARAMETERS COMMON";
- "SOURCE PARAMETERS COPPER";
- "SOURCE_PARAMETERS_FIBRE";
- "SOURCE INVENTORY COPPER";
- "SOURCE_INVENTORY_FIBRE";

"SOURCE_PARAMETERS_COPPER" and "SOURCE_PARAMETERS_FIBRE" are very similar: the two tables contain similar if not identical parameters, with different parameter values. However, as the levels of networks and the implementation of design rules may differ in the two scenarios, those two tables are not identical.

The input parameters are the parameters that TERA have used in the model.

4.1

Table 31- "SOURCE_PARAMETERS_COMMON" table

ID	Unit	Parameter Value	Description
Duct110Diam	mm	110	External diameter of ducts used for local access and core network
Duct50Diam	mm	50	External diameter of ducts used for lead-in
DuctInefficiency110	%	0.4	40% of the 110 mm duct surface (set by the ext diameter) is not filled, 60% is filled
DuctInefficiency50	%	0.4	40% of the 50 mm duct surface (set by the ext diameter) is not filled, 60% is filled
SubductDiam	mm	14	External diameter of small subducts, in which small to medium fibre cables are protected, used for fibre cables and filled in ducts 110
SubductInnerDiam	mm	8.5	Inner capacity of small subducts. When cable diameter exceeds this limit, a large subduct is used.
LargeSubductDiam	mm	25	External diameter of large subducts in which large fibre cables are protected
Poleheight	М	6.5	Height of Poles
MaxSpanUrban	m	65	Distance between two poles in urban areas
MaxSpanRural	m	100	Distance between two poles in rural areas
DistanceManhole	m	100	Distance between two manholes (limited by drum length and pulling in tension limits)
ActivateLeadinThreshold		0	When 1, non-standard lead-in is not dimensioned. When 0, all lead-in assets are dimensioned
LeadinThreshold	m	100	Above 100 m in vertical length, the building is deemed non- standard
ActivateTSO		1	When 1, only areas inside the TSO-derived boundary are dimensioned for the access network. When 0, the nationwide network is dimensioned
IncurredLeadinRural	%	88.0%	Share of section-specific lead-in assets incurred by Chorus when lead-in threshold is activated (in rural areas)
IncurredLeadinUrban	%	98.4%	Share of section-specific lead-in assets incurred by Chorus when lead-in threshold is activated (in urban areas)
PeakThroughputperFWASector	kbps	22 000	Peak throughput per FWA cell

Model Documentation – Public Version

ID	Unit	Parameter Value	Description
SubOptimalPathMarkup	%	5%	As trenches from road to buildings do follow rectilinear paths, a mark-up is applied

Source: TERA Consultants

Table 32 - "SOURCE_PARAMETERS_COPPER"

ID	Unit	Parameter Value	Description
CuSurplusOHETP	М	value 1	Cable surplus at ETP
CuSurplusUGETP	М	1	Cable surplus at ETP
CuSurplusOHCCT	М	1	Cable surplus at distribution point
CuSurplusUGCCT	М	1	Cable surplus at distribution point
CuSurplusOHJoint	М	2	Cable surplus at joints
CuSurplusUGJoint	М	2	Cable surplus at joints
CuSurplusOHSC	М	1	Cable surplus at street cabinet
CuSurplusUGSC	М	1	Cable surplus at street cabinet
CuSurplusOHMDF	М	1	Cable surplus at MDF
CuSurplusUGMDF	М	1	Cable surplus at MDF
CuCurvatureOHLeadIn	%	2%	Curvature factor in Lead-In
CuCurvatureUGLeadIn	%	0.5%	Curvature factor in Lead-In
CuCurvatureOHDistr	%	2%	Curvature factor in Local Distribution
CuCurvatureUGDistr	%	1%	Curvature factor in Local Distribution
CuCurvatureOHFeeder	%	2%	Curvature factor in Feeder Network
CuCurvatureUGFeeder	%	1%	Curvature factor in Feeder Network
AverageToMax LeadInSurface	%	60%	On a section, if 2*n cables are led in from a CCT, there is on average 0.6*n cables along the section
CuCableLeadIn	#	1	# cables per dwelling at the lead-in level
CuPairsSDULeadIn	pairs	2	# pairs for single dwellings at the lead-in level
CuPairsUGMDULeadIn	pairs	2	# pairs for UG multidwellings at the lead-in level
CuPairsOHUrban MDULeadIn	pairs	1.5	# pairs for aerial multidwellings in urban areas at the lead-in level
CuPairsOHRural MDULeadIn	pairs	1.33	# pairs for aerial multidwellings in rural areas at the lead-in level
CuSparePairs Distribution	%	11%	% of spare pairs to add at the distribution level
CuSparePairsFeeder	%	11%	% of spare pairs to add at the feeder level
CuMaxOHUrban LeadInDist	М	300	Max distance b/w an aerial distribution point and the CCT in urban areas
CuMaxOHRural LeadInDist	М	300	Max distance b/w an aerial distribution point and the CCT in rural areas
CuMaxUGUrban LeadInDist	М	300	Max distance b/w a UG distribution point and the CCT in urban areas
CuMaxUGRural LeadInDist	М	300	Max distance b/w an UG distribution point and the CCT in rural areas
CuMaxOHUrban LeadInBuildingsMajor	#	4	Max number of buildings per aerial distr. point in urban areas
CuMaxOHRural	#	4	Max number of buildings per aerial distr.

Model Documentation – Public Version

ID	Unit	Parameter Value	Description
LeadInBuildingsMajor			point in rural areas
CuMaxOHUrbanLeadIn BuildingsMinor	#	4	Max number of buildings per aerial distr. point in urban areas
CuMaxOHRuralLeadIn BuildingsMinor	#	4	Max number of buildings per aerial distr. point in rural areas
CuMaxUGUrbanLeadIn Buildings	#	8	Max number of buildings per UG distr. point in urban areas
CuMaxUGRuralLeadIn Buildings	#	8	Max number of buildings per UG distr. point in rural areas

Source: TERA Consultants

Table 33 - "SOURCE_PARAMETERS_FIBRE" table

ID	Uni t	Parameter Value	Description
Fcount_FWA	FO	12	Fibre count per FWA cable
Fcount_Core_DSLAM	FO	12	Fibre count per Core_DSLAM cable
Fcount_Core_Exchange	FO	24	Fibre count per Core_Exchange cable
Fcount_Core_EAS	FO	24	Fibre count per Core_EAS cable
Fcount_Leadin	FO	2	Fibre count per dwelling in Lead-in
Fcount_Distr	FO	1	Fibre count per dwelling in Distribution
FbCoreUGCurvature	%	0.5%	Curvature factor for underground core cables
FbDistrOHCurvature	%	2%	Curvature factor for overhead distribution Cables
FbDistrUGCurvature	%	0.5%	Curvature factor for underground distribution Cables
FbLeadInOHCurvature	%	2%	Curvature factor for overhead lead-in Cables
FbLeadInUGCurvature	%	1%	Curvature factor for underground lead-in Cables
FbSurplusOHETP	m	1	Cable surplus at ETP
FbSurplusUGETP	m	1	Cable surplus at ETP
FbSurplusOHFAT	m	1	Cable surplus at fibre access terminal
FbSurplusUGFAT	m	1	Cable surplus at fibre access terminal
FbSurplusOHJoint	m	2	Cable surplus at joints
FbSurplusUGJoint	m	2	Cable surplus at joints
FbSurplusOHMDF	m	1	Cable surplus at MDF
FbSurplusUGMDF	m	1	Cable surplus at MDF
FbMaxOHUrbanLeadIn Dist	m	300	Max distance b/w an aerial FAT and the ETP in urban areas
FbMaxOHRuralLeadIn Dist	m	300	Max distance b/w an aerial FAT and the ETP in rural areas
FbMaxUGUrbanLeadIn Dist	m	300	Max distance b/w a UG FAT and the ETP in urban areas
FbMaxUGRuralLeadIn Dist	m	300	Max distance b/w an UG FAT and the ETP in rural areas
FbMaxOHUrbanLeadIn	#	4	Max number of buildings per aerial FAT in

Ref: 2014-20-DB-ML - BU models

Model Documentation – Public Version

ID	Uni t	Parameter Value	Description
BuildingsMajor			urban areas
FbMaxOHRuralLeadIn	#	4	Max number of buildings per aerial FAT in
BuildingsMajor	#	4	rural areas
FbMaxOHUrbanLeadIn	#	4	Max number of buildings per aerial FAT in
BuildingsMinor	#	4	urban areas
FbMaxOHRuralLeadIn	#	4	Max number of buildings per aerial FAT in
BuildingsMinor	π	7	rural areas
FbMaxUGUrbanLeadIn	#	8	Max number of buildings per UG FAT in
Buildings	π	0	urban areas
FbMaxUGRuralLeadIn	#	8	Max number of buildings per UG FAT in
Buildings	#	0	rural areas

Source: TERA Consultants

The two source inventory tables provide information about the cables used in the fibre and copper network.

Table 34 - "SOURCE_INVENTORY_COPPER" table

ID	Pairs	Diameter	Length	Description
AccessOH0004	4	15.4	500	4 pairs aerial copper cable
AccessOH0010	10	20.2	500	10 pairs aerial copper cable
AccessOH0015	15	20.8	500	15 pairs aerial copper cable
AccessOH0025	25	24.6	500	25 pairs aerial copper cable
AccessOH0050	50	24.5	500	50 pairs aerial copper cable
AccessUG0004	4	6.4	1000	4 pairs UG copper cable
AccessUG0005	5	6.7	500	5 pairs UG copper cable
AccessUG0007	7	7.5	2000	7 pairs UG copper cable
AccessUG0015	15	9	1000	15 pairs UG copper cable
AccessUG0025	25	13.5	2000	25 pairs UG copper cable
AccessUG0050	50	15.5	1000	50 pairs UG copper cable
AccessUG0100	100	21.	1000	100 pairs UG copper cable
AccessUG0200	200	27.2	500	200 pairs UG copper cable
AccessUG0300	300	27.1	500	300 pairs UG copper cable
AccessUG0400	400	37.4	200	400 pairs UG copper cable
AccessUG0800	800	43.8	500	800 pairs UG copper cable
AccessUG2000	2000	67	500	2000 pairs UG copper cable
LeadinOH0002	2	8.2	300	2 pairs lead-in aerial copper cable
LeadinOH0004	4	8.9	300	4 pairs lead-in aerial copper cable
LeadinUG0002	2	5.6	2500	2 pairs UG copper cable

Source: TERA Consultants

Table 35 - "SOURCE_INVENTORY_FIBRE" table

ID	Pairs	Diameter	Length	Description
Fb0002	2	5.0	2000	2F fibre cable
Fb0004	4	5.6	2000	4F fibre cable

Model Documentation – Public Version

ID	Pairs	Diameter	Length	Description
Fb0012	12	8.1	2000	12F fibre cable
Fb0018	18	10.0	2000	18F fibre cable
Fb0024	24	7.9	6000	24F fibre cable
Fb0036	36	10.0	6000	36F fibre cable
Fb0048	48	7.9	6000	48F fibre cable
Fb0072	72	10.0	6000	72F fibre cable
Fb0096	96	10.0	6000	96F fibre cable
Fb0120	120	12.0	6000	120F fibre cable
Fb0144	144	10.8	4000	144F fibre cable
Fb0216	216	13.4	4000	216F fibre cable
Fb0312	312	16.2	4000	312F fibre cable

Source: TERA Consultants

4.3 Calculations

4.3.1 Schematic overview of the local access network


The Access model computes four types of local access networks, from the exchange to the external termination point at the foot of the building:

- Copper overhead network;
- Copper underground network;
- Fibre overhead network;
- Fibre underground network.

In the copper networks, the dwellings are connected:

- From the external termination point (ETP) to a copper cable terminal (CCT) through the lead-in cable;
- From the CCT to a street cabinet through the distribution cable;
- From the street cabinet to the MDF. In some cases, the MDF is used as a street cabinet.

Figure 21 - Overview of the copper access network (whether overhead or underground)

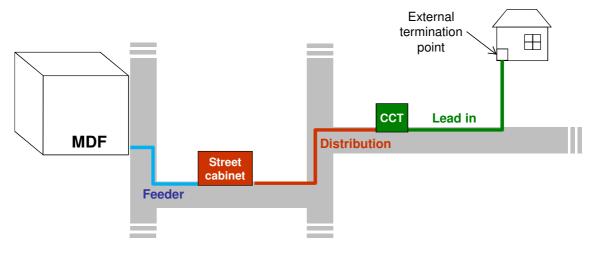


Source: TERA Consultants

In the fibre networks, the dwellings are connected:

- From the ETP to a fibre access terminal (FAT) through the lead-in cable;
- From the FAT directly to the MDF through a distribution cable following the shortest path from the FAT to the MDF.

Figure 22 - Overview of the fibre access network (whether overhead or underground)

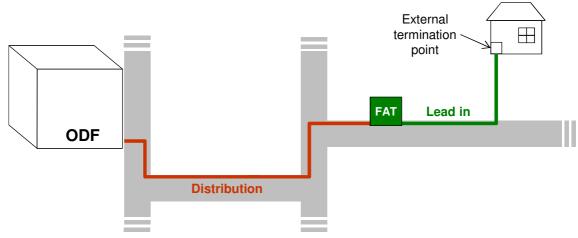

Source: TERA Consultants

Furthermore, sections can be shared with cables from the core network and from the fixed wireless access network (FWA). Hence, each section can host on its horizontal part:

- Lead-in cables:
- Distribution cables;
- Feeder cables (in the copper networks);
- Core and FWA cables.

4.3.2 Pre-processing of the geospatial data

4.3.2.1 TSO-derived boundary

As described in attachment J of the Commission's draft determination for UCLL and attachment H for UBA, the access network can be divided into two areas

- Areas <u>inside</u> the TSO-derived boundary ("the TSO") in which it is assumed for the purpose of this modelling that the hypothetic efficient operator would not be able to benefit from any capital contribution for the access network roll-out;
- Areas <u>outside</u> the TSO-derived boundary in which it is assumed that the hypothetic efficient operator would be able to benefits from capital contributions.

As the areas outside the TSO-derived boundary are fully funded, the network capital cost incurred to distribute these areas should not be accounted for. Thus:

Model Documentation – Public Version

- Areas inside the TSO are dimensioned to match the national demand, i.e. including the non-TSO lines in rear areas of the TSO;
- Areas outside the TSO are dimensioned to match the TSO demand, i.e. solely for the eventual TSO lines in rear areas of the non-TSO, but not for the local non-TSO lines.

However, in order to assess the costs of the nationwide network (including areas outside the TSO-derived boundary), the access network must also be modelled for the sections areas outside the TSO-derived boundary.

Thus, the TSO field is replicated into the TSO_ADJUSTED field.

- When the ActivateTSO = 1 (in the table SOURCE_PARAMETERS_COMMON),
 TSO ADJUSTED is identical to TSO.
- When ActivateTSO = 0, the field TSO_ADJUSTED is always true: all the sections are taken into account for the network access dimensioning.

The field TSO_ADJUSTED is added onto the table SOURCE_SECTIONS and updated at the very beginning of the modelling.

4.3.2.2 FWA coverage

FWA coverage is determined based on the distance from premises to active nodes:

- When a given premise is further than 5.3 km from the first active node (either active cabinet or MDF), it is covered by FWA;
- When premise is further than 6 km from the first active node, it is as well covered by FWA but benefits solely from voice-only services.

As the access network roll-out is not incurred by the hypothetic efficient operator outside the TSO-derived boundary, those are not cost optimised with FWA coverage. Hence, only the sections for which the field "TSO_ADJUSTED" is true are included in the table "PROCESS SERVED_BY_FWA".

Similarly, as underground infrastructures are based on the pre-2001 network, post-2001 sections are excluded from the FWA coverage.

The field "SERVED_BY_FWA" in the table "SOURCE_SECTIONS" provides whether premises within each section are covered by FWA or FTTH.

This field is updated when the model is run, thanks to the routine "SetFWACoverage()"

4.3.2.3 Post 2001 subdivisions

The network dimensioning is performed in a two-fold manner regarding post 2001 buildings:

- Underground infrastructures and lead-ins are dimensioned according to the actual network;
- All other assets are dimensioned according the network as it was before 2001.

Model Documentation – Public Version

For that purpose, the number of lines and buildings is duplicated in "PROCESS SECTION MODELLING" in order to dimension network assets according to their relevant inputs (pre 2001 lines or all lines).

4.3.3 Dimensioning the local demand (at the section level)

At first, the local demand at the section level is computed through several queries. The local demand is divided into single dwelling units (SDU) and multi dwellings units (MDU) as the design for copper pairs allocations are different.

As described supra (section 4.3.2.1), the demand is based:

- Either, when a section is inside the TSO, on the full demand of the rear area of this section (TSO and non-TSO);
- Or, when a section is outside the TSO, on the potential TSO demand of the rear area of this connection (most of the times, there is no rear area demand as non-TSO areas are usually remote areas).

Demand selection is performed in the queries described in the following subsections.

4.3.3.1 Local demand at the section level for the copper distribution network

The demand at the section level is made of two components¹²:

- The demand of the current section: all the SDU and MDU located on this section; and
- The demand of the rear area of the section: all the lines from SDU and MDU to street cabinets that go through the section (see the next figure).

This demand is addressed through the distribution cable of the major side of the section.

Having computed all the shortest paths required, it is then possible to compute the demand at the section level.


_

¹² See the Modeling approach in the "Model specification" paper.

Bitstream Access services

Model Documentation – Public Version

Figure 23 – Demand at the section level

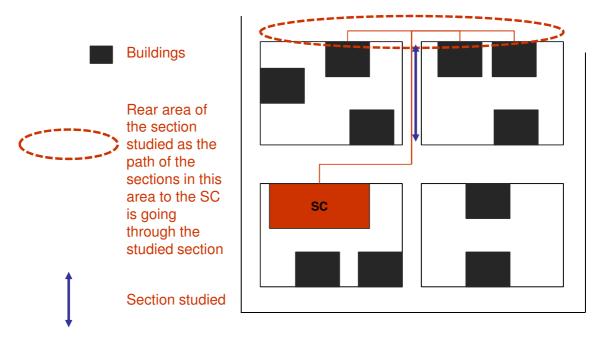

Source: TERA Consultants

These two data (distribution SDU and MDU) are computed through the queries "SELECT NB DISTR DWELLINGS PER SECTION" and "SELECT NB DISTR SDU PER SECTION". Each of the two queries consists of adding the SDU and MDU of an end-of-path section to every section of the path.


Similarly, when the section is trenched on both sides, a distribution cable is deployed on the minor side and distributes the SDU and MDU of the minor side of the section. Hence, the queries "SELECT NB DWELLINGS ON MINOR PER SECTION" and "SELECT NB SDU ON MINOR PER SECTION" compute the total number of dwellings and the number of SDU on the minor side of each section.

4.3.3.2 Local demand at the section level for the copper feeder network

As the dwelling units are distributed from street cabinets, the street cabinets are fed by the MDF of the exchange area.

When a path from an MDF to a street cabinet goes through a section, then a feeder cable that can feed the street cabinet (i.e. the distribution demand of the street cabinet) and the cabinet coverage area goes through the section. This "cabinet coverage area" of the cabinet *x* represents the potential feeder demand of other street cabinets whose path passes through the section of the street cabinet *x*.

Figure 24 - MDF and SC coverage areas, and feeder inputs per section

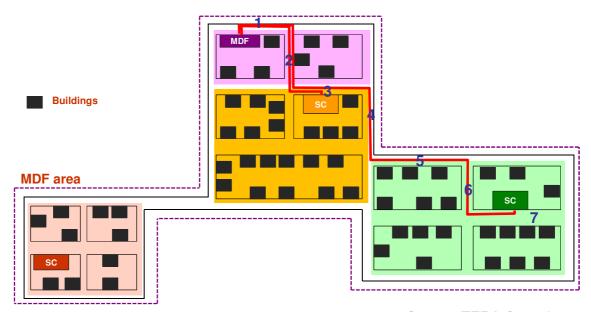

Source: TERA Consultants

The path from the MDF to the green SC passes through the section 3, on which the yellow street cabinet is located. Hence, the feeder demand of the sections 1 to 3 are formed by the distribution demand of the yellow street cabinet and by the distribution demand of the green street cabinet, while the feeder demand of the sections 4 to 7 are formed by the only distribution demand of the green street cabinet.

In a similar way as for the distribution local demand, the feeder demand at the section level is computed using the paths from MDFs to street cabinets and the distribution demand at the sections where street cabinets are located, an output of the aforementioned queries ("SELECT NB DISTR DWELLINGS PER SECTION" and "SELECT NB DISTR SDU PER SECTION").

The two outputs (feeder SDU and feeder dwellings per section) are computed through the query "SELECT FEEDER INPUTS PER SECTION".

4.3.3.3 Local demand at the section level for the fibre distribution networks

In the fibre access networks, there is no feeder network but only a distribution network. FATs are directly connected to the exchange (or optical distribution frame, ODF) through the shortest path.

The local distribution demand for the fibre networks is computed similarly to the local distribution demand for the copper networks, with the following differences:

- The relevant paths are those from MDF to buildings;
- The sections served by FWA are excluded from the computation as there is not fibre roll-out for those sections.

Plus, as the design rules for fibre allocations in lead-in make no difference between SDU and MDU, a single output per section, the number of distribution dwellings, is sought. This is made through the query "SELECT FIBRE INPUTS PER SECTION".

4.3.3.4 Core and FWA network cables on the section

4.3.3.4.1 FWA links and DSLAM-to-Exchange links

4.3.3.4.1.1 FWA links

The table "SOURCE_FWA" provides the location of all FWA sites. It is assumed FWA sites are connected to the closest exchange, following the shortest path algorithm, through a 12F fibre cable shared with the DSLAM-to-Exchange level.

The query "SELECT FWA INPUTS" computes the number of FWA links on each section. When several FWA sites belong to the same exchange area, it might occur that some sections will host several FWA links – shared within one or more cable.

In addition, in the fibre access networks (overhead and underground), sections that are distributed through FWA sites are not distributed through fibre, then are withdrawn from the calculation of the aforementioned distribution and feeder local demand.

4.3.3.4.1.2 DSLAM-to-Exchange core links

In the copper access networks, when a street cabinet is an active street cabinet, i.e. hosts a DSLAM, it is not fed through a copper cable belonging to the local access network, but through a fibre cable belonging to the core network: the SLU backhaul. The SLU backhauling is referred in the Access and Excel model as the "Core DSLAM" network.

It is assumed the Core DSLAM network uses a 12F fibre cable shared with the FWA network. Sections that host one or several Core DSLAM cables are computed through the queries "SELECT CORE DSLAM INPUTS" and "SELECT CORE DSLAM INPUTS interim", using the "SOURCE_MDF_SC_PATHS" and "SOURCE_DETAILED_MDF_SC_PATHS" tables.

As there is no street cabinet in the fibre access networks, the Core DSLAM is not relevant there.

4.3.3.4.1.3 Cables shared among FWA and DSLAM-to-Exchange

The length of cables used for FWA and DSLAM-to-Exchange is computed through the VBA function "GetBackhaulFibre".

It is assumed:

- 12F cables are used;
- One fibre is needed for each link;
- The length of cable is allocated according to capacity.

Thus, when m FWA links and n DSLAM-to-Exchange links share a section l long:

- $\left[\frac{m+n}{12}\right]$ cables are deployed, i.e. $\left[\frac{m+n}{12}\right]*l$;
- m/m+n share is allocated to FWA, i.e. $m/m+n*\left[\frac{m+n}{12}\right]*l$;
- n/m+n share is allocated to DSLAM-to-Exchange, i.e. $n/m+n*\left[\frac{m+n}{12}\right]*l$.

4.3.3.4.2 Exchange-to-First Data Switch core cables on the section

In the copper access networks as well as in the fibre access networks, the table "SOURCE_CORE" lists the sections where core links from the Exchange-to-First Data Switch ("Core Exchange") and inter-EAS ("Core EAS") networks are located – as many times as the section hosts a core cable – and whether those links are fibre cables (24F), submarine links or microwave links.

The query "SELECT CORE INPUTS" computes the number of fibre cables from the Core Exchange and Core EAS networks on each section.

4.3.3.4.3 Inter-EAS core cables on the section

This is addressed jointly with "DSLAM-to-Exchange core cables on the section" in paragraph 4.3.3.4.2.

4.3.4 Dimensioning at the building level

4.3.4.1 Overview

This section of the document aims at describing all the rules and assumptions used to dimension the network at the building level.

The number of assets dedicated to a building will depend on the number of dwellings in the building, the section configuration, the engineering rules, the lists of assets available and the parameters of the model, and are computed in the VBA routine "Dimensioning at the building level", for the four modelled networks (fibre and copper, overhead and underground). The output of the "Dimensioning at the building level" fills the table "PROCESS BUILDING MODELLING", given key characteristics of the building, recasted from "SOURCE_BUILDINGS" and other tables through Access SQL queries.

The table "PROCESS BUILDING MODELLING" does not include any section in the areas outside the TSO-derived boundary (according to the field TSO_ADJUSTED); as no lead-in asset has to be accounted for those areas.

Plus, when the lead-in threshold is activated (ActivateLeadinThreshold = 1) and when the building is non-standard, i.e. beyond 100 meters, then the lead-in assets are not taken into account for the building.

It is important to note that, by default, lead-in dedicated underground infrastructures (trenches, ducts, subducts) are not taken into account in the network costing as Chorus charged the end-user as part of the connection fees.

However, the distribution points and the poles that bear distribution points remain being dimensioned at that level.

Table 36 - Description of the "PROCESS BUILDING MODELLING" table

Field	Description	How is it filled?
ID_BUILDING	ID of the building	Query
ID_SECTION	ID of the section on which the building is located	Query

Model Documentation – Public Version

Field	Description	How is it filled?
HORIZONTAL_LENGTH	Horizontal length, from the beginning of the section to the building	Query
VERTICAL_LENGTH	Vertical length, from the road boundary to the building	Query
NB_TOTAL	Number of dwellings (incl. business and industrial)	Query
RIGHT_SIDE	Is the building located on the major side ("YES" or "NO")	Query
ROADWIDTH	Width of the road of the section on which the building is located	Query
URBAN	Is the building in Urban or Rural area ("YES" or "NO")	Query
NB_BUILDING	Number of buildings on the section on which the building is located	Query
NB_BUILDING_MINOR	Number of buildings on the minor side of the section on which the building is located	Query
HORIZONTAL_LENGTH_M AX_MINOR	On the minor side, maximum horizontal length on the section (from the beginning of the section to the last building)	Query
HORIZONTAL_LENGTH_MI N_MINOR	On the minor side, minimum horizontal length on the section (from the beginning of the section to the first building)	Query
HORIZONTAL_LENGTH_M AX_MAJOR	On the major side, maximum horizontal length on the section (from the beginning of the section to the last building)	Query
HORIZONTAL_LENGTH_MI N_MAJOR	On the major side, minimum horizontal length on the section (from the beginning of the section to the first building)	Query
SERVED_BY_FWA	Whether the building is distributed through an FWA site or through a point-to-point fibre cable (fibre network)	Query
LEAD-IN_PAIRS	Number of pairs per dwelling in the lead-in	VBA
LEADIN_UG_CABLE_LENG TH_CU	Length of lead-in copper cables dedicated to the building (when underground)	VBA
LEADIN_OH_CABLE_LENG TH_CU	Length of lead-in copper cables dedicated to the building (when overhead)	VBA
CCT_MINOR	Number of copper cable terminals on the minor side (when underground)	VBA
CCT_MAJOR	Number of copper cable terminals on the major side (when underground)	VBA
ССТ_ОН	Number of copper cable terminals on the section (when overhead)	VBA
DUCT_LENGTH_CU	Length of lead-in ducts dedicated to the building (copper network)	VBA
ONE_TRENCH	Is the section trenched once (Yes) or twice (No)	VBA
LEAD-IN_POLES_CU	Number of lead-in poles dedicated to the building (copper network)	VBA
LEAD-IN_TRENCH_CU	Length of the lead-in trench dedicated to a building (copper network)	VBA
NB_DUCTS_50_CU	Size of the dedicated trench (in multiples of 50 mm ducts) (copper network)	VBA
LEAD-IN_FCOUNT	Fibre count per dwelling in the leadin	VBA
LEADIN_UG_CABLE_LENG TH_FB	Length of lead-in fibre cables dedicated to the building (when underground)	VBA
LEADIN_OH_CABLE_LENG TH_FB	Length of lead-in fibre cables dedicated to the building (when overhead)	VBA
FAT_MINOR	Number of fibre access terminals on the minor	VBA

Model Documentation - Public Version

Field	Description	How is it filled?
	side (when underground)	
FAT_MAJOR	Number of fibre access terminals on the major side (when underground)	VBA
FAT_OH	Number of fibre access terminals on the section (when overhead)	VBA
DUCT_LENGTH_FB	Length of lead-in ducts dedicated to the building (fibre network)	VBA
SUBDUCT_LENGTH_FB	Length of lead-in subducts dedicated to the building (fibre network)	VBA
LEAD-IN_POLES_FB	Number of lead-in poles dedicated to the building (fibre network)	VBA
LEAD-IN_TRENCH_FB	Length of the leadin trench dedicated to a building (fibre network)	VBA
NB_DUCTS_50_FB	Size of the dedicated trench (in multiples of 50 mm ducts) (fibre network)	VBA


Source: TERA Consultants

4.3.4.2 Major and minor sides

In the underground scenario, the assets that are dedicated to a building (e.g. length of lead-in cable) depend on the position of the distribution points (CCT and FAT), in particular on which side of the section they are located.

Two configurations may appear for the trenches. There can be trenches on one side or on two sides of the section as it is described in the figure below.

Figure 25 - Section configuration

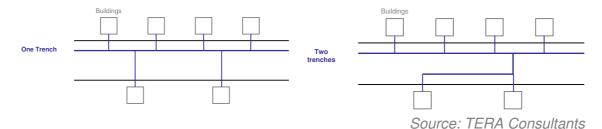

The VBA function IsSectionOneTrench() computes whether the section is trenched on the major side only or on both sides, by comparing the length of trenches in the two cases:

If $\#Buildings_{Minor} *Width_{Road}$ is greater than $Building\ Length_{Minor} + Width_{Road}$, where $Building\ Length_{Minor}$ represents the distance between the first and last buildings on the minor side, then it is cost effective to dig trenches on both sides of the section.

As described in the Model Reference Paper, costs are assumed to be optimised when distances are optimised, i.e. cables between section endpoints follow the shortest path.

In the overhead scenario, it is assumed the distribution cable, hence the CCT/FAT, is located only on the major side of the section.

Model Documentation – Public Version

4.3.4.3 Distribution points (CCT and FAT)

The number of distribution points (CCT when copper, FAT when fibre) depends on the metrics of the section, the number of buildings of the section and whether the section is trenched once or twice.

If the section is trenched once, then there are distribution points on the major side only and the distribution points are dimensioned as if all buildings were on the same side. If not, the distribution points are dimensioned on each side of the section.

The number of distribution points depends on two parameters:

- A maximum length between the distribution point and the building;
- A maximum number of buildings led in by the distribution point.

In the overhead case, the assumed number of distribution points depends on three parameters:

- A maximum length between the distribution point and the building;
- A maximum number of buildings on the major side led in by the distribution point;
- A maximum number of buildings on the minor side led in by the distribution point.

Hence, the number of distribution points is obtained by rounding up to the next integer the maximum of:

- Building length/(2 * Max length); and
- #Building/Max #buildings;

with the building length and the number of buildings on the relevant side of the section (or of the whole section).

The number of distribution points is capped by the number of buildings of the section.

$$\#DP = Min(\#Buildings, Max(\frac{Building\ length}{2*Max\ length}, \frac{\#Buildings}{Max\ \#buildings}))$$

The number of distribution points on the section is computed through the VBA functions GetCCTMajor(), GetCCTMinor(), GetCCTOH(), the interim function GetNbCCTperUGsidewalk(), and GetFATMajor(), GetFATMinor(), GetFATOH() and the interim function GetNbFATperUGsidewalk().

The distribution points are then uniformly distributed along the section, between the first and the last building of the side or section.

The segment between the first and last building is thus divided into distribution point areas (or DP area; CCT in the copper network, FAT in the fibre network): buildings are assigned to a DP area according to their horizontal location, and are led in through the DP of the area, which is located at the centre of the area.

The location of the DP that led in the current building is computed within the VBA function GetLeadInUGOneTrenchCableDist() (and equivalent for overhead – OH – and fibre).

Building length: length between the first and last building

Horizontal distance from DP to ETP

Figure 26 - Location of the distribution points

4.3.4.4 Lead-in cable (and joints)

As each dwelling has a dedicated lead-in cable, the number of cables per building is the number of dwellings of the building.

The length of the cable depends on the distance to the distribution point, whether the network is overhead (straight line distance) or underground (cable along the section, then orthogonal to the section), whether the section is trenched once or twice.

In the underground network, the length per dwelling of lead-in cables is the addition of:

- The vertical length: length from the building to the road + road width when the section is trenched once and the building is on the minor side.
 - A mark-up is added onto the vertical length in order to reflect the non-linearity of paths from the road edge to the buildings;
- The horizontal length: the horizontal length of the building minus the horizontal length of the distribution point that leads in it.


In the overhead scenario, the length per dwelling is the hypotenuse of the triangle formed the vertical length and the horizontal length.

Source: TERA Consultants

Bitstream Access services


Model Documentation – Public Version

Figure 27 - Underground and overhead lead-in lengths

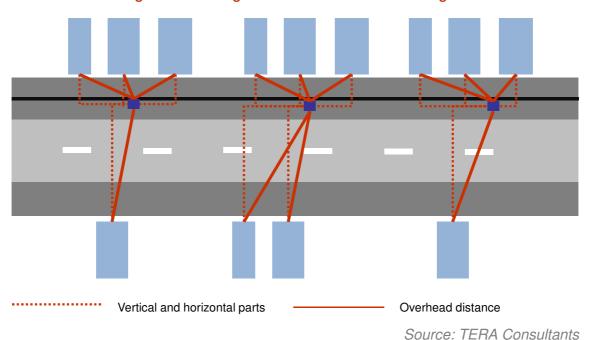

In addition, a sag factor is applied to the above length, in order to take into account the curvature of the cable, and surpluses are added at both ends of the cable.

Figure 28 - Curvature and surplus adjustments to cable length

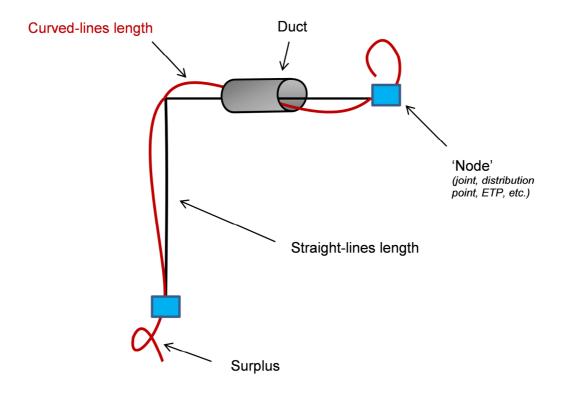

Source: TERA Consultants

Those lengths are co GetLeadinOHCableLength(), GetLeadinOHFibreLength().

 $\begin{tabular}{ll} computed & in & GetLeadinUGCableLength(), \\ GetLeadinUGFibreLength() & and \\ \end{tabular}$

Finally, no joints are modelled between the dwelling and the distribution point.

4.3.4.5 Ducts and subducts

Ducts are dedicated to each building and are rolled out on the vertical and horizontal parts of the path from the building to the distribution point. However, ducts can be shared among the dwellings of a building.

At the lead-in network level, it is assumed ducts with 50mm diameter are used.

Plus, in the fibre network, each fibre cable is protected within a dedicated subduct.

Ducts are shared on the basis of the cable surface (or subduct surface in the case of fibre cables):

$$\#ducts = \left\lceil \frac{Total\ cable\ surface}{Useful\ duct\ surface} \right\rceil = \left\lceil \frac{Total\ cable\ surface}{Duct\ surface * (1 - Inefficiency\ factor)} \right\rceil$$

Useful surface External diameter

Figure 29 - Filling of ducts

Source: TERA Consultants

The number of ducts needed per building is computed in GetNb_CuDucts50_Building() and GetNb_FbDucts50_Building().

The duct length is based on the length of cable per dwelling before curvature and surplus adjustments and is computed in GetCuLeadinUGDuctLength() and in GetFbLeadinUGDuctLength().

The subduct length is computed in the function GetFbLeadinUGSubductLength().

4.3.4.6 Trench

On the horizontal part, the trench is shared with the distribution, feeder and core networks and is computed within the "Dimensioning at the section level" using section averages instead of building-specific data.

On the vertical part, each building has a dedicated trench. However, buildings which are almost aligned orthogonally to the road can use a shared trench.

The vertical trench is based on the trench length, already resulting from trench sharing and computed during the geospatial work.

As for cables, a mark-up is added onto the vertical trench length in order to reflect the non-linearity of paths from the road edge to the buildings.

Model Documentation - Public Version

The trench length is computed in GetBuildingTrenchLength(). The size of the trench is the cut surface of the trench and can be represented as a multiple of the number of ducts, computed in the functions GetNb_CuDucts50_Building() and GetNb_FbDucts50_Building().

4.3.4.7 Poles

In the overhead networks, poles are located along the section and along the lead-in cables. The "horizontal" pole that bears the CCT/FAT is allocated to the lead-in (thus withdrawn to the distribution and feeder network levels).

Hence, for each building, a share of "horizontal pole" is added to the poles dedicated to the building. That share is computed as:

$$\frac{\#CCT_{section}}{\#Buildings_{section}}$$

When buildings are located on both sides of the road, the first pole is duplicated on the other side of the road. The share is then computed as:

$$2*\frac{\#CCT_{section}}{\#Buildings_{section}}$$

The dedicated poles are computed comparing the maximum allowed length between poles and the drum length of the cable used.

2

Figure 30 - Lead-in poles

Source: TERA Consultants

In the above figure,

- 1 pole is shared among the three buildings;
- 1 pole is dedicated to building #1, then 1.33 pole is allocated to building #1;
- 1.33 pole is allocated to building #2;

Model Documentation – Public Version

2.33 poles are allocated to building #3.

The lead-in poles are computed in the VBA functions GetCuLeadinPoles() and GetFbLeadinPoles().

4.3.5 Dimensioning at the section level

4.3.5.1 Overview

This section of the document aims at describing all the rules and assumptions used to dimension the network at the section level.

The assets of the section are computed in the VBA routine "Dimensioning at the section level" given:

- The distribution demand (copper and fibre) and the feeder demand (copper), computed through queries;
- How the section is trenched (on one side or on both sides), which is computed in the VBA routine "Dimensioning at the building level";
- How many distribution points are dimensioned for the section, which is also computed in the VBA routine "Dimensioning at the building level".

The number of assets will depend on the engineering rules, the lists of assets available and the parameters of the model.

The network is modelled for all areas, inside and outside the TSO-derived boundary, as FWA and core infrastructures are incurred by Chorus in any case. However, the access network assets are not taken into account in the areas outside the TSO-derived boundary.

Furthermore, when the lead-in threshold is activated, i.e. when the non-standard lead-in are not dimensioned, a discount rate is applied to the section-specific lead-in assets (share of underground infrastructures). A different rate is applied in rural and urban areas.

The output of the "Dimensioning at the section level" fills the table "PROCESS SECTION MODELLING", given key characteristics of the section, recasted from "SOURCE_SECTION", outputs at the building level, from "PROCESS BUILDING MODELLING" and other tables through Access SQL queries.

Table 37- Description of the "PROCESS SECTION MODELLING" table

Field	Description	How is it filled?
ID_SECTION	ID of the section	Query
LENGTH	Length of the section	Query
ROADWIDTH	Width of the section	Query
NB_DWELLING	Nb of dwellings belonging to the section	Query
NB_BUILDING	Nb of buildings belonging to the section	Query
URBAN	Urban or rural	Query
NB_SDU_MINOR	Nb of SDU on the minor side	Query

How is it		
Field	Description	filled?
NB_DWELLING_MINOR	Nb of dwellings on the minor side	Query
NB_SDU_DISTR	Nb of SDU distributed (minor, major and rear)	Query
NB_DWELLING_DISTR	Nb of dwellings distributed (minor, major and rear, copper network)	Query
NB_DWELLING_FIBRE	Nb of dwellings distributed (minor, major and rear, fibre network)	Query
NB_SDU_FEEDER	Nb of SDU fed (copper network)	Query
NB DWELLING FEEDER	Nb of dwellings fed (copper network)	Query
NB_DWELLING_PRE200	Replica of NB_DWELLING field adjusted to reflect pre 2001 network	Query
NB_SDU_MINOR_PRE20 01	Replica of NB_SDU_MINOR field adjusted to reflect pre 2001 network	Query
NB_DWELLING_MINOR_ PRE2001	Replica of NB_DWELLING_MINOR field adjusted to reflect pre 2001 network	Query
NB_SDU_DISTR_PRE200	Replica of NB_SDU_DISTR field adjusted to reflect pre 2001 network	Query
NB_DWELLING_DISTR_ PRE2001	Replica of NB_DWELLING_DISTR field adjusted to reflect pre 2001 network	Query
NB_DWELLING_FIBRE_P RE2001	Replica of DWELLING_FIBRE field adjusted to reflect pre 2001 network	Query
NB_SDU_FEEDER_PRE2 001	Replica of NB_SDU_FEEDER field adjusted to reflect pre 2001 network	Query
NB_DWELLING_FEEDER _PRE2001	Replica of NB_DWELLING_FEEDER field adjusted to reflect pre 2001 network	Query
HORIZONTAL_LENGTH_ MAX	Length to the last building of the sections	Query
BUILDING_LENGTH_MIN OR	Length between extreme buildings on the minor side	Query
TWO_TRENCHES	Whether the section is trenched on the major side ("False") or on both sides ("True")	Query
CCT_MINOR	Number of CCT on the minor side (underground, copper network)	Query
CCT_MAJOR	Number of CCT on the major side (underground, copper network)	Query
CCT_OH	Number of CCT on the major side (overhead, copper network)	Query
FAT_MINOR	Number of FAT on the minor side (underground, fibre network)	Query
FAT_MAJOR	Number of FAT on the major side (underground, fibre network)	Query
FAT_OH	Number of FAT on the major side (overhead, fibre network)	Query
SERVED_BY_FWA	Whether the section is distributed through an FWA site or through a point-to-point fibre cable (fibre network)	Query
MDF_ON_SECTION	Number of exchanges (MDF or ODF) on the section	Query
SC_ON_SECTION	Number of MDF on the section	Query
FWA	Number of cables for FWA	Query

Model Documentation – Public Version			
Field	Description	How is it filled?	
CORE_DSLAM	Number of cables for core DSLAM- Exchange	Query	
CORE_EXCHANGE	Number of cables for core Exchange-FDS	Query	
CORE_EAS	Number of cables for core inter-EAS	Query	
PAIRS_UG_DISTR_MAJ OR	Number of pairs for the distribution on the major side (underground, copper network)	VBA	
PAIRS_UG_DISTR_MINO R	Number of pairs for the distribution on the minor side (underground, copper network)	VBA	
PAIRS_OH_DISTR	Number of pairs for the distribution on the major side (overhead, copper network)	VBA	
PAIRS_UG_FEEDER	Number of pairs for the feeder (underground, copper network)	VBA	
PAIRS_OH_FEEDER	Number of pairs for the feeder (overhead, copper network)	VBA	
LENGTH_UG_DISTR_MA JOR_CU	Length of the distribution cable on the major side (underground, copper network)	VBA	
LENGTH_UG_DISTR_MI NOR_CU	Length of the distribution cable on the minor side (underground, copper network)	VBA	
LENGTH_OH_DISTR_CU	Length of the distribution cable on the major side (overhead, copper network)	VBA	
LENGTH_UG_FEEDER_ CU	Length of the feeder cable (underground, copper network)	VBA	
LENGTH_OH_FEEDER_ CU	Length of the feeder cable (overhead, copper network)	VBA	
JOINTS_UG_DISTR_MIN OR CU	Number of joints for the distribution on the minor side (underground, copper network)	VBA	
JOINTS_UG_DISTR_MAJ OR CU	Number of joints for the distribution on the major side (underground, copper network)	VBA	
JOINTS_OH_DISTR_CU	Number of joints for the distribution (overhead, copper network)	VBA	
JOINTS_UG_FEEDER_C U	Number of joints for the feeder (underground, copper network)	VBA	
JOINTS_OH_FEEDER_C U	Number of joints for the feeder (overhead, copper network)	VBA	
JOINTS_FWA	Number of joints for FWA	VBA	
JOINTS_CORE_DSLAM	Number of joints for core Exchange-to- DSLAM network	VBA	
JOINTS_CORE_EXCHAN GE	Number of joints for core FDS-to-Exchange network	VBA	
JOINTS_CORE_EAS	Number of joints for core inter-EAS network	VBA	
SIZE_TRENCH_MINOR_ CU	Size of the trench of the minor side (cut surface expressed in multiples of 110 mm duct's surfaces, copper network)	VBA	
LENGTH_TRENCH_MIN OR_LEAD_IN_CU	Length of the minor trench (allocated to lead-in, copper network)	VBA	
LENGTH_TRENCH_MIN OR_DISTR_CU	Length of the minor trench (allocated to distribution, copper network)	VBA	
SIZE_TRENCH_CROSS_ CU	Size of the crossroad trench (copper network)	VBA	
LENGTH_TRENCH_CRO SS DISTR CU	Length of the crossroad trench (fully allocated to distribution, copper network)	VBA	
SIZE_TRENCH_MAJOR_	Size of the major trench	VBA	

Field	Description	How is it
CU	·	filled?
LENGTH TRENCH MAJ	Length of the major trench (allocated to	
OR_LEAD_IN_CU	lead-in, copper network)	VBA
LENGTH TRENCH MAJ	Length of the major trench (allocated to	
OR DISTR CU	distribution, copper network)	VBA
LENGTH_TRENCH_MAJ	Length of the major trench (allocated to	\/D.A
OR_FEEDER_CU	feeder, copper network)	VBA
LENGTH_TRENCH_MAJ	Length of the major trench (allocated to	VBA
OR_FWA_CU	FWA, copper network)	VDA
LENGTH_TRENCH_MAJ	Length of the major trench (allocated to core	VBA
OR_CORE_DSLAM_CU	DSLAM-Exchange, copper network)	
LENGTH_TRENCH_MAJ	Length of the major trench (allocated to core	\
OR_CORE_EXCHANGE_	Exchange-FDS, copper network)	VBA
CU LENGTH TRENCH MAJ	Length of the major trench (allocated to core	
OR CORE EAS CU	inter-EAS, copper network)	VBA
	Length of the ducts allocated to the	
LENGTH_DUCTS_DISTR	distribution (major + cross + minor, copper	VBA
_CU	network)	
LENGTH_DUCTS_FEED	Length of the ducts allocated to the feeder	\/D.A
ER_CU	(copper network)	VBA
LENGTH_DUCTS_FWA_	Length of the ducts allocated to FWA	VBA
CU	(copper network)	VDA
LENGTH_DUCTS_CORE	Length of the ducts allocated to core	VBA
_DSLAM_CU	DSLAM-Exchange (copper network)	VB/
LENGTH_DUCTS_CORE	Length of the ducts allocated to core	VBA
_EXCHANGE_CU	Exchange-FDS (copper network)	
LENGTH_DUCTS_CORE EAS CU	Length of the ducts allocated to core inter- EAS (copper network)	VBA
LENGTH_SUBDUCTS_F		
WA	Length of the subducts dedicated to FWA	VBA
LENGTH SUBDUCTS C	Length of the subducts dedicated to core) (D 4
ORE DSLAM	DSLAM-Exchange	VBA
LENGTH_SUBDUCTS_C	Length of the subducts dedicated to core	\/D.A
ORE_EXCHANGE	Exchange-FDS	VBA
LENGTH_SUBDUCTS_C	Length of the subducts dedicated to core	VBA
ORE_EAS	inter-EAS	V D/ (
POLES_DISTR_CU	Number of poles allocated to distribution	VBA
	(copper network)	
POLES_FEEDER_CU	Number of poles allocated to feeder (copper	VBA
MANHOLES MINOR DIS	network) Number of manholes on the minor side (fully	
TR CU	allocated to distribution, copper network)	VBA
MANHOLES_MAJOR_DIS	Number of manholes on the major side	
TR CU	(allocated to distribution, copper network)	VBA
MANHOLES MAJOR FE	Number of manholes on the major side	\/D ^
EDER_CU	(allocated to feeder, copper network)	VBA
MANHOLES_MAJOR_FW	Number of manholes on the major side	VBA
A_CU	(allocated to FWA, copper network)	VDA
MANHOLES MAJOR CO	Number of manholes on the major side	
RE_DSLAM_CU	(allocated to core Exchange-to-DSLAM,	VBA
	copper network)	

Model Documentation – Public Version		
Field	Description	How is it filled?
MANHOLES_MAJOR_CO RE_EXCHANGE_CU	Number of manholes on the major side (allocated to core FDS-to-Exchange, copper network)	VBA
MANHOLES_MAJOR_CO RE_EAS_CU	Number of manholes on the major side (allocated to core inter-EAS, copper network)	VBA
FIBRE_FWA	Length of fibre (12F) for FWA	VBA
FIBRE_CORE_DSLAM	Length of fibre (12F) for core Exchange-to- DSLAM	VBA
FIBRE_CORE_EXCHANG E	Length of fibre (24F) for core FDS-to- Exchange	VBA
FIBRE_CORE_EAS	Length of fibre (24F) for core inter-EAS	VBA
FCOUNT_UG_DISTR_MA JOR	Fibre count for the distribution on the major side (underground, fibre network)	VBA
FCOUNT_UG_DISTR_MINOR	Fibre count for the distribution on the minor side (underground, fibre network)	VBA
FCOUNT_OH_DISTR	Fibre count for the distribution on the major side (overhead, fibre network)	VBA
LENGTH_UG_DISTR_MA JOR FB	Length of the distribution cable on the major side (underground, fibre network)	VBA
LENGTH_UG_DISTR_MI NOR FB	Length of the distribution cable on the minor side (underground, fibre network)	VBA
LENGTH_OH_DISTR_FB	Length of the distribution cable on the major side (overhead, fibre network)	VBA
JOINTS_UG_DISTR_MIN OR FB	Number of joints for the distribution on the minor side (underground, fibre network)	VBA
JOINTS_UG_DISTR_MAJ OR FB	Number of joints for the distribution on the major side (underground, fibre network)	VBA
JOINTS_OH_DISTR_FB	Number of joints for the distribution (overhead, fibre network)	VBA
SIZE_TRENCH_MINOR_ FB	Size of the trench of the minor side (cut surface expressed in multiples of 110 mm duct's surfaces, fibre network)	VBA
LENGTH_TRENCH_MIN OR_LEAD_IN_FB	Length of the minor trench (allocated to lead-in, fibre network)	VBA
LENGTH_TRENCH_MIN OR_DISTR_FB	Length of the minor trench (allocated to distribution, fibre network)	VBA
SIZE_TRENCH_CROSS_ FB	Size of the crossroad trench (fibre network)	VBA
LENGTH_TRENCH_CRO SS_DISTR_FB	Length of the crossroad trench (fully allocated to distribution, fibre network)	VBA
SIZE_TRENCH_MAJOR_ FB	Size of the major trench	VBA
LENGTH_TRENCH_MAJ OR_LEAD_IN_FB	Length of the major trench (allocated to lead-in, fibre network)	VBA
LENGTH_TRENCH_MAJ OR_DISTR_FB	Length of the major trench (allocated to distribution, fibre network)	VBA
LENGTH_TRENCH_MAJ OR_FWA_FB	Length of the major trench (allocated to FWA, fibre network)	VBA
LENGTH_TRENCH_MAJ OR_CORE_EXCHANGE_ FB	Length of the major trench (allocated to core Exchange-FDS, fibre network)	VBA

Model Documentation – Public Version

Field	Description	How is it filled?
LENGTH_TRENCH_MAJ OR_CORE_EAS_FB	Length of the major trench (allocated to core inter-EAS, fibre network)	VBA
LENGTH_DUCTS_DISTR _FB	Length of the ducts allocated to the distribution (major + cross + minor, fibre network)	VBA
LENGTH_DUCTS_FWA_ FB	Length of the ducts allocated to FWA (fibre network)	VBA
LENGTH_DUCTS_CORE _EXCHANGE_FB	Length of the ducts allocated to core Exchange-FDS (fibre network)	VBA
LENGTH_DUCTS_COREEAS_FB	Length of the ducts allocated to core inter- EAS (fibre network)	VBA
LENGTH_SUBDUCTS_DI STR_FB	Length of the subducts allocated to the distribution (major + cross + minor, fibre network)	VBA
POLES_DISTR_FB	Number of poles allocated to distribution (fibre network)	VBA
MANHOLES_MINOR_DIS TR_FB	Number of manholes on the minor side (fully allocated to distribution, fibre network)	VBA
MANHOLES_MAJOR_DIS TR_FB	Number of manholes on the major side (allocated to distribution, fibre network)	VBA
MANHOLES_MAJOR_FW A_FB	Number of manholes on the major side (allocated to FWA, fibre network)	VBA
MANHOLES_MAJOR_CO RE_EXCHANGE_FB	Number of manholes on the major side (allocated to core FDS-to-Exchange, fibre network)	VBA
MANHOLES_MAJOR_CO RE_EAS_FB	Number of manholes on the major side (allocated to core inter-EAS, fibre network)	VBA
FIBRE_FWA_FB	Length of fibre (12F) for FWA in the fibre scenario	VBA
LENGTH_SUBDUCTS_F WA_FB	Length of sub-duct for FWA in the fibre scenario	VBA
JOINTS_FWA_FB	Number of joints for FWA in the fibre scenario	VBA

Source: TERA Consultants

4.3.5.2 Selection of cable

4.3.5.2.1 Distribution and feeder

Each level of network (distribution and feeder) is addressed with one or several dedicated cables.

Given the local demand (distribution and feeder) and whether the section is trenched on the major side or on both side, and given the pairs/fibre allocation per SDU and MDU and spare capacity, the smallest cables available are chosen to address the local demand.

Local demand =
$$\left(\#SDU * \frac{Pairs}{SDU} + \#MDU * \frac{Pairs}{MDU} \right) * (1 + spare capacity)$$

Model Documentation - Public Version

When the local demand exceeds the largest cable available (2000 pairs in copper underground, 50 pairs in copper overhead, 312F in fibre, overhead and underground), the local demand is addressed with multiples of the largest cable.

That design rule results from roll-outs best practices similar in other countries.

E.g. in copper overhead, if there is a distribution demand of 36 SDU and 18 MDU, hence $(36^* \text{ pairs/SDU}+18^* \text{ pairs/MDU})^*(1+\text{spare})$ i.e. $(36^*2+18^*1.5)^*(1+1/9)=110$, then this demand is addressed with three overhead 50 pairs copper cables.

The choice and the number of cables is computed through the VBA module "Equipment selection" and through the VBA functions GetDistrUGPairsMajor(), GetDistrUGNbCablesMajor() and equivalent functions for minor side, feeder level, overhead and fibre in the VBA modules "Copper cables" and "Fibre cables".

4.3.5.2.2 FWA and core

It is assumed the Core Exchange and Core EAS always use 24F fibre cables, as many times as there is a Core Exchange/Core EAS link on the section (cf. 4.3.3.4).

FWA and Core DSLAM use 12F shared cables, using one fibre for each link (cf. 4.3.3.4).

As there is no Core DSLAM network level in the fibre network, and as the FWA inventory stems from asset sharing, the FWA inventory differs between the fibre and copper scenarios. Fields related to FWA are then duplicated for the fibre scenario with the suffix "_FB".

4.3.5.3 Length of cable

4.3.5.3.1 Distribution

When underground, the distribution cables are located on the major side as well as on the minor side when the section is trenched twice. When overhead, the distribution cable is located only on the major side.

4.3.5.3.1.1 Major side

Once the number of cables is known, the length of cable depends on the length of the section and of the location of buildings on the section and whether the section has a rear area.

When there is no rear area, the distribution cable is deployed from the start of the section to the location of the last building of the section, i.e. is "Horizontal_Length_Max" long.

When there is a rear area, the distribution cable is deployed from the start to the end of the section, i.e. is "Length" long.

The rear area is measured by the difference between the distribution demand ("Nb_Dwelling_Distr") and the dwellings of the section ("Nb_Dwelling"). If Nb_Dwelling_Distr > Nb_Dwelling, then the section has a rear area.

The length is then multiplied by the number of cables (cf. 4.3.5.2), by a curvature factor and eventual surplus at joints (cf. 4.3.4.4).

Model Documentation – Public Version

Those computations are made in the VBA functions GetDistrMajorUGCableNominalLengthperCable(),

GetDistrMajorUGCableNominalLength() and GetDistrMajorUGCableLength() and the equivalent functions for overhead and fibre.

4.3.5.3.1.2 Minor side

When the section is trenched twice, there is a distribution cable on the minor side.

Nominal length_{minor} = Road width + Building length_{minor},

where the $Building \, length_{minor}$ represents the distance between the first and last buildings on the minor side.

The length is then multiplied by the number of cables (cf. 4.3.5.2), by a curvature factor and surplus at joints.

Those computations are made in the VBA functions GetDistrMinorUGCableNominalLengthperCable(),

GetDistrMinorUGCableNominalLength() and GetDistrMinorUGCableLength() and the equivalent functions for fibre.

4.3.5.3.2 Feeder

If a feeder cable goes through a section, then it is assumed it always goes from the start to the end of the section, i.e. is "Length" long. The length is then multiplied by the number of cables (cf. 4.3.5.2), by a curvature factor and eventual surplus at joints.

Those computations are made in the VBA functions GetFeederUGCableNominalLengthperCable(), GetFeederUGCableNominalLength() and GetFeederUGCableLength() and the equivalent functions for overhead and fibre.

4.3.5.3.3 FWA and core

If an FWA or core link goes through a section, then it is assumed it always goes from the start to the end of the section, i.e. is "Length" long. The length is then multiplied by the number of cables (cf. 4.3.5.2), by a curvature factor and eventual surplus at joints.

Those computations are made in the VBA function GetCoreFibre() and GetBackhaulFibre().

4.3.5.4 Number of joints

4.3.5.4.1 Distribution

4.3.5.4.1.1 Major side

The number of joints depends on the length of cable (per cable), the drum length of the cable used, existence of other equipment that can be used as joints and whether there is a rear area to the section.

When there are several cables per network level (e.g. three 50-pairs cables in for overhead copper distribution), the computation of the joints is made first for each cable, then multiplied by the number of cables and adjusted with the other equipment and rear area.

Model Documentation - Public Version

It is assumed that CCTs/FATs on the major side, MDFs/ODFs and street cabinets can replace joints.

Plus, it is assumed that a joint must be located at the end of the section at the intersection with the rear area if there is a rear area to the section.

The number of joints of the major side is computed in the VBA function GetDistrUGJointsMajor_Cu() and the equivalent function for overhead and fibre.

4.3.5.4.1.2 Minor side

When there is a minor distribution cable, the number of joints depends on the length of cable (per cable), the drum length of the cable used and existence of other equipment that can be used as joints – namely CCT/FAT on minor.

It is assumed the CCT/FAT on the minor side can replace joints.

Plus, it is assumed there is at least one joint at the intersection with the major side.

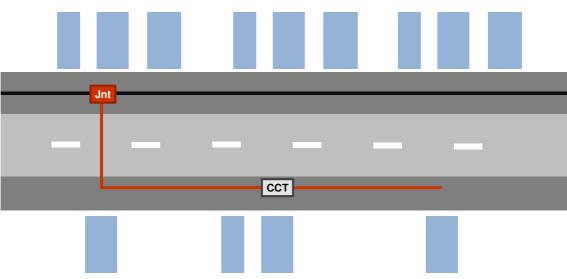


Figure 31 - Joints on the minor side

Source: TERA Consultants

The number of joints on the minor side is computed in the VBA functions GetDistrUGJointsMinor Cu() and GetDistrUGJointsMinor Fb().

4.3.5.4.2 Feeder

The number of joints on feeder is computed in a similar manner as for the distribution network level. It depends on the length of cable (per cable), whether there is a feeder rear area and existence of other equipment that can be used as joints (street cabinet, MDF/ODF).

The computation is made in the VBA function GetFeederUGJoints() and is equivalent for overhead and fibre.

4.3.5.4.3 FWA and core

The number of joints on FWA and core is computed in a similar manner as for the distribution network level. It depends solely on the length of cable (per cable) and on the fibre cable used ([] or []).

Model Documentation - Public Version

The computation is made in the VBA function GetCoreJoints() for Core Exchange and Core EAS and GetBackhaulJoints() for Core DSLAM and FWA.

As Core DSLAM and FWA use shared cables, they also share joints using the same allocation key.

4.3.5.5 Trenches and ducts

Trenches and ducts are dimensioned according to pre-2001 network, using pre-2001 demand inputs. In this section, dwellings and buildings refer to dwellings and buildings built before 2001.

4.3.5.5.1 Length of trenches and ducts

In the copper network, it is assumed the ducts can be shared among distribution and feeder. In the fibre network, a duct is dedicated to distribution.

If there is a minor side, a duct is dedicated to the minor distribution cable, crossing the road and along the minor side.

In both networks, it is assumed the ducts can be shared among FWA and core networks.

Recall that the lead-in trenches are already dimensioned in the VBA routine "Dimensioning at the building level".

Hence, three sets of ducts are dimensioned on each section.

However, the trenches are shared among

- Lead-In the segment of Lead-In on the horizontal part;
- Distribution and feeder; and
- FWA and core, and allocated on the basis of ducts' surface.

Plus, on the major side, trenches – and ducts – are as long as the longest cable of the section. In particular, if there is a feeder, FWA or core cable on the section, the duct is as long as the section, even if the distribution cable goes only until the last building of the section.

For each trench (major, minor and cross), the size of the trench is uniform along the trench.

The trench is allocated on the basis of the duct surface area to the lead-in, the distribution, the feeder, the FWA link and the core network.

4.3.5.5.2 Size of the trench

For each section, it is assumed that the lead-in ducts are uniform along the section and can be approximated as an average according to the following calculation.

The lead-in share of the trench is dimensioned according to:

- The average number of dwellings per building on the section
- The resulting number of 50 mm ducts per building
- The average cut surface of ducts, following the formula:

Model Documentation - Public Version

Average number of ducts

=
$$Av - to - max_{factor} * ducts per building * \frac{\# buildings}{2 * \# CCT}$$

Indeed, if the section is divided into CCT/FAT areas, then there are ducts dimensioned for $\frac{\#buildings}{\#CCT}$ at each CCT/FAT, i.e. at maximum $\frac{\#buildings}{2*\#CCT}$ on both sides of the CCT/FAT.

This resultant maximum has to be adjusted with an average-to-max ratio, since the cut surface of ducts decreases with distance to the CCT (see figure below). The average-to-max ratio can be estimated at 60%¹³.

This is computed in the VBA functions GetSizeTrenchLeadIn_Cu() and GetSizeTrenchLeadIn_Fb() and it is assumed the lead-in share of the trench size is the same on major and on minor sides.

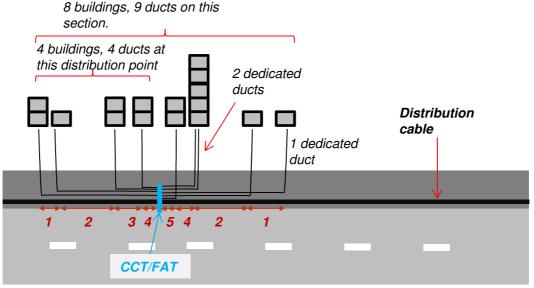


Figure 32 - Average surface of lead-in ducts

Source: TERA Consultants

In the copper network, the distribution and feeder 110 mm duct(s) is dimensioned and allocated according to the cross-section surface of cables¹⁴ (same methodology as 4.3.4.5). In the fibre network, the dimensioning and allocation to the different network levels (feeder, distribution, lead-in, etc.) is made on the basis of the subducts' surface, instead of cable surface, as each fibre cable is protected in a dedicated subduct.

It is computed in the VBA functions GetSizeTrenchMajor_Cu_DistrandFeeder() and GetSizeTrenchMajor_Fb_Distr().

In the core network, the 110 mm duct(s) is dimensioned and allocated according to the surface of the subduct used for each cable.

-

¹³ With 8 buildings led in through a CCT/FAT, the average cut surface of ducts on one side or the other of the CCT can by estimated by the mean of the series 1 to 4, i.e. 2.5, hence an average to max ratio of 5/8.

¹⁴ See glossary

Model Documentation - Public Version

It is computed in the VBA functions GetSizeTrenchMajor_Cu_OtherNetworks() and GetSizeTrenchMajor Fb OtherNetworks().

The total sizes of the trenches are then:

- On the major side, the sum of
 - The average lead-in cut surface¹⁵,
 - o The number of ducts for distribution and feeder,
 - The number of ducts for FWA and core.
- · On the minor side, the sum of
 - o The average lead-in cut surface,
 - The number of ducts for minor distribution.
- On the cross road, the number of ducts for minor distribution.

The sizes of trenches are computed in the VBA functions GetSizeTrenchMajor_Cu(), GetSizeTrenchMinor Cu() and GetSizeTrenchCross Cu().

4.3.5.5.3 Allocation keys

The trenches on minor and major sides of the road are allocated according to the duct surface.

Hence, the allocation key for the lead-in is (on minor and major) the ratio of the average lead-in cut surface to the trench size (minor or major).

The allocation key for distribution is the compounded ratio (and in an equivalent manner for feeder):

$$\frac{Cable \ surface_{distr}}{Cable \ surface_{distr+feeder}}* \frac{\#ducts_{distr+feeder}}{Size_{trench}}$$

The allocation key for one of the core networks is, in a similar way

$$\frac{\#cables_X}{\#cables_{FWA+Core}}*\frac{\#ducts_{FWA+Core}}{Size_{trench}}$$

For FWA and Core DSLAM, $\#cables_X$ is the allocation key among FWA+Core DSLAM times the number of cables needed for FWA and Core DSLAM.

When the lead-in threshold is activated, a discount may be applied to the lead-in to reflect the share of non-standard lead-in, which is not incurred by Chorus. A different rate applies to urban and rural areas, as the share of the non-standard lead-in is significantly greater in rural areas.

Ultimately, the length of trench allocated to each level of the network is the product of the length of trench (cf. 4.3.5.5.1) with the allocation key.

The allocation keys are computed in the VBA module "Allocations".

¹⁵ Expressed in terms of 110 mm duct surface, using the ratio (50/110)².

Bitstream Access services

Model Documentation – Public Version

4.3.5.5.4 Ducts

110 mm ducts are allocated to the distribution, feeder, FWA, Core DSLAM, Core Exchange and Core EAS in the copper network, and distribution, FWA, Core Exchange and Core EAS in the fibre network.

It shall be noted that 50 mm ducts dedicated to buildings are already computed in the "Dimensioning at the building level" VBA routine.

The length of ducts can be retrieved by multiplying the outputs of the trenches calculations, e.g. for distribution:

$$Length_{duct}^{distr} = Length_{trench}^{distr} * Size_{trench}$$

Indeed,

$$Length_{trench}^{distr}*Size_{trench} = Length_{trench}*\frac{Cable\; surface_{distr}}{Cable\; surface_{distr+feeder}}*\#ducts_{distr+feeder}$$

And $\frac{Cable\ surface_{distr}}{Cable\ surface_{distr+feeder}}* \# ducts_{distr+feeder}$ is the share of duct allocated to distribution.

The length of ducts is computed in the "Dimensioning at the section level" VBA routine through the command lines

and following.

4.3.5.6 Subducts

Subducts are allocated to the FWA and core networks on the basis of one subduct per cable, and to the distribution in the fibre network, on the same basis of one subduct per cable.

Subducts' lengths are computed through the VBA functions GetSubductLength() and GetLengthDistrSubduct().

Two types of subducts can be used:

- 10/14 mm diameter subduct (standard subduct);
- 20/25 mm diameter subduct (large subduct).

When cable diameter exceeds 8.5 mm, a large subduct must be used.

Subduct selection is performed within GetSizeTrenchMajor_Fb_Access(), GetSizeTrenchCross_Fb() and GetSizeTrenchMinor_Fb() functions.

4.3.5.7 Manholes

4.3.5.7.1 Dimensioning

The number of manholes depends on the manholes per cable in distribution, feeder, FWA and core.

Model Documentation - Public Version

For each network level, the number of manholes per cable determines the need of manholes. E.g. for the distribution, the need for manholes is set by $\frac{\#CCT + \#Joints}{\#Cables}$.

It is assumed that all equipment for each cable are co-located, so the total need for manholes for each side of the section is the maximum need for manholes per network level.

Plus, the number of manholes is computed comparing the maximum allowed distance between manholes – due to pulling in tension limits – and the need of manholes.

This computation is made in the VBA functions GetManholesMinor_Fb(), GetManholesMajor_Fb() and equivalent for copper.

4.3.5.7.2 Allocations

Manholes allocation follows the same allocation keys as for trenches.

It is assumed that no manhole is allocated to the lead-in level, so the share of lead-in manhole is shifted to the distribution level.

$$\#manholes_{major}^{distr} = \#manholes_{major} * (key_{major}^{distr} + key_{major}^{lead\ in})$$

The allocated number of manholes is allocated in the "Dimensioning at the section level" VBA routine through the command lines

ProcessModellingRecordset("MANHOLES_MAJOR_FWA_FB") = GetManholesMajor_Fb(Length, Horizontal_Length_Max, Nb_Dwelling, Nb_Dwelling_Fibre, Nb_UGMajor_Equipment_Distr_Fb, FATMajor, CoreNetwork_Fb) * GetTrenchLengthMajor_FWA_FbKey(Length, Horizontal_Length_Max, Nb_Dwelling, Nb_Dwelling_Fibre, CoreNetwork_Fb, Nb_Building, FATMajor, FATMinor, FWA) and following.

4.3.5.8 Poles

Poles are allocated to distribution and feeder, as FWA and core cables are always buried and lead-in poles are already allocated in the "Dimensioning at the building level" routine.

The number of poles depends on two criteria:

- The equipment per cable in distribution and feeder $\rightarrow p_1$; and
- On the maximum length between poles parameter $\rightarrow p_2$.

$$p = Average(\max(p_1, p_2); p_1 + p_2)$$

Plus, poles that bear CCT/FAT are withdrawn from the computation as they are already computed and allocated to the lead-in level.

Poles are computed in the function GetSectionPoles Fb() and equivalent for copper.

In the fibre network, the section poles are entirely allocated to distribution.

In the copper network, the section poles are allocated to distribution and feeder on the basis of the number of equipment that require poles.

Model Documentation – Public Version

E.g., if there are 1 distribution cable with 4 equipment and 4 feeder cables with 8 equipment, then the share of poles allocated to distribution is 4/12 and the share of poles allocated to feeder is 8/12.

Allocations are computed through the VBA functions GetDistrPolesKey() and GetFeederPolesKey().

It is important that different prices applied to poles (cf. section 5.3.2.3): those along major sides are reused electricity poles, while those along the minor side and in lead-in are dedicated telecom poles.

4.4 Outputs

4.4.1 Output architecture

The outputs of the Access model are four inventory tables, aggregated at the exchange level, plus a summary of lines table:

- Two for the copper network:
 - o Overhead,
 - Underground;
- Two for the fibre network:
 - o Overhead.
 - Underground;
- Number of lines per MDF table.

The two copper tables contain the same fields. In the underground table, all the overhead assets are set to zero, while, in the overhead table, some underground assets can be needed, as the overhead network contains underground sections (cf. 4.4.3).

Table 38 - Description of the copper output tables

Field	Description
F-MDF	Requested size of the MDF (copper pairs)
L-LeadinOH0002	Length of lead-in cables (overhead)
L-LeadinUG0002	Length of lead-in cables (underground)
D-AccessOH0004	Length of distribution 4-pairs cables (overhead)
D-AccessOH0010	Length of distribution 10-pairs cables (overhead)
D-AccessOH0015	Length of distribution 15-pairs cables (overhead)
D-AccessOH0025	Length of distribution 25-pairs cables (overhead)
D-AccessOH0050	Length of distribution 50-pairs cables (overhead)
D-AccessUG0004	Length of distribution 4-pairs cables (underground)
D-AccessUG0005	Length of distribution 5-pairs cables (underground)
D-AccessUG0007	Length of distribution 7-pairs cables (underground)
D-AccessUG0015	Length of distribution 15-pairs cables (underground)
D-AccessUG0025	Length of distribution 25-pairs cables (underground)
D-AccessUG0050	Length of distribution 50-pairs cables (underground)
D-AccessUG0100	Length of distribution 100-pairs cables (underground)
D-AccessUG0200	Length of distribution 200-pairs cables (underground)
D-AccessUG0300	Length of distribution 300-pairs cables (underground)

	Model Documentation – Public Version
Field	Description
D-AccessUG0400	Length of distribution 400-pairs cables (underground)
D-AccessUG0800	Length of distribution 800-pairs cables (underground)
D-AccessUG2000	Length of distribution 2000-pairs cables (underground)
F-AccessOH0004	Length of feeder 4-pairs cables (overhead)
F-AccessOH0010	Length of feeder 10-pairs cables (overhead)
F-AccessOH0015	Length of feeder 15-pairs cables (overhead)
F-AccessOH0025	Length of feeder 25-pairs cables (overhead)
F-AccessOH0050	Length of feeder 50-pairs cables (overhead)
F-AccessUG0004	Length of feeder 4-pairs cables (underground)
F-AccessUG0005	Length of feeder 5-pairs cables (underground)
F-AccessUG0007	Length of feeder 7-pairs cables (underground)
F-AccessUG0015	Length of feeder 15-pairs cables (underground)
F-AccessUG0025	Length of feeder 25-pairs cables (underground)
F-AccessUG0050	Length of feeder 50-pairs cables (underground)
F-AccessUG0100	Length of feeder 100-pairs cables (underground)
F-AccessUG0200	Length of feeder 200-pairs cables (underground)
F-AccessUG0300	Length of feeder 300-pairs cables (underground)
F-AccessUG0400	Length of feeder 400-pairs cables (underground)
F-AccessUG0800	Length of feeder 800-pairs cables (underground)
F-AccessUG2000	Length of feeder 2000-pairs cables (underground)
D-JntAccessOH0004	Number of distribution 4-pairs joints (overhead)
D-JntAccessOH0010	Number of distribution 10-pairs joints (overhead)
D-JntAccessOH0015	Number of distribution 15-pairs joints (overhead)
D-JntAccessOH0025	Number of distribution 25-pairs joints (overhead)
D-JntAccessOH0050	Number of distribution 50-pairs joints (overhead)
D-JntAccessUG0004	Number of distribution 4-pairs joints (underground)
D-JntAccessUG0005	Number of distribution 5-pairs joints (underground)
D-JntAccessUG0007	Number of distribution 7-pairs joints (underground)
D-JntAccessUG0015	Number of distribution 15-pairs joints (underground)
D-JntAccessUG0025	Number of distribution 25-pairs joints (underground)
D-JntAccessUG0050	Number of distribution 50-pairs joints (underground)
D-JntAccessUG0100	Number of distribution 100-pairs joints (underground)
D-JntAccessUG0200	Number of distribution 200-pairs joints (underground)
D-JntAccessUG0300	Number of distribution 300-pairs joints (underground)
D-JntAccessUG0400	Number of distribution 400-pairs joints (underground)
D-JntAccessUG0800	Number of distribution 800-pairs joints (underground)
D-JntAccessUG2000	Number of distribution 2000-pairs joints (underground)
F-JntAccessOH0004	Number of feeder 4-pairs joints (overhead)
F-JntAccessOH0010	Number of feeder 10-pairs joints (overhead)
F-JntAccessOH0015	Number of feeder 15-pairs joints (overhead)
F-JntAccessOH0025	Number of feeder 25-pairs joints (overhead)
F-JntAccessOH0050	Number of feeder 50-pairs joints (overhead)
F-JntAccessUG0004	Number of feeder 4-pairs joints (underground)
F-JntAccessUG0005	Number of feeder 5-pairs joints (underground)
F-JntAccessUG0007	Number of feeder 7-pairs joints (underground)
F-JntAccessUG0015	Number of feeder 15-pairs joints (underground)
F-JntAccessUG0025	Number of feeder 25-pairs joints (underground)
F-JntAccessUG0050	Number of feeder 50-pairs joints (underground)
F-JntAccessUG0100	Number of feeder 100-pairs joints (underground)
F-JntAccessUG0200	Number of feeder 200-pairs joints (underground)
F-JntAccessUG0300	Number of feeder 300-pairs joints (underground)
F-JntAccessUG0400	Number of feeder 400-pairs joints (underground)
	1 - 1 (3 - 3 - 3 - 3 - 3 - 3 - 3 -

	Model Documentation – Public Version
Field	Description
F-JntAccessUG0800	Number of feeder 800-pairs joints (underground)
F-JntAccessUG2000	Number of feeder 2000-pairs joints (underground)
L-CCT_OH	Number of overhead CCT
L-CCT_UG	Number of underground CCT
L-Duct50	Length of 50 mm lead-in ducts
D-Duct110	Length of 110 mm distribution ducts
F-Duct110	Length of 110 mm feeder ducts
C1-Duct110	Length of 110 mm FWA ducts
C2-Duct110	Length of 110 mm Core DSLAM ducts
C3-Duct110	Length of 110 mm Core Exchange ducts
C4-Duct110	Length of 110 mm Core EAS ducts
C1-Subduct	Length of FWA subducts
C2-Subduct	Length of Core DSLAM subducts
C3-Subduct	Length of Core Exchange subducts
C4-Subduct	Length of Core EAS subducts
L-Trench S	Length of small lead-in trenches
L-Trench M	Length of medium lead-in trenches
L-Trench L	Length of large lead-in trenches
L-Trench XL	Length of very large lead-in trenches
L-Trench XXL	Length of extra large lead-in trenches
D-Trench M	
_	Length of medium distribution trenches
D-Trench_L	Length of large distribution trenches
D-Trench_XL	Length of very large distribution trenches
D-Trench_XXL	Length of extra large distribution trenches
F-Trench_M	Length of medium feeder trenches
F-Trench_L	Length of large feeder trenches
F-Trench_XL	Length of very large feeder trenches
F-Trench_XXL	Length of extra large feeder trenches
C1-Trench_M	Length of medium FWA trenches
C1-Trench_L	Length of large FWA trenches
C1-Trench_XL	Length of very large FWA trenches
C1-Trench_XXL	Length of extra large FWA trenches
C2-Trench_M	Length of medium Core DSLAM trenches
C2-Trench_L	Length of large Core DSLAM trenches
C2-Trench_XL	Length of very large Core DSLAM trenches
C2-Trench_XXL	Length of extra large Core DSLAM trenches
C3-Trench_M	Length of medium Core Exchange trenches
C3-Trench_L	Length of large Core Exchange trenches
C3-Trench XL	Length of very large Core Exchange trenches
C3-Trench XXL	Length of extra large Core Exchange trenches
C4-Trench M	Length of medium Core EAS trenches
C4-Trench L	Length of large Core EAS trenches
C4-Trench XL	Length of very large Core EAS trenches
C4-Trench XXL	Length of extra large Core EAS trenches
L-Pole	Number of lead-in poles
D-Pole	Number of distribution poles
F-Pole	Number of feeder poles
D-RuralManhole	Number of rural distribution manholes
F-RuralManhole	Number of rural feeder manholes
C1-RuralManhole	Number of rural FWA manholes
C2-RuralManhole	Number of rural Core DSLAM manholes
C3-RuralManhole	Number of rural Core Exchange manholes

Model Documentation - Public Version

Field	Description
C4-RuralManhole	Number of urban Core EAS manholes
D-UrbanManhole	Number of urban distribution manholes
F-UrbanManhole	Number of urban feeder manholes
C1-UrbanManhole	Number of urban FWA manholes
C2-UrbanManhole	Number of urban Core DSLAM manholes
C3-UrbanManhole	Number of urban Core Exchange manholes
C4-UrbanManhole	Number of urban Core EAS manholes
C1-Fb0024	Length of FWA fibre cables (24F)
C2-Fb0012	Length of Core DSLAM fibre cables (12F)
C3-Fb0024	Length of Core Exchange fibre cables (24F)
C4-Fb0024	Length of Core EAS fibre cables (24F)
C1-JntFb0024	Number of FWA fibre joints (24F)
C2-JntFb0012	Number of Core DSLAM fibre joints (12F)
C3-JntFb0024	Number of Core Exchange fibre joints (24F)
C4-JntFb0024	Number of Core EAS fibre joints (24F)
C3-SubmarineLength	Length of Core Exchange submarine links
C4-SubmarineLength	Length of Core EAS submarine links
C3-LandingStation	Number of Core Exchange landing stations
C4-LandingStation	Number of Core EAS landing stations
C3-MWSite	Number of Core Exchange microwave sites
C4-MWSite	Number of Core EAS microwave sites
D-PassiveSC	Number of passive street cabinets
D-ActiveSC	Number of active street cabinets
C1-ODF	Requested size of the ODF (F count) for FWA
C2-ODF	Requested size of the ODF (F count) for Core DSLAM
C3-ODF	Requested size of the ODF (F count) for Core Exchange
C4-ODF	Requested size of the ODF (F count) for Core EAS
ODF	Cumulated requested size of the ODF
C3-DWDMSite	Number of Core Exchange DWDM sites
C4-DWDMSite	Number of Core EAS DWDM sites

Source: TERA Consultants

Similarly, the two fibre tables contain the same fields.

Table 39 - Description of the fibre output tables

Field	Description
D-ODF	Requested size of the ODF (fibre count)
L-Fb0002_OH	Length of lead-in cables (overhead)
D-Fb0002_OH	Length of distribution 2F cables (overhead)
D-Fb0004_OH	Length of distribution 4F cables (overhead)
D-Fb0012_OH	Length of distribution 12F cables (overhead)
D-Fb0018_OH	Length of distribution 18F cables (overhead)
D-Fb0024_OH	Length of distribution 24F cables (overhead)
D-Fb0036_OH	Length of distribution 36F cables (overhead)
D-Fb0048_OH	Length of distribution 48F cables (overhead)
D-Fb0072_OH	Length of distribution 72F cables (overhead)
D-Fb0096_OH	Length of distribution 96F cables (overhead)
D-Fb0120_OH	Length of distribution 120F cables (overhead)
D-Fb0144_OH	Length of distribution 144F cables (overhead)
D-Fb0216_OH	Length of distribution 216F cables (overhead)
D-Fb0312_OH	Length of distribution 312F cables (overhead)
D-JntFb0002_OH	Number of distribution 2F joints (overhead)

E1.14	Niodel Bocdifferitation – Fublic Version
Field	Description
D-JntFb0004_OH	Number of distribution 4F joints (overhead)
D-JntFb0012_OH	Number of distribution 12F joints (overhead)
D-JntFb0018_OH	Number of distribution 18F joints (overhead)
D-JntFb0024_OH	Number of distribution 24F joints (overhead)
D-JntFb0036_OH	Number of distribution 36F joints (overhead)
D-JntFb0048_OH	Number of distribution 48F joints (overhead)
D-JntFb0072_OH	Number of distribution 72F joints (overhead)
D-JntFb0096_OH	Number of distribution 96F joints (overhead)
D-JntFb0120_OH	Number of distribution 120F joints (overhead)
D-JntFb0144 OH	Number of distribution 144F joints (overhead)
D-JntFb0216 OH	Number of distribution 216F joints (overhead)
D-JntFb0312 OH	Number of distribution 312F joints (overhead)
L-Fb0002 UG	Length of lead-in cables (underground)
D-Fb0002 UG	Length of distribution 2F cables (underground)
D-Fb0004 UG	Length of distribution 4F cables (underground)
D-Fb0012 UG	Length of distribution 12F cables (underground)
D-Fb0018_UG	Length of distribution 18F cables (underground)
D-Fb0024 UG	Length of distribution 24F cables (underground)
D-Fb0024_0G	Length of distribution 36F cables (underground)
D-Fb0036_0G	Length of distribution 48F cables (underground)
	, , , , , , , , , , , , , , , , , , ,
D-Fb0072_UG	Length of distribution 72F cables (underground)
D-Fb0096_UG	Length of distribution 96F cables (underground)
D-Fb0120_UG	Length of distribution 120F cables (underground)
D-Fb0144_UG	Length of distribution 144F cables (underground)
D-Fb0216_UG	Length of distribution 216F cables (underground)
D-Fb0312_UG	Length of distribution 312F cables (underground)
D-JntFb0002_UG	Number of distribution 2F joints (underground)
D-JntFb0004_UG	Number of distribution 4F joints (underground)
D-JntFb0012_UG	Number of distribution 12F joints (underground)
D-JntFb0018_UG	Number of distribution 18F joints (underground)
D-JntFb0024_UG	Number of distribution 24F joints (underground)
D-JntFb0036_UG	Number of distribution 36F joints (underground)
D-JntFb0048_UG	Number of distribution 48F joints (underground)
D-JntFb0072_UG	Number of distribution 72F joints (underground)
D-JntFb0096_UG	Number of distribution 96F joints (underground)
D-JntFb0120_UG	Number of distribution 120F joints (underground)
D-JntFb0144_UG	Number of distribution 144F joints (underground)
D-JntFb0216_UG	Number of distribution 216F joints (underground)
D-JntFb0312 UG	Number of distribution 312F joints (underground)
L-FAT OH	Number of overhead FAT
L-FAT UG	Number of underground FAT
L-Duct50	Length of 50 mm lead-in ducts
D-Duct110	Length of 110 mm distribution ducts
C1-Duct110	Length of 110 mm FWA ducts
C3-Duct110	Length of 110 mm Core Exchange ducts
C4-Duct110	Length of 110 mm Core EAS ducts
L-Subduct	Length of lead-in subducts
D-Subduct	Length of distribution subducts
C1-Subduct	Length of FWA subducts
C3-Subduct	-
	Length of Core Exchange subducts
C4-Subduct	Length of Core EAS subducts
L-Trench_S	Length of small lead-in trenches

Model Documentation – Public Version

Moder Documentation – Public Version							
Field	Description						
L-Trench_M	Length of medium lead-in trenches						
L-Trench_L	Length of large lead-in trenches						
L-Trench_XL	Length of very large lead-in trenches						
L-Trench_XXL	Length of extra large lead-in trenches						
D-Trench_M	Length of medium distribution trenches						
D-Trench_L	Length of large distribution trenches						
D-Trench_XL	Length of very large distribution trenches						
D-Trench_XXL	Length of extra large distribution trenches						
C1-Trench_M	Length of medium FWA trenches						
C1-Trench_L	Length of large FWA trenches						
C1-Trench_XL	Length of very large FWA trenches						
C1-Trench_XXL	Length of extra large FWA trenches						
C3-Trench_M	Length of medium Core Exchange trenches						
C3-Trench_L	Length of large Core Exchange trenches						
C3-Trench_XL	Length of very large Core Exchange trenches						
C3-Trench_XXL	Length of extra large Core Exchange trenches						
C4-Trench_M	Length of medium Core EAS trenches						
C4-Trench_L	Length of large Core EAS trenches						
C4-Trench XL	Length of very large Core EAS trenches						
C4-Trench XXL	Length of extra large Core EAS trenches						
L-Pole	Number of lead-in poles						
D-Pole	Number of distribution poles						
D-RuralManhole	Number of rural distribution manholes						
C1-RuralManhole	Number of rural FWA manholes						
C3-RuralManhole	Number of rural Core Exchange manholes						
C4-RuralManhole	Number of urban Core EAS manholes						
D-UrbanManhole	Number of urban distribution manholes						
C1-UrbanManhole	Number of urban FWA manholes						
C3-UrbanManhole	Number of urban Core Exchange manholes						
C4-UrbanManhole	Number of urban Core EAS manholes						
C1-Fb0024	Length of FWA fibre cables (24F)						
C3-Fb0024	Length of Core Exchange fibre cables (24F)						
C4-Fb0024	Length of Core EAS fibre cables (24F)						
C1-JntFb0024	Number of FWA fibre joints (24F)						
C3-JntFb0024	Number of Core Exchange fibre joints (24F)						
C4-JntFb0024	Number of Core EAS fibre joints (24F)						
C3-SubmarineLength	Length of Core Exchange submarine links						
C4-SubmarineLength	Length of Core EAS submarine links						
C3-LandingStation	Number of Core Exchange landing stations						
C4-LandingStation	Number of Core EAS landing stations						
C3-MWSite	Number of Core Exchange microwave sites						
C4-MWSite	Number of Core EAS microwave sites						
C1-ODF	Requested size of the ODF (F count) for FWA						
C3-ODF	Requested size of the ODF (F count) for Core Exchange						
C4-ODF	Requested size of the ODF (F count) for Core EAS						
ODF	Cumulated requested size of the ODF						
C3-DWDMSite	Number of Core Exchange DWDM sites						
C4-DWDMSite	Number of Core EAS DWDM sites						
C1-FWASite	Number of FWA sites						
OT-FWASILE	Number of FWA sites						

Source: TERA Consultants

Model Documentation – Public Version

The summary of lines table contains 6 fields:

Table 40 – Description of the table "Stats FTTH and FWA lines per MDF"

Field	Description				
ID_MDF	ID of the exchange area				
FTTH_TSO	Number of FTTH lines within the TSO				
FTTH_nonTSO	Number of FTTH lines outside the TSO				
FWA_5300	Number of FWA lines (inclusive of voice-only lines)				
FWA_6000	Number of FWA voice-only lines				
Total	Total number of lines (FTTH+FWA)				

Source: TERA Consultants

4.4.2 Trenches

Regarding the trenches, the output of the two tables, PROCESS BUILDING MODELLING and PROCESS SECTION MODELLING, consists of providing for each trench, its size and its allocated length, hence 15 outputs.

Table 41- Interim outputs of the Access model regarding trenches

Trench location	Size	Lead-in	Distribution	Feeder	FWA	Core DSLAM	Core Exchange	Core EAS
Vertical part	Size	Length						
Minor side	Size	Length	Length					
Road cross	Size		Length					
Major side	Size	Length	Length	Length	Length	Length	Length	Length

Source: TERA Consultants

Then, for each network level, the Access model provides the length of trenches for a given set of trench sizes (see Table 42 - Outputs of the Access model regarding trenches).

The "PROCESS BUILDING MODELLING" provides the length of trenches for the small and medium trenches allocated to the lead-in.

The "PROCESS SECTION MODELLING" provides the length of trenches for the medium to largest trenches allocated to the lead-in, distribution, feeder, FWA, CoreDSLAM, Core Exchange and Core EAS.

Model Documentation – Public Version

Table 42 - Outputs of the Access model regarding trenches

Size		Lead-in		Distribution	Feeder	FWA	Core DSLAM	Core Exchange	Core EAS
≥ 1 50-mm ducts and ≤ 2 50-mm ducts	S	Ve	ert						
≥ 3 50-mm ducts; or ≥ 1 110-mm duct and < 2 110-mm ducts ¹⁶	М	Vert	Hor	Hor	Hor	Hor	Hor	Hor	Hor
≥ 2 110-mm ducts and < 3 110-mm ducts	L	Н	or	Hor	Hor	Hor	Hor	Hor	Hor
≥ 3 110-mm ducts and < 4 110-mm ducts	XL	Н	or	Hor	Hor	Hor	Hor	Hor	Hor
≥ 4 110-mm ducts	XXL	Н	or	Hor	Hor	Hor	Hor	Hor	Hor

Hor: horizontal trench; Vert: vertical trench

Source: TERA Consultants

The inventory of trenches by size is aggregated from vertical and horizontal trenches.

However:

- No trench can be smaller-than-one 110-mm duct on the horizontal parts of the section. If there is no distribution, no feeder and no core cable, there cannot be any lead-in cable that would result in a smaller-than-one trench. Hence, the small trenches can only be vertical trenches.
 - Horizontal trenches, computed in the VBA routine "Dimensioning at the section level" are added to all network levels, and are aggregated into M to XXL trenches (but no S trenches).
- As there are very few buildings with more than 4 or 5 dedicated ducts, it is assumed vertical trenches are no larger than medium trenches.
 - Vertical trenches are aggregated into small and medium trenches, for the lead-in.

¹⁶ As the size of the trench aggregates 110-mm ducts for distribution to core and 50-mm ducts for lead-in, it can be a non-integer real number.

Model Documentation – Public Version

For the copper and fibre underground networks, the dedicated lead-in trenches, computed in the table "PROCESS BUILDING MODELLING", are aggregated through the queries "SELECT VERT TRENCHES FB" and "SELECT VERT TRENCHES CU".

The horizontal trenches, computed in the table "PROCESS SECTION MODELLING", are aggregated through the queries "SELECT HOR TRENCHES FB" and "SELECT HOR TRENCHES CU".

For the copper and fibre overhead networks, only horizontal trenches are aggregated (see assumptions in 4.4.3), through the queries "SELECT TRENCHES CU OH" and "SELECT TRENCHES FB OH".

It is important to have in mind that there is neither feeder level nor Core DSLAM level in the fibre network. Hence, there are only 5x4 + 1 trench outputs in the fibre network, instead of 7x4 + 1 as in the copper network.

4.4.3 Overhead assumptions

The overhead networks (copper and fibre) contain some underground assets such as cables, trenches and ducts.

As such, when a FWA or core cable goes through a section in an overhead network, then the distribution and feeder cables are buried, with the lead-in network staying overhead, which occurs for approximately one tenth of the sections (weighted by their length).

This assumption is implemented in the aggregation queries (see section 2.2): for each section, it is checked whether there is a FWA or core cable in the section in the table "PROCESS SECTION MODELLING".

If so, the underground asset is added into the result table. Otherwise, the overhead asset is added into the result table.

E.g. for the cables, if there is no core network, then the overhead cable and the number of pairs of the cable is assigned to the relevant overhead asset (e.g. "D-AccessOH0025"), else the underground cable and the number of pairs of the cable is assigned to the relevant underground asset.

The same principle applies to trenches, ducts, manholes, joints, and distribution points.

As poles are already adjusted in the "Dimensioning at the section level", they are not tested in the aggregation gueries.

As aforementioned (4.3.5.5.3 and 4.4.2), when a core network goes through the section, the trench has the same length as if the network was underground, but its size is adjusted as there is no lead-in duct.

Those assumptions are computed in the queries "SELECT RESULTS CU OH BUILDING", "SELECT RESULTS CU OH SECTION", and "FILL RESULTS CU OH MODELLING" and their equivalents for fibre.

Model Documentation – Public Version

4.4.4 Underground assumptions

In the underground networks, no overhead is taken into account. The queries that perform aggregation at MDF level consist in aggregating the underground assets and assigning to zero the overhead assets (overhead cable and joints, poles, overhead CCT/FAT).

This selection and aggregation is computed in the queries "SELECT RESULTS CU UG BUILDING", "SELECT RESULTS CU UG SECTION", and "FILL RESULTS CU UG MODELLING" and their equivalents for fibre.

Model Documentation – Public Version

Costing the access network

This section covers the methodology implemented in the Microsoft Excel component of the access network cost model, dealing with the costing of the access network given an inventory of assets produced in the Microsoft Access component of the access network cost model.

5.1 Reference files

The local access input file gathers from the Chorus data collection all the unit costs used in the local access network, in addition to data and parameters necessary for the dimensioning.

All the unit costs are used in the "Assets" spreadsheet.

In the following table,

The file reference is the index of the issue (as indexed in the data request to Chorus) to which the data collection provided by Chorus answers;

Table 42 - Reference files

- Content summarises the question asked and the answer provided;
- Usage indicates where the input is used.

File reference	Content	Usage	
[]	[]	"Assets"	
[]	[]	"Assets"	
[]	[]	"Assets"	
[]	[]	"Assets" and "MDF data"	
[]	[]	"MDF data"	
[]	[]	"Assets"	
[]	[]	"Assets"	
[]	[]	"Assets"	
[]	[]	"Assets"	
[]	[]	"Assets"	
[]	[]	"Assets"	

5.2 Inputs

The access network cost model is fed by four inputs sheets (see section 2.2.1):

- Import from the ACCESS;
- Assets;
- MDF data;

Bitstream Access services Model Documentation – Public Version

Dashboard.

5.2.1 Import from the ACCESS

The access network cost model is fed by four inputs from the Microsoft Access model:

- · Copper overhead inventory;
- Copper underground inventory;
- Fibre overhead inventory;
- Fibre underground inventory.

These four tables provide for each MDF/ODF the inventory of assets (from cables to trenches).

The four tables do not provide the MDF/ODF used (from a catalogue) but the requested size of the MDF and ODF. The choice and allocation of MDF/ODF is made in the access network cost model.

Those four tables are described in the section 4.4.1.

5.2.2 Assets

The "Assets" table lists all the assets used in the fibre and copper networks. For each asset, the table indicates:

- Which type of asset it is (e.g. cable, joint, trench);
- Whether it is an infrastructure (and is eligible to cost mitigation);
- Unit cost and year of input price;
- Lifetime:
- Price trend: and
- Tax depreciation rate.

In this spreadsheet the depreciation factor is computed.

It shall be noted that unit costs include for each asset:

- Material;
- Labour;
- Design and project management when relevant;
- Service company overheads.

5.2.3 MDF data

5.2.3.1 Overview

The "MDF data" spreadsheet gathers MDF-specific parameters that stem from the Commission data collection:

- Macro parameters (when the parameter is not provided at the MDF level, a national parameter is used):
 - Whether the MDF is urban or rural;
 - Percentage of cost allocated to leased lines;

Model Documentation – Public Version

- Percentage of overhead network Lead-In;
- Percentage of overhead network Distribution;
- Percentage of overhead network Feeder;
- Percentage of shared overhead infrastructure;
- o Percentage of shared underground infrastructure;
- Percentage of cost reduction due to shared overhead infrastructure;
- o Percentage of cost reduction due to shared underground infrastructure.
- Trenching unit costs:
 - Small trench unit cost;
 - Medium trench unit cost:
 - Large trench unit cost;
 - Very large trench unit cost;
 - Extra large trench unit cost.

5.2.3.2 Trenching unit costs

Trenching unit costs are provided by BECA for six soil types and for a large set of sizes (driven by the number of ducts) and reflect the latest BECA trenching costs model.

First, the unit costs are averaged to match the five trench sizes defined in the model:

- Small: 1 or 2 50 mm duct(s);
- Medium: 3 or more 50 mm ducts or 1 110 mm duct;
- Large: 2 110 mm ducts;
- Very large: 3 110 mm ducts;
- Extra large: 4 or more 110 mm ducts.

The weights used for the small, medium and extra large trenches are the inverse of the number of ducts, as the occurrence of large trenches decreases sharply with the size. For instance:

$$Cost_{XXL} = \frac{\frac{1}{4}Cost_{4 ducts} + \dots + \frac{1}{10}Cost_{10 ducts}}{\frac{1}{4} + \dots + \frac{1}{10}}$$

The unit costs of the trenches for 4 to 10 ducts are averaged using "harmonic" weights of the sizes.

Secondly, a soil type distribution is calculated at the MDF level.

MDF-specific trenching unit costs are obtained using weighted averages of soil-specific trenching unit costs and soil type distribution per MDF, limited to TSO areas.

Finally, duct installation costs can be either taken into account in the trenching cost or in the duct unit cost, using the parameter "Include duct labour". This does not have impact of the cost modelling but induces a different distribution of cost items.

In the base case scenario, following international best practices, duct installation costs are included in the trenching costs.

Model Documentation – Public Version

Those computations are performed in the Excel file "Inputs for trenches" and copied into the access cost model, in the spreadsheet "MDF data".

5.2.4 Dashboard

The "dashboard" spreadsheet provides for the key financial parameters of the model:

- Year of calculation;
- Corporate tax rate;
- Post-tax nominal cost of capital;
- FWA-related parameters
 - o the yearly spectrum cost,
 - Number of operators per FWA sites,
 - Throughput per FWA site,
 - o Throughput per low speed customer (standard FWA customer),
 - o Throughput per voice-only customer.

The dashboard also exposes the key results of the local access cost model.

5.3 Calculations

5.3.1 Assets

For each asset, given the WACC, the tax depreciation rate and the corporate tax rate, an adjusted WACC is computed and is applied, jointly with the asset lifetime, to the asset to obtain a depreciation factor.

In addition, the unit cost is adjusted with the relevant price trend when the year of input price differs from the year of investment.

5.3.2 Inventory

5.3.2.1 Overview

The four inventories are split into inventories for each network level (from lead-in to Core EAS) in the "Inventory" spreadsheet.

In the copper network, as well as in the fibre network, overhead and underground are combined thanks to the MDF-specific parameters regarding the share of overhead and underground for each network level (see next section). In addition, in sub-sections 1.3 and 2.3 of the Investment sheet, the assets are aggregated at an asset type level (e.g. copper cable, trench), in order to provide metrics and control tests for the network dimensioning (e.g. total length of cable, total length of ducts). At this stage, the mix between overhead and underground is implemented for each level of network.

While all the lines of the inventory tables consist in simple aggregation functions, the lines related to MDF and ODF perform MDF and ODF dimensioning and ODF allocation. Indeed, the Access model provides as an output for fibre and copper the

Model Documentation – Public Version

needed size of the MDF/ODF, as well as the need stemming from the FWA and core networks.

The number of microwave sites is not taken account in the modelling.

5.3.2.2 FWA inventory

FWA network costs are computed within two steps:

- Determining the cost per Mbps of the FWA network:
 - Determining the location of the base stations which are the locations of Vodafone's sites part of the RBI program, assuming base stations are used at full capacity;
 - Connecting each FWA site to the fibre network.
- Applying the aforementioned cost per Mbps to the actual coverage:
 - Determining the premises covered by FWA according to engineering rules:
 - Determining the FWA demand in terms of Mbps.

First, the Access model provides an inventory for the FWA network accordingly

Secondly, for each MDF area, the costs of the FWA network are inferred from the aforementioned inventory and the ratio: actual demand divided by Vodafone's RBI sites capacity.

This is performed in the sheet "Inventory", ahead of the FWA inventory (in lines 1823 and 2266).

Plus, as the spectrum costs correspond to a national coverage, spectrum costs are discounted according to the actual number of FWA-covered premises in each MDF area:

$$Spectrum\ costs(actual\ coverage) = Spectrum(national) * \frac{FWA\ lines}{FTTH + FWA\ lines}$$

5.3.2.3 Poles

Two types of poles are used in the access network, while solely one type is modelled in the Access model:

- Electricity poles, along the major side of section;
- Telecommunications poles, on the minor side and in lead-in.

Poles allocated to distribution are always electricity poles.

Among poles allocated to lead-in, the number of electricity poles matches the number of distribution points.

This computation is performed in the sheet "Inventory" where lead-in poles are divided into telecommunications poles "Pole" and electricity poles "Pole_D" (lines 1712, 1717).

Electricity poles are more expensive than telecommunications poles but are shared with electricity companies, on a 10/90 basis (10% for the hypothetic efficient operator,

Model Documentation – Public Version

90% for the electricity company). Plus, the hypothetic efficient operator is incurring additional NZD 25/pole/year for rent access.

The unit cost of electricity pole is adjusted such as 10% of the model unit cost matches 10% of the actual unit cost plus NZD 25/year.

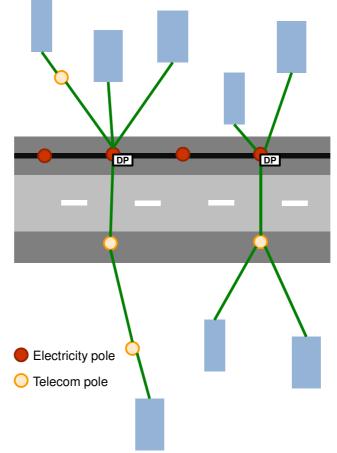


Figure 33 – Electricity poles and telecommunications poles

Source: TERA Consultants

5.3.2.4 Infrastructure sharing implementation

Underground and overhead infrastructures might be shared or rented to utility networks, leading to cost reduction, according to the Commission data.

Such infrastructure sharing is performed through four parameters when assessing the local access network investment:

- Percentage of shared major poles (electricity poles);
- Percentage of shared minor poles (telecommunications poles);
- Percentage of shared underground infrastructure;
- Percentage of cost reduction due to shared poles;
- Percentage of cost reduction due to shared underground infrastructure.

Model Documentation - Public Version


For overhead (respectively underground), the cost reduction applied to the investment is:

% Cost reduction = % Shared infra \times % Cost reduction when shared

This compound rate is applied to infrastructures investment, checking whether the asset is an underground infrastructure ("UG"), an overhead infrastructure ("OH") or not an infrastructure ("FALSE") in column Investment!H:H: "Is infrastructure?".

For each asset, the inventory (here, Inventory!L2147) is multiplied by its current unit cost (here, \$I2151) and eventually discounted with the compound cost reduction (here, either 0%, 1-'MDF data'!I\$25*'MDF data'!I\$28, 1-'MDF data'!I\$26*'MDF data'!I\$28 or 1-'MDF data'!I\$27*'MDF data'!I\$29).

Figure 34 - Screenshot of the "Investment" spreadsheet: infrastructure sharing implementation (with utilities)

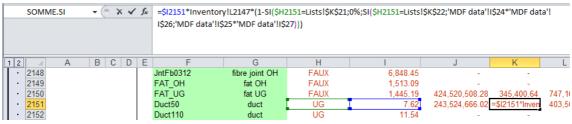

Source: TERA Consultants

Furthermore, underground infrastructure assets are also subject to another cost reduction, which stems from the access part of fibre leased lines (see Model specification).

This cost reduction is applied in the sub-sections "1.3 Copper network investment" and "2.3 Fibre network investment" of the "Investment" spreadsheet (and "Annual cost" spreadsheet), for the ducts, trenches and manholes.

As, at this stage, the mix between overhead and underground is already implemented, the share of leased lines (here, 'MDF data'!I\$21) is only applied to the share of underground investments (here, 1-'MDF data'!I\$22).


Written as an equation, it can be summarised as, for each MDF area:

```
\Sigma(Lead\ in\ capex\ in\ OH\ net\ |\ If\ asset\ is\ "duct")*\%OH\ in\ lead\ in + \Sigmu(Lead\ in\ capex\ in\ UG\ net\ |\ If\ asset\ is\ "duct")*\%UG\ in\ lead\ in *(1-\%Leased\ lines)
```

With net = network, OH = overhead, UG = Underground, %OH = percentage of overhead infrastructure, %UG = 1- %OH = percentage of underground infrastructure, %LeasedLines = % of length of the underground network which is shared with access fibre leased lines.

Model Documentation - Public Version

Figure 35 - Screenshot of the "Investment" spreadsheet: infrastructure sharing implementation (with leased lines)

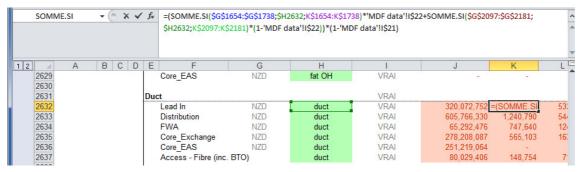

Source: TERA Consultants

5.3.3 Investments

The "Investment" spreadsheet performs the capex computation given:

- The inventory;
- The unit costs;
- Possible cost reduction stemming from infrastructure sharing.

For each asset, MDF and network level, it multiplies the number of assets with the unit costs and the possible cost reductions (shared infrastructure, leased lines).

Cost reductions are applied to infrastructures (poles, ducts, trenches, manholes) with the compound rate:

 $Cost\ reduction = (\%\ shared\ infrastructures) \times (\%\ cost\ reduction\ when\ shared)$


A different rate applies to underground and to overhead infrastructures. The rate is implemented by checking the field "Is infrastructure?" defined for each asset (FALSE, UG or OH).

Regarding leased lines, a share of underground infrastructures is withdrawn to each level of network.

For the copper and fibre network, it combines the overhead and underground investments using the "MDF data" percentage of overhead.

Model Documentation - Public Version

Figure 36 - Screenshot of the "investment" spreadsheet

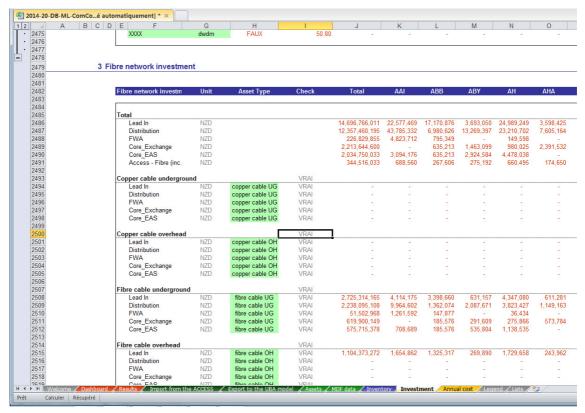

Source: TERA Consultants

Hence, the investment is allocated to each of the seven (copper) or five (fibre) network levels and to each asset type and summed to form the total investment per network level and per MDF.

In the case of underground infrastructure (ducts, trenches, manholes), a share of the costs is withdrawn and allocated to leased lines as an eighth/sixth network level, according to the "MDF data" parameter "Percentage of cost allocated to leased lines".

5.3.4 Annual costs

The "annual costs" spreadsheet annualises the capex resulting from the "investment" spreadsheet using for each asset the depreciation factor computed in the "assets" spreadsheet.

For the four network assumptions (copper overhead, copper underground, fibre overhead, fibre underground), each asset investment is multiplied by its depreciation factor.

Then, for the copper and for the fibre networks, the annual costs are combined using the share of overhead, and summed in the Total sub-table (in "Annual costs", 1.3 and 2.3).

Finally, the total annual costs for the fibre network and for the copper network are copied into the "Export to the core model" sheet using a macro.

5.4 Outputs

The Access network cost model performs three outputs:

- Export to the UBA model;
- Results;
- Dashboard.

5.4.1 Export to the UBA model

The export to the UBA model contains the following data for the years 2015 to 2019:

- Costs: It provides the total annual costs per exchange of UCLL and Copper Local Loop, and the network investment and annual capex split by level of network (Access, Core aggregation and Core transmission);
- Volumes: It provides the total number of lines and the surface for MDFs;
- Number of FTTH and FWA lines (for opex calculation purposes).

The computation is performed through a macro function, Fill_the_results(), that increments the year of investment (from 2015 to 2019), run the model and writes in the outputs in the "Export to the UBA" spreadsheet, the UCLL and copper yearly costs and the network total investment, as well as the MDF volumes.

Figure 37 - Screenshot of the "Fill_the_results()" VBA macro

```
Sub Fill the results()
       Dim currentYear As Double, year As Double, Status As Double
       Application.ScreenUpdating = False
       Status = 0
       currentYear = Range("PRM_Year").Value
       For year = 2015 To 2019
              Application.StatusBar = "Calculations : " & Format(Status, "0%") & " completed."
Status = Status + 1 / (2019 - 2015 + 1)
               Range("PRM_Year").Value = year
               Calculate
               Range("UCLL_YearlyCost").Copy
               Range("UCLL_YearlyCost" & CStr(year)).PasteSpecial Paste:=xlPasteValues, Transpose:=True
Range("Copper_YearlyCost").Copy
Range("Copper_YearlyCost").Copy
              Range("AccessCopper_Investment_" & CStr(year)).Value = Range("CopperInvestment_LeadIn") + Range("Copange("AccessFibre_Investment_" & CStr(year)).Value = Range("CopperInvestmen_AccessFibre").Value
Range("CoreDSLAM_Investment_" & CStr(year)).Value = Range("CopperInvestment_CoreDSLAM") + Range("Copange("CoreExchange_Investment_" & CStr(year)).Value = Range("CopperInvestment_CoreExchange").Value
               Range ("CoreEAS_Investment_" & CStr(year)). Value = Range ("CopperInvestment_CoreEAS"). Value
              Range("AccessCopper_YearlyCost_" & CStr(year)).Value = Range("CopperYearlyCost_LeadIn") + Range("CopperYearlyCost_Range("AccessFibre_YearlyCost_" & CStr(year)).Value = Range("CopperYearlyCost_AccessFibre").Value
Range("CoreDSLAM_YearlyCost_" & CStr(year)).Value = Range("CopperYearlyCost_CoreDSLAM") + Range("CopperYearlyCost_CoreDSLAM") + Range("CopperYearlyCost_CoreDSLAM").Value
Range("CoreExchange_YearlyCost_" & CStr(year)).Value = Range("CopperYearlyCost_CoreDAS").Value
               Range("ShareSLU_" & CStr(year)).Value = Range("ShareSLU").Value
       Next year
       Range ("PRM Year") . Value = currentYear
       Application.StatusBar = False
       Application.ScreenUpdating = True
```

Model Documentation – Public Version

Source: TERA Consultants

The macro is run when pressing the "Update the results" button on the Dashboard spreadsheet.

5.4.2 Results

The results table provides the capex and annual costs of the local access network for each MDF and for each type of network level, aggregating data from the "Investment" and "Annual costs" spreadsheets.

5.4.3 Dashboard

The dashboard contains the key parameters of the model (WACC, tax rates) and presents the main results of the Access network cost model:

- Costs of the UCLL and copper networks, and FTTN SLU, at national, urban and rural levels;
- Key indicators of the UCLL and copper networks (e.g. total investments, total annual costs, by level of network).

6 Core network cost model

6.1 Reference files

The model is made of two files:

- The UBA model; and
- The "UBA input" file that gathers most of table documents provided by Chorus that have been used to feed the model.

Most of the inputs provided by Chorus and used in the model are gathered in the "UBA Input" file, in which three main output spreadsheets are computed:

- Geographical data;
- Assets; and
- Inputs for the Dashboard.

The following table describes how the data provided during the data collection have been used to derive the inputs of the model:

Table 43 – Core network cost model reference files

File reference	Content	Usage
2.3.2	List of sites	"Geographical data" spreadsheet
2.1	Distribution of xDSL customers per site	"Geographical data" spreadsheet
3.1.1 of s98 sent in September	Distribution of xDSL customers per site	"Geographical data" spreadsheet
2.2.3	Distribution of SHDSL customers per site	"Geographical data" spreadsheet
6.17	Description of the assets	"Assets" spreadsheet
6.19.6	Asset lives	"Assets" spreadsheet
6.15.3	Unit costs	"Assets" spreadsheet
3.1.1 of s98 sent in September	Number of customers	"Dashboard" spreadsheet
2.2.3 of s98 sent in September	Number of customers	"Dashboard" spreadsheet

Source: TERA Consultants

6.2 Inputs

The UBA model is fed with six input spreadsheets.

- Dashboard;
- Import from the ACCESS model;
- Import from the OPEX model;

Model Documentation – Public Version

- Parameters:
- Geographical data; and
- Assets.

These spreadsheets are described in the following sections.

6.2.1 Dashboard

The dashboard contains the main parameters of the model and the main results.

The main parameters are:

- The financial parameters (that comes from the Access model);
- The demand for each service; and
- The pricing approach for the different UBA services.

The main results are:

- The price of UCLL at the national level, in the urban areas and in the rural areas; and
- The price of the 4 UBA services (BUBA, EUBA40, EUBA90 and EUBA180).

6.2.2 Import from the ACCESS model

This spreadsheet contains the data that is needed from the access network cost model:

- Costs: It provides the total annual costs per exchange of UCLL and Copper Local Loop, and the network investment and annual capex split by level of network (Access, Core aggregation and Core transmission);
- Volumes: It provides the total number of lines and the surface for MDFs.

6.2.3 Import from the OPEX model

This spreadsheet contains the data that is needed from the Opex model:

- Opex (total opex per exchange for both UCLL and UBA);
- Unit costs for power and buildings;
- Indirect capex related to regulated services; and
- Labour costs dedicated to the access network.

6.2.4 Parameters

The "Parameters" spreadsheet is composed of several single inputs and parameters of the model. It is composed of:

- The year of calculation;
- The REN interconnection links capacity;
- Site equipment parameters (site, power and cooling parameters);
- Share of civil engineering allocated to UBA;
- The speed of the different UBA offers; and
- Spare capacity calculation parameters for line cards.

6.2.5 Geographical data

This spreadsheet details the geographical distribution of customers and the network topology:

- The "Access at cabinet" table provides the number of customers per service per cabinet and the parent exchange of each cabinet; and
- The "Access at Exchange" table provides the number of customers per service per exchange and to which FDS site each of the exchange is connected to.

6.2.6 Assets

This spreadsheet gathers all dimensioning and costing data regarding active network equipment (DSLAMs and FDS) and site equipment (power equipment, air conditioning and security).

6.3 Network dimensioning

The UBA cost model is made of two dimensioning spreadsheets and four costing spreadsheets:

- Network dimensioning (dimensioning spreadsheet);
- Inventory (dimensioning spreadsheet);
- Network costing (costing spreadsheet);
- Allocation keys (costing spreadsheet);
- OPEX and ACCESS (costing spreadsheet); and
- UBA (costing spreadsheet);

These spreadsheets are described hereafter.

6.3.1 Network dimensioning

The aim of this spreadsheet is to dimension the active cabinets and the exchange sites, i.e. to assess the number of assets needed for all the categories of assets.

6.3.1.1 Cabinet

Dimensioning a cabinet means dimensioning all the assets that are included in the cabinet:

- The line card:
- The subrack holding the line cards; and
- The rack holding the subracks.

The dimensioning principle of the cabinet is described in the following figure:

Figure 38 - Equipment dimensioning - Cabinet dimensioning Cabinet site **Relative national** distribution **Total national** connections **DSLAM Local number** of customers # ports per card **Number of** cards # cards **Spare** per subrack **Number of** subracks # subracks per rack **Number of** racks

Source: TERA Consultants

NB: an additional SFP is added per subrack if the actual traffic exceeds the maximum capacity of a single SFP.

This dimensioning is carried out in the table 1 of the spreadsheet "Network dimensioning".

6.3.1.2 Exchange

There are two types of exchanges:

- Exchanges without switch; and
- Exchanges with switches (EAS).

Both types of exchanges contain DSLAMs for which the dimensioning is similar to the dimensioning of the DSLAMs located in the cabinets. The DSLAMs located in the exchanges are made of the exact same assets as the DSLAMs located in the cabinets:

- The line card:
- The subrack holding the line cards; and
- The rack holding the subracks.

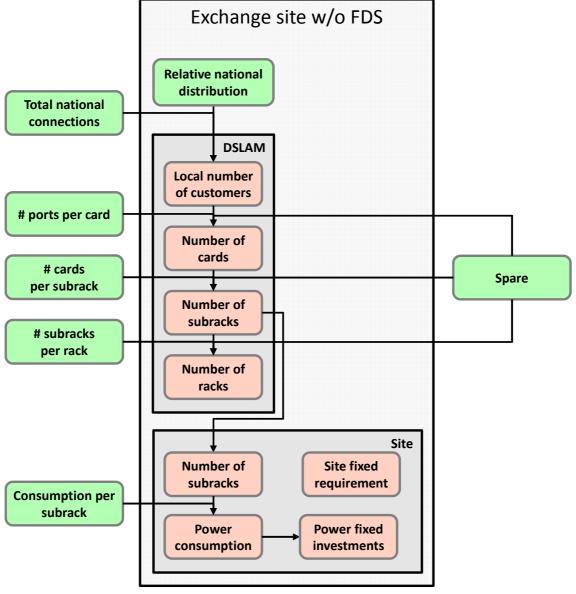


Figure 39 – Dimensioning of an exchange with no FDS

Source: TERA Consultants

The exchanges with switches contain switches which are made of the following assets:

- The small form factor pluggable (SFP);
- The card;
- The subrack; and
- The rack.

The number of ports required on the FDS is the sum of the number of ports reserved to interconnect the switch to the REN, the number of ports reserved by RSP (Retail Service Providers) to collect the BSA traffic and the number of ports required to plug all the DSLAMs it aggregates.

All DSLAMs are connected with a 1G port to the switch, the FDS is considered to be interconnected to the REN with two 1G ports. The number and the capacity of ports used by RSPs has been provided by Chorus for each site.

The dimensioning principle of the exchange with a switch is described in the following figure:

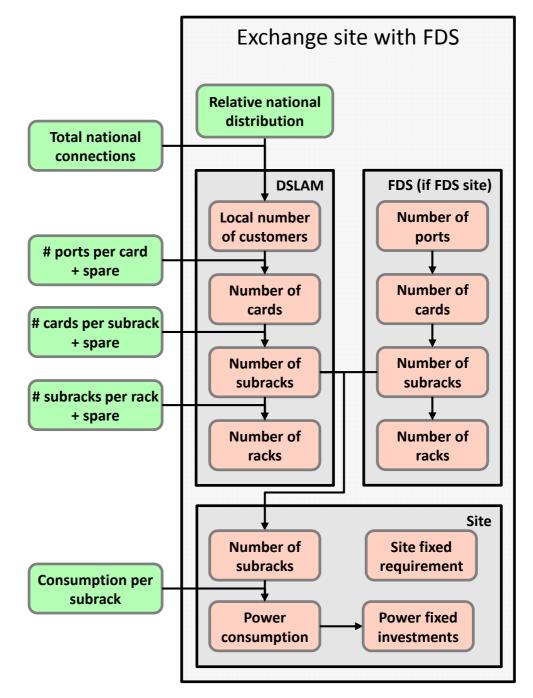


Figure 40 – Dimensioning of an exchange with a switch

Source: TERA Consultants

The dimensioning of the exchanges is made of four tables:

 In the first table, the demand is derived per exchange based on the network topology;

Model Documentation – Public Version

- In the second table, the DSLAM in all the sites are dimensioned:
- In the third table, the FDS (i.e. the switches) are dimensioned;
- In the fourth table, the fixed cost related to power investment is dimensioned.

NB: an additional SFP is added per subrack if the actual traffic exceeds the maximum capacity of a single SFP.

6.3.2 Inventory

The aim of this spreadsheet is to derive the network inventory including the network power usage and the network space requirements.

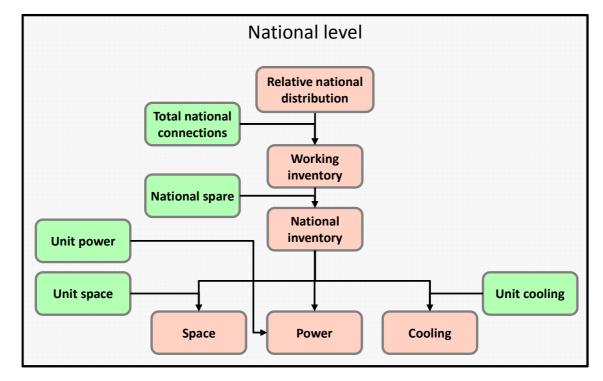


Figure 41 - Inventory and Buildings

Source: TERA Consultants

Based on the number of assets required to handle the demand (the working inventory), the model includes some spare capacity. This constitutes the national inventory.

Based on the inventory, it also dimensions space, power and cooling variable parts which are proportional to the number of network assets deployed.

Each asset has been provided with its power consumption, a cooling requirement and a unit space per asset. The multiplication of these units by the inventory gives the total power, cooling and space requirement.

6.4 Financial calculation

6.4.1 Network costing

The aim of this spreadsheet is to derive the network total investment and the network annual capex.

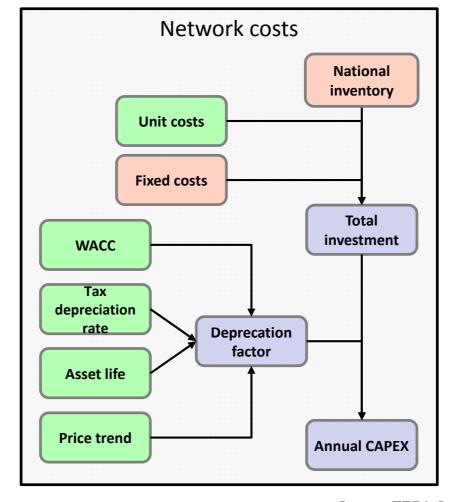


Figure 42 - Network costing

Source: TERA Consultants

The network total investment is derived by adding the fixed costs (computed in the spreadsheet "Network dimensioning") with the variable costs which are obtained by multiplying the assets quantities by their unit cost. In accordance with criterion 34 of the Model Reference Paper, the cost of the DSLAM included in the RBI program has been removed from the total investment used to calculate UBA additional costs.

The network annual capex is derived from the network total investment by multiplying by the depreciation factor.

6.4.2 Allocation keys

The aim of this spreadsheet is to derive two sets of allocation keys.

Model Documentation – Public Version

The first set of allocation keys are used to allocate the non-network costs. The following keys provide a split between UBA and UCLL:

Table 44 - Allocation keys of non-network costs

Allocation key	Description	
Investment	Allocation proportional to the total investment	
Annual capex	Allocation proportional to annual cost	
Active lines	Allocation proportional to the number of active customers	
Access	All costs allocated to the UCLL	
UBA	All costs allocated to UBA	

Source: TERA Consultants

The second set of allocation keys are used to allocate the annual cost of the core network assets between the different services that use them. All the following keys are split among xDSL customers at cabinet, xDSL customers at Exchange, SHDSL customers at cabinet and SHDSL customers at Exchange:

Table 45 - Allocation keys of core network assets

Allocation key	Description
Customers	Allocation based on all customers
Exchange customers	Allocation based on customers connected directly to an exchange site
xDSL exchange customers	Allocation based on xDSL (i.e. ADSL and VDSL) customers connected directly to an exchange site
SHDSL Exchange customers	Allocation based on SHDSL customers connected directly to an exchange site
Cabinet customers	Allocation based on customers connected to a cabinet
xDSL cabinet customers	Allocation based on xDSL (i.e. ADSL and VDSL) customers connected to a cabinet
Customers and ports	Allocation based on all customers and on the number of ports
SHDSL cabinet customer	Allocation based on SHDSL customers connected to a cabinet

Source: TERA Consultants

6.4.3 OPEX and ACCESS

The aim of the "OPEX and ACCESS" spreadsheet is to allocate non-network costs and to derive the annual cost per line of the local loop.

Fibre opex and FWA opex and spectrum costs are adjusted in this sheet.

6.4.3.1 Non-network costs

There are four types of non-network costs that should be taken into account and allocated to the different relevant services:

- The IT costs:
- The miscellaneous costs;
- The access specific costs;
- The UBA specific costs.

For each of these non-network costs, a specific allocation key has to be determined. The allocation keys are selected among the allocation keys computed in the spreadsheet "Allocation keys". The allocations keys are identified in the following table:


Table 46 - Non-network costs allocation keys

Cost	Allocation key
IT costs	Investment
Miscellaneous indirect	Active lines
Access	Access
UBA	UBA

Source: TERA Consultants

All four non-network costs are outputs of the Opex model.

Figure 43 - Opex and Access Allocations - Indirect Capex + Access Labour costs allocation

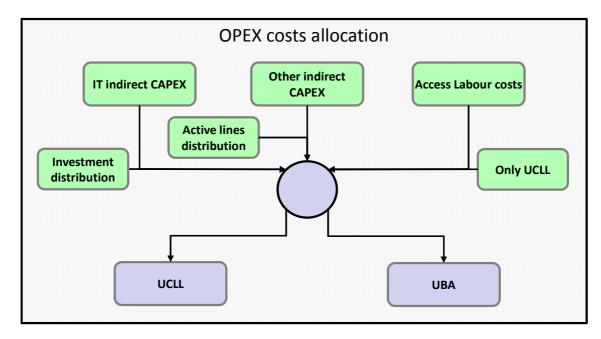

Source: TERA Consultants


All four non-network costs are national cost, i.e. there are no regional variations.

6.4.3.2 Cost of the access network

The access network cost model derives annual capex per exchange for the copper local loop and the UCLL.

The objective of the second table is to derive a cost per line (annual capex + opex + all non-network costs) at a national level and to provide a cost for the urban and rural geotypes.

Figure 44 - Opex and Access Allocations - UCLL and Copper Local Loop cost calculation

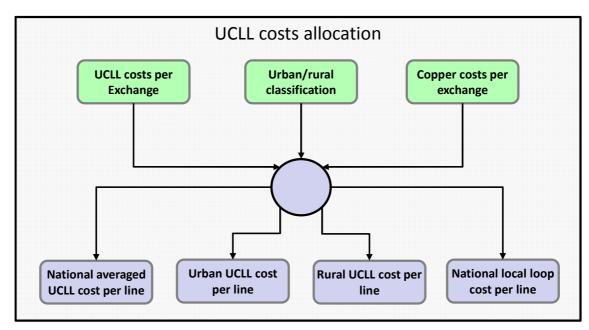

Source: TERA Consultants

The opex are computed per MDF, however the non-network costs are national costs. They are therefore allocated to each MDF using the EPMU approach.

FWA opex are inferred from Vodafone's RBI network data.

They are applied on the basis of the actual throughput demand and Vodafone's throughput capacity, for each MDF area, as it is assumed Vodafone sites are used at their full capacity:

$$Opex\ FWA(MDF) = Total\ Opex\ FWA_{Vodafone} * \frac{FWA\ throughput}{Vodafone\ sites\ capacity}$$

This is performed in the column P, lines 72 to 792.

6.4.4 UBA

The aim of this spreadsheet is to derive the unit cost of the UBA service. The following figure provides an overview of the approach followed:

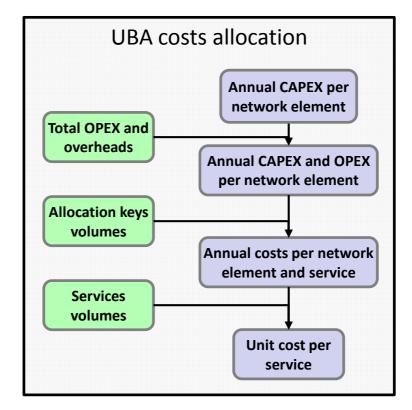


Figure 45 - UBA costs allocation

Source: TERA Consultants

The first step is to derive the annual cost of the network which is the sum of:

- The annual capex as computed in the spreadsheet "Network costing";
- The annual opex as computed in the spreadsheet "OPEX and ACCESS";
- The annual non-network costs as computed in the spreadsheet "OPEX and ACCESS".

The second step is to allocate the network annual cost between the different services using the parts of the core network that are modelled. These include the following services:

- xDSL services (composed of UBA and VDSL services);
- SHDSL services; and
- Interconnection.

The allocation is made asset by asset. For each asset, a specific allocation key is determined. Following the capacity based allocation approach, the allocation key is selected so that it is consistent with the dimensioning driver. Each asset has therefore a specific allocation key that has been computed in the spreadsheet "Allocation keys". The allocation key of each asset is identified in the following table:

Table 47 - UBA Allocation keys

Asset	Allocation key
MDF Sites	Exchange Customer
Cabinet xDSL Cards	xDSL cabinet Customer
Cabinet SHDSL Cards	SHDSL cabinet Customer
Cabinet DSLAM Racks and sites	Cabinet Customer
Cabinet-Exchange fibres	Cabinet customer
Exchange xDSL Cards	xDSL exchange Customer
Exchange SHDSL Cards	SHDSL exchange Customer
Exchange DSLAM Racks and sites	Exchange Customer
Exchange-FDS fibres	Customer
FDS	Customers and ports

Source: TERA Consultants

The third and last step is to derive the unit cost of the UBA service. It is achieved by dividing the annual costs allocated to UBA by the number of customers of this service.

6.5 Outputs

The output of the model is made of two spreadsheets:

- The "Output" spreadsheet;
- The "Saved outputs" spreadsheet; and
- The "Pricing" spreadsheet.

These three spreadsheets are described in the following sections.

6.5.1 Output

The Output spreadsheet takes as input results from the rest of the model using a macro. The button "Update the results" calculates for each year between 2015 and 2019 the results of the model for:

- Total capex investment related to DSL services and Total annual capex allocated to DSL; and
- 'Annualised TSLRIC cost of the ULL' and 'Annualised TSLRIC cost of SLUBH' for both rural and urban geotypes.

6.5.1.1 The UBA service

The 'Total annual capex allocated to DSL' is used to derive an average cost per DSL customer, based on the total number of DSL customers. This average cost is then adjusted to build different offers depending on the quality of service provided using a gradient.

6.5.1.2 The ULL services

The Access model outputs a total cost for the ULL network.

Exch SLUBH Cab SLU Customers

Copper Copper Cost of the network is the cost of the ULL + the cost of the SLUBH

ULL

Exch UCIL

Fibre The total cost of the network is the cost of the ULL

Figure 46 - ULL cost as outputted by the access model

Source: TERA Consultants


Due to geographical scope differences, in the fibre network case, the cost of the ULL is the difference between the cost of the fibre ULL minus the cost of the copper SLUBH.

In both case, the total cost of the network is therefore the cost of the ULL + the cost of the SLUBH.

The total cost of connecting all customers to the exchange is the cost of the ULL + the cost of the SLUBH.

Bitstream Access services Model Documentation – Public Version

Figure 47 - Venn diagram of different customers' demand

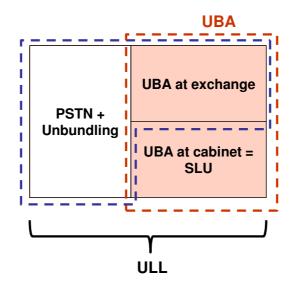

Source: TERA Consultants

Chorus has provided the total ULL demand (calculated as the number of copper connections + the number of fibre connections), and the total UBA demand split between cabinet and exchange.

Two assumptions have been defined:

- The SLU demand has been considered as equal to the UBA demand at cabinet (meaning that all active lines at cabinet are UBA lines);
- The demand for SLU backhaul is equal to the SLU demand (all RSP use SLU backhaul for DSL products at cabinet.

The inputs available in the core model are therefore:

- C_{ULL}: The ULL total cost.
- C_{SLUBH}: The SLU backhaul total cost.
- #_{ULL}: The total ULL demand.
- #_{UCLL}: The total UCLL demand.
- #_{UBA}: The total UBA demand.
- #_{SLU} = #_{SLUBH}: The UBA demand at cabinet = the SLU demand = the SLUBH demand.

The following namings will be used below:

- P_{UCLL}: The unit cost of a UCLL line.
- P_{SIII}: The unit cost of a SLU line.
- P_{SLUBH}: The unit cost of a SLU Backhaul service.
- C_{SLU}: The total cost of the SLU.
- C_{UCLL}: The total cost of the UCLL.

Model Documentation - Public Version

• C_{Network}: The total cost of the whole copper network including the SLUBH.

Two axioms have been defined:

- P_{UCLL} = P_{SLU} + P_{SLUBH}: Each full line should have a same price.
- C_{Network} = C_{ULL} + C_{SLUBH} : The total cost of the network (cost of connecting all customers) is the total cost of the copper network (UCLL + SLU = ULL) plus the total cost of the SLU Backhaul.

The objective of the model is to calculate the unit cost of UCLL, SLU and SLUBH (P_{UCLL} , P_{SLU} and P_{SLUBH}).

$$\begin{split} C_{\text{UCLL}} &= P_{\text{UCLL}} \times \#_{\text{UCLL}} = P_{\text{SLU}} \times \#_{\text{UCLL}} + P_{\text{SLUBH}} \times \#_{\text{UCLL}} \\ C_{\text{Network}} &= C_{\text{UCLL}} + C_{\text{SLU}} + C_{\text{SLUBH}} \\ &= P_{\text{SLU}} * \#_{\text{UCLL}} + P_{\text{SLUBH}} * \#_{\text{UCLL}} + P_{\text{SLU}} * \#_{\text{SLU}} + P_{\text{SLUBH}} * \#_{\text{SLU}} \\ &= (P_{\text{SLU}} + P_{\text{SLUBH}}) \times (\#_{\text{UCLL}} + \#_{\text{SLU}}) = P_{\text{UCLL}} \times \#_{\text{ULL}} \end{split}$$

Therefore we get the three unit costs defined as follow:

•
$$P_{UCLL} = \frac{C_{Network}}{\#_{ULL}}$$

•
$$P_{SLUBH} = \frac{C_{SLUBH}}{\#_{SLU}}$$

Cross-checks - cost recovery:

Total revenues = R = #UCLL x PUCLL + #SLUBH x PSLUBH + #SLU x PSLU

•
$$PUCLL = \frac{CULL + CSLUBH}{\#ULL}$$

•
$$P_{SLUBH} = \frac{CSLUBH}{\#SLUBH}$$

•
$$P_{SLU} = P_{UCLL} - PSLU = \frac{CULL + CSLUBH}{\#ULL} - \frac{CSLUBH}{\#SLUBH}$$

$$\mathsf{R} = \#_{\mathsf{UCLL}} * \frac{\mathsf{CULL} + \mathsf{CSLUBH}}{\# \mathsf{ULL}} + \# \mathsf{S}_{\mathsf{LUBH}} * \frac{\mathsf{CSLUBH}}{\# \mathsf{SLUBH}} + \#_{\mathsf{SLU}} * \left(\frac{\mathsf{CULL} + \mathsf{CSLUBH}}{\# \mathsf{ULL}} - \frac{\mathsf{CSLUBH}}{\# \mathsf{SLUBH}} \right)$$

•
$$\#_{SLU} = \#_{SLUBH}$$

•
$$\#_{SLU} + \#_{UCLL} = \#_{ULL}$$

•
$$R = (\#_{ULL} - \#_{SLU}) * \frac{cULL + cSLUBH}{\#ULL} + CSLUBH + \#_{SLU} * (\frac{cULL + cSLUBH}{\#ULL} - \frac{cSLUBH}{\#SLU})$$

•
$$R = C_{ULL} + C_{SLUBH}$$

R = Cost of the network

TSLRIC price review determination for the Unbundled Copper Local Loop and Unbundled Bitstream Access services Model Documentation – Public Version

Cross-checks - The unit cost of UCLL should be equal to the average unit cost of a line.

By construction of the price:

$$\begin{aligned} \mathsf{P}_{\mathsf{UCLL}} &= \mathsf{P}_{\mathsf{SLU}} + \mathsf{P}_{\mathsf{SLUBH}} \\ \mathsf{P}_{\mathsf{SLU}} &* \frac{\#SLU}{\#ULL} + \mathsf{P}_{\mathsf{UCLL}} * \frac{\#UCLL}{\#ULL} \\ &= \frac{CSLU}{\#SLU} * \frac{\#SLU}{\#ULL} + \frac{CUCLL}{\#UCLL} * \frac{\#UCLL}{\#ULL} \\ &= \frac{CSLU}{\#ULL} + \frac{CUCLL}{\#ULL} \\ &= \frac{CULL}{\#ULL} \\ &= \mathsf{P}_{\mathsf{ULL}} \end{aligned}$$

6.5.2 Pricing

The "pricing" spreadsheet is gathering all the prices that have been derived.

6.5.3 Saved outputs

The "saved outputs" spreadsheet recalls the UCLL and UBA prices obtained with December 2014 WACC and with backdating.

7 How to use the models

7.1 Opex model

To update the Opex model, the user can change some parameters that are located in the spreadsheet "Parameters" such as:

- The WACC;
- The targeted LFI;
- The trend used for forecasts;
- The type of costs used for the building cost.

Some other parameters can easily be easily changed in the spreadsheet "Inputs allocationkey":

- Floor space related to MDF and EAS (inputs from the Access and the Core models);
- The number of active and passive cabinets; and
- The length of km-pairs from the Access network cost model.

In order to model results that are exported to the Core network cost model, the user has to click on the "Fill" macro button present in the spreadsheet "EXPORT".

This sheet has to be copy-pasted in the spreadsheet 'Import from the OPEX model' of the Core network cost model.


Detailed results per type of cost for opex per line can be updated by clicking on the "Update" macro button in the spreadsheet "Results". This macro enables to run the model for all years within the control period.

7.2 Access network cost model

To update the access network cost model, the user can change:

- a. The input parameters for the dimensioning in the Excel file "Local access network sources":
 - i. Open the Microsoft Access model, import the five parameter tables from the Excel file "Local access network sources";
 - ii. In the Microsoft Access model, press the button "Start the modelling" in the control page;
 - iii. Open the four outputs result tables pressing the four "Results" buttons;
 - iv. Run the query "Stats FTTH and FWA lines per MDF";
 - v. Open the Excel network access cost model, and copy the five tables into the sheet "Import from the ACCESS";
 - vi. Press the button "Update the results" in the Dashboard sheet;
 - vii. Copy and paste the values of the sheet "Export to the UBA model" to the UBA cost model (columns I to O)

Figure 48 - Screenshot from the Microsoft Access model - Control page

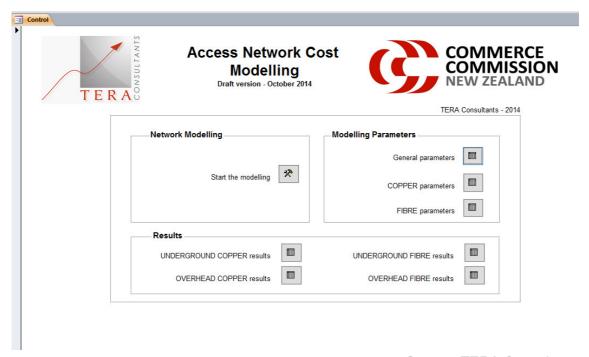

Source: TERA Consultants

- b. The geospatial data for the dimensioning in the Microsoft Access model
 - i. Import the new geospatial tables into the Microsoft Access, adding a suffix "new" to the new tables;
 - ii. Update the old geospatial tables with the new tables using "Update"type SQL queries;
 - iii. Process to the steps (ii) to (vi) described above in (a).
- c. The input costs:
 - i. Open the table "Local access network sources";
 - ii. Update the inputs costs;
 - E.g. withdraw or include the design costs, or switch the ducting installation costs from ducts to trenching costs using the control cells in the "4. Costs' sheet"
 - iii. Copy and paste the sheet "Export to the cost model" to the "Access network cost model" Excel file, in the sheet "Assets";
 - iv. Process to the steps (v) and (vi) described in (a).

Once results of the opex and Access models are pasted in the Core model, the core model can be parameterized in the Dashboard for the financial and demand parameters, and in the spreadsheet parameters for all network-related parameters.

The results are shown in the "Pricing" spreadsheet after the button "Update the results" present in the "Dashboard" and the "Pricing" spreadsheet is pressed.

8 Annexes

8.1 Annex: focus on LFI

8.1.1 Context

The TSLRIC concept aims at modelling the costs of a recently built efficient network. Not only the capex but also the opex should be in line with this principle. While using the incumbent's opex as a starting point is common, it is very likely that the opex of the incumbent are much higher than the opex of a new efficient network, especially in the access network. As a consequence, it would not be consistent to add the capex of a new network (which are probably higher than the capex of a legacy network) and the opex of a legacy network (which are probably higher than the opex of a new efficient network).

The fact that the opex of a legacy network are higher than the opex of a new efficient network is implicitly confirmed by Chorus which explains in its "Management Commentary" of August 2014 that network degradation is one of the factors explaining the level of faults: "One of the key drivers for reported faults is the weather. During the year ended 30 June 2014, severe weather events in September 2013, March 2014 and April 2014 resulted in 10% more reactive maintenance required compared to the year ended 30 June 2013. Approximately 77% of the reactive maintenance work was on the Chorus network and this was not recoverable (compared to 74% on the Chorus network in the year to 30 June 2013). The level, type and cost of faults is affected by factors such as rainfall, lightning, network degradation, labour costs, material costs and network growth" (underlined by the author)¹⁷

As a consequence, efficiency adjustments must be applied on Chorus' opex for the access network, and in particular to maintenance opex.

For the avoidance of doubts, no efficiency adjustments have been performed on the UBA core network opex as the level of faults is supposed to reflect a much newer network.

8.1.2 Proposed approach

Maintenance opex can be calculated as follows:

Maintenance opex = Number of faults x Time to repair a fault x Cost per manhour

The number of faults is affected by the age of the network and by network degradation. This is less clear for the "Time to repair a fault" and it is obvious that the cost per manhour does not depend on the age of the network (but rather on economic local

¹⁷ Chorus - "Management Commentary" of August 2014

Model Documentation – Public Version

conditions). As a consequence, the most straightforward and obvious approach to adjust Chorus maintenance opex to reflect the costs of a new efficient network is to assess the number of faults of a new network.

Assuming that the maintenance opex evolve proportionally with the number of faults on the network is a reasonable assumption:

- 1 This is logic from the formula above;
- 2 This is what we observed in Ireland where the incumbent owns a resource management tool which enables to observe that when the number of faults decreases the maintenance opex decrease proportionally;
- 3 With respect to Chorus, we understand the following costs vary proportionally:
 - Maintenance contractors field costs (as we understand these are paid on a 'per task' basis);
 - Maintenance contractors overheads (to be discussed but these would be probably lower in case the number of tasks to be performed is significantly lower);
 - c. Chorus own maintenance staff (their work load is also linked to the number of faults).

As a consequence, it is necessary to assess the number of faults of a new network.


8.1.3 Number of faults assessment

8.1.3.1 General approach

Statistics for the number of faults are generally expressed using the Key Performance Indicator called "Line Fault Index" (LFI). For the last year available (2013),

Portuguese NRA Anacom has performed an international benchmark giving a view on the observed LFI in several European countries:

Figure 49 – International benchmark on LFI

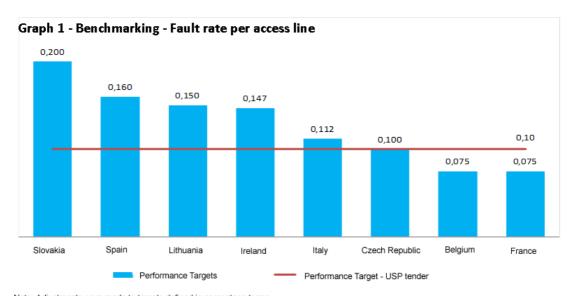

Note: Adjustments were made to targets defined in percentage terms Spain 4% per quarter; Tender - 0.1 per 1 line.

Source: ICP-ANACOM based on information compiled from the websites of European regulators

Source: http://www.anacom.pt/render.jsp?categoryId=345519

This benchmark tends to show that Chorus LFI ([]%) is rather in the high range as compared to these countries. However, it provides no insight on the level of LFI that would be observed on a new network as in all these countries, the network has been deployed several decades ago.

During the data collection process, Chorus stated they are unable to provide NZ-based assumption for a new network. In particular, it has not been possible to isolate the LFI for a recent copper deployment in a sample area.

As a consequence, the LFI of a new network cannot be assessed using Chorus data. An alternative approach would be to set the target LFI on the basis of benchmarked data for a <u>new network</u>. However, to our knowledge this information is not usually published by NRAs.

The only available option for the Commission is to use the target LFI set by the Irish National Regulatory Authority (NRA) ComReg in the context of copper LLU/SLU cost modelling:

"ComReg believes it is reasonable and proper to conclude that <u>a maximum LFI of 8% is appropriate given</u> that the modelled network relates to that of an efficient network (based on underground and overhead infrastructure) that had invested appropriate amounts in the renewal of the network over time.

Model Documentation – Public Version

Conclusion in relation to the LFI of the network: A Line Fault Index not exceeding 8% is used within the BU-LRAIC model in determining the maximum LLU and SLU monthly rental charges."¹⁸ (underlined by the author)

8.1.3.2 Relevance of Irish values in the specific context of New Zealand

Several factors could mean that the efficient LFI of a new network found in Ireland is significantly different from the efficient LFI of a new network in New Zealand:


- Rainfalls;
- Humidity;
- Wind.

Indeed, a significant level of correlation between these factors and the number of faults at several levels of the network has recently been underlined by British wholesale operator Openreach:

Ref: 2014-20-DB-ML - BU models


¹⁸ http://www.comreg.ie/ fileupload/publications/ComReg1010.pdf

Figure 50 – Correlation between rainfalls and feeder (e-side) faults

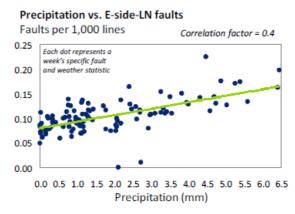


Source: Openreach, fault data analysis

Figure 51 – Correlation between wind and overhead network faults

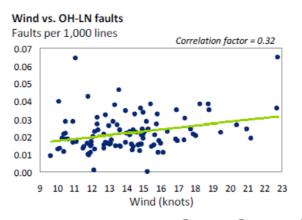

Source: Openreach, fault data analysis

Figure 52 – Correlation between humidity and d-side faults

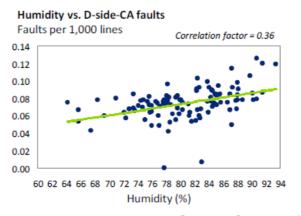

Source: Openreach, fault data analysis

This section aims at comparing that New Zealand and Ireland for these different topics.

8.1.3.2.1 Rainfalls

Higher rainfall can lead to a higher number of faults. It rains 55% more in New Zealand as compared to Ireland:

Figure 53 - Yearly rainfalls in Ireland as compared to NZ

Country Total Rainfalls	
NZ	1732 mm per year
IRL	1118 mm per year

Source:

http://sdwebx.worldbank.org/climateportal/index.cfm?page=country_historical_climate& ThisRegion=Australia&ThisCCode=NZL

http://sdwebx.worldbank.org/climateportal/index.cfm?page=country_historical_climate& ThisRegion=Europe&ThisCCode=IRL

However, there are great regional differences in how much it rains in New Zealand (e.g. very high rainfall in Fiordland). Consequently, the difference in average rainfall in New Zealand vs Ireland probably overstates the difference in the relevant measure (number of faults cause by rain).

8.1.3.2.2 Humidity

More humidity can lead to a higher number of faults. Humidity rates are similar in Ireland and in New Zealand:

Figure 54 – Humidity % in Ireland as compared to NZ

				Ulster		
				Average annual hum	idity	
				Place	9 am	3 pm
				Clones	86	75
				Malin Head	82	79
				Munster		
				Annual relative humio	dity averages	
				Place	9 am	3 pm
				Cork	87	77
				Roches Point	85	79
North Island		South Island		Shannon	84	72
Average annual humidity Annual relative humidity		averages	Valentia	83	77	
Place	%	Place	%	1		
Auckland	82	Alexandra	77	Leinster		
Gisborne	76	Blenheim	76	Average daily humidi	ty	
Hamilton	85	Christchurch	85	Place	9 am	3 pm
Kaitaia	87	Dunedin	76	Birr	85	73
Masterton	84	Hokitika	84	Clondalkin	84	74
Napier	73	Invercargill	83	Dublin	83	73
New Plymouth	83	Kaikoura	73	Kilkenny	84	71
Palmerston North	81	Lake Tekapo	73	Mullingar	86	75
Rotorua	82	Manapouri - Te Anau	85	Wexford	84	78
Taupo	82	Milford Sound	92			
Tauranga	79	Mt Cook, Hermitage	78	Connacht	r.	
Wanganui	79	Nelson	81	Annual relative humic		
Wellington	83	Queenstown	76	Place	9 am	3 pr
_	84	Timaru	82	Belmullet	84	79
Whangarei	84	Westport	84	Claremorris	87	77

Source: http://www.currentresults.com/Weather/New-Zealand/humidity-annual-average.php

http://www.currentresults.com/Weather/Ireland/humidity-annual.php

8.1.3.2.3 Wind

More wind can lead to a higher number of faults on the overhead network. The average wind appears to be lighter in New Zealand (circa 13-14 kph) than in Ireland (between 14 and 25 kph depending on the regions).

Figure 55 - Average wind speed in New Zealand

Table 8. Monthly input data and surface characteristics for mean daily wind speed (km/hr).

Month	Mean	Range	Root GCV	Root MSE
January	13.5	4 - 36	5.26	2.63
February	12.6	4 - 35	5.01	2.50
March	12.3	3 - 33	4.92	2.45
April	11.7	3 - 35	4.60	2.27
May	11.9	3 - 33	4.85	2.41
June	11.4	2 - 36	4.47	2.21
July	11.6	2 - 37	4.77	2.37
August	12.3	3 - 35	4.65	2.31
September	13.7	4 - 34	5.38	2.68
October	14.6	5 - 40	5.69	2.84
November	14.5	5 - 38	5.53	2.75
December	13.8	4 - 34	5.38	2.69

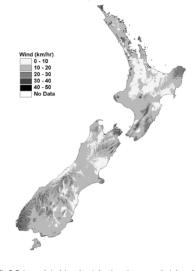


Fig. 7. Estimates, derived from the wind surface, of mean annual wind speed for points on a 1 km grid across New Zealand.

Source:

https://www.landcareresearch.co.nz/__data/assets/pdf_file/0020/21809/Climate_Surfaces for New Zealand revised.pdf

Figure 56 - Average wind speed in Ireland



m/s	km/h
4	14,4
5	18,0
6	21,6
7	25,2

Source: http://www.met.ie/climate/wind.asp

8.1.3.2.4 Conclusion

The comparisons performed on the weather conditions (rainfalls, humidity, rain) show no clear reason for NZ conditions to be more/less favourable than Irish ones.

As a consequence, Irish new network LFI figures appear relevant in the NZ case.

Model Documentation - Public Version

In order to take into accounts NZ specificities, an adjustment has been performed: a cross-multiplication between real and target LFI:

$$Target_LFI_{NZ} = Target_LFI_{IRL} \times \frac{Real_LFI_{NZ}}{Real_LFI_{IRL}}$$

However, this does not account for overhead % difference between the real network and the modelled network (Real network: circa 5% of aerial - Modelled network: 47% of aerial).

TERA observed elsewhere (confidential data) that Aerial LFI = Underground LFI + 4%. A 4% x (4% - 5%) adjustment has then be added to current target LFI to account for increased use of aerial deployments as compared to real network.

Figure 57 - Real/Target LFI adjustment

[]

Source: TERA Consultants, ComReg¹⁹

As a consequence a new network LFI of 9.4% seems reasonable for the NZ case.

8.2 Annex: Opex for a FTTH network

Due to the status of FTTH deployment in New Zealand, no accounting information on fibre opex for a nationwide network is available at this stage. As a consequence, FTTH opex should be assessed based on copper network opex with adjustments if needed.

Even if they are rare because FTTH is only being currently deployed in many countries, FTTH public presentations often report that FTTH opex should be significantly reduced as compared to copper network opex.

Ericsson, one of the biggest providers of telecommunications equipment in the world, emphasises that the absence of active equipment in an FTTH network will lead to a lower level of opex compared to copper/FTTN and HFC networks:

"Compared to copper and hybrid fibre-coax (HFC) networks, OPEX will be considerably lower as P2P fibre provides the best distance-bandwidth solution

(source: http://www.comreg.ie/_fileupload/publications/ComReg14128.pdf)

Eircom real LFI = 16.4%

Model Documentation - Public Version

with fewer number of active elements required in the network. This reduction in active elements in the OSP also results in a lower OPEX. *20

The industry organisation FTTH Council Europe also explains that the level of opex for FTTH will be lower than for copper/FTTN networks and lists the potential saving opportunities:

"An additional motivator for service providers is that FTTH networks have lower operating costs (OPEX) than existing copper or coaxial cable networks. FTTH networks consume less electricity with some reports putting the figure at 20 times less than HFC or VDSL. Network operation and maintenance is simplified using full automation and software control, requiring fewer staff. Maintenance costs are also reduced as there is no active equipment in the field to maintain, and optical components are extremely reliable. Optical fibre is not affected by electromagnetic interference, which is a source of downtime in copper networks."

Finally, in a presentation on next generation networks, the Italian NRA AGCOM compares copper and fibre networks and states that the fibre opex saving as compared to copper is circa 50%:

"NTT / Verizon: 40-60% Opex decrease with FTTH networks w.r.t. copper local loop" 22

Other studies on this topic show savings in the 20%-50% range with median of studies being around 40%.


Ref: 2014-20-DB-ML - BU models

²⁰ Ericsson, Point-to-point deep fiber access, 2010

²¹ FTTH Council web site

AGCOM (Italian NRA), Challenges in moving towards the Next Generation of Fixed and Mobile Networks, January 2010

Figure 58 - FTTH opex savings as compared to Copper

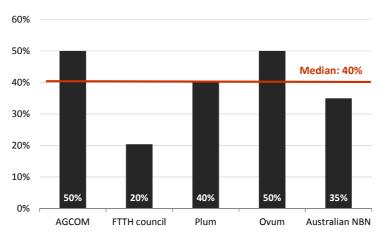

Source: FTTH studies²³

As a consequence, the level of opex per line in the FTTH network should be considered as 40% less than the opex per line in the copper network.

These studies are not very clear on the scope of costs considered and whether they compare a fibre network with an old copper or a new copper network but is appears more reasonable to assume that the comparison is performed against existing old copper networks.

As a consequence, the fibre adjustment factor has been applied directly to Chorus "real network" OPEX (not after the adjustment for a new copper network).

AGCOM (Italian NRA), Challenges in moving towards the Next Generation of Fixed and Mobile Networks, January 2010

FTTH Council Americas, FTTH Progress In North America, April 2013

Plum, A framework for evaluating the value of Next Generation Broadband, June 2008 (30-50% assumption)

Ovum, Comparative Costs for Fibre to the Node and Fibre to the Home Rollouts in Australia, August 2007 (40-60% assumption)

Australian NBN Co, http://savethenbn.com/economic.php

8.3 Annex: Glossary of the network access

Table 48 - Glossary

Acronym	Definition
Geospatial data	Geospatial features of the sections (lengths, locations of buildings) and the shortest paths from the MDF to every section
ЕТР	External termination point: the equipment outside the building, to which the customer premises are linked
DP	Distribution point, either CCT in the copper network, or FAT in the fibre network
ССТ	Copper cable terminal: distribution point in the copper network
FAT	Fibre access terminal: distribution point in the fibre network
Lead-In (copper)	Network level between the ETP and the CCT
Distribution (copper)	Network level between the CCT and the street cabinet
Feeder (copper)	Network level between the street cabinet and the MDF
Lead-In (fibre)	Network level between the ETP and the FAT
Distribution (fibre)	Network level between the FAT and the ODF
SC	Street cabinet: equipment between the feeder and distribution levels in the copper network
Passive street cabinet	Street cabinet that contains no active equipment
Active street cabinet	Street cabinet with active equipment (DSLAM). Linked to an ODF through fibre, and belonging to the core network (Core DSLAM)
MDF	Main distribution frame: first node of the local access network (copper)
ODF	Optical distribution frame: fist node of the local access network (fibre)
Section	Segment between two crossroads. As a consequence, a street can be composed of several sections
Building	Building, containing one or multiple dwellings
Dwelling	Smallest unit of the network (habitation, shop), that requires a line
Major side	Side of the section hosting the majority of buildings of the section
Minor side	Opposite side of the section
FWA	Fix wireless access: network service using wireless links for

Model Documentation – Public Version

Acronym	Definition	
	remote locations	
Core DSLAM	SLU backhaul (SLUBH): network level between the ODF and the DSLAM of the active street cabinets	
Core Exchange	Core network level, from the Exchange (ODF, MDF), to the first data switch (FDS)	
Core EAS	Core network level, between the data switches (EAS)	
Rear area	The rear area of a section x is the set of sections y for which the links to the street cabinet go through the section x	
Distribution demand	The distribution demand of a section is the number of copper pairs/fibres needed to serve the lines that go through the section, i.e. the lines corresponding to the dwellings of the section plus the lines corresponding to the dwellings of the rear area of the section	
Feeder demand	The feeder demand of a section is the number of copper pairs needed to serve the street cabinets that are on the section or in the rear area of the section, i.e. which are linked to the MDF through the section	
Cross-section surface of cable	The cross-section surface of cable is the surface of the external cross-section of the cable, i.e.: $\frac{\pi}{4}d^2$	
	4 "	
	Where d is the external diameter of the cable.	
Cross-section surface of duct	Similarly with the cross-section surface of cable, the cross-section surface of duct (or subduct) is the surface of the external cross-section of the duct	

Source: TERA Consultants